## EVAPORATOR TEMPERATURE SENSOR [FULL-AUTO AIR CONDITIONER]


id0740a1004400

### Purpose, Function

- The evaporator temperature sensor converts the airflow temperature passing through the detected evaporator to an electrical signal.

### Construction


- A thermistor-type evaporator temperature sensor has been adopted.
- A fin-thermo-type sensor has been adopted to the sensor area of the evaporator temperature sensor which inserts between the evaporator fins.
- The evaporator temperature sensor is located on the A/C unit.

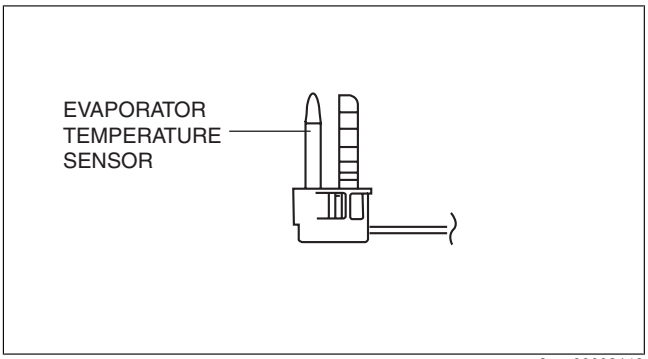


am2zzn00002146

### Operation

- The thermistor changes the resistance according to the surrounding temperature.
- The resistance decreases if the temperature increases, and increases if the temperature decreases.

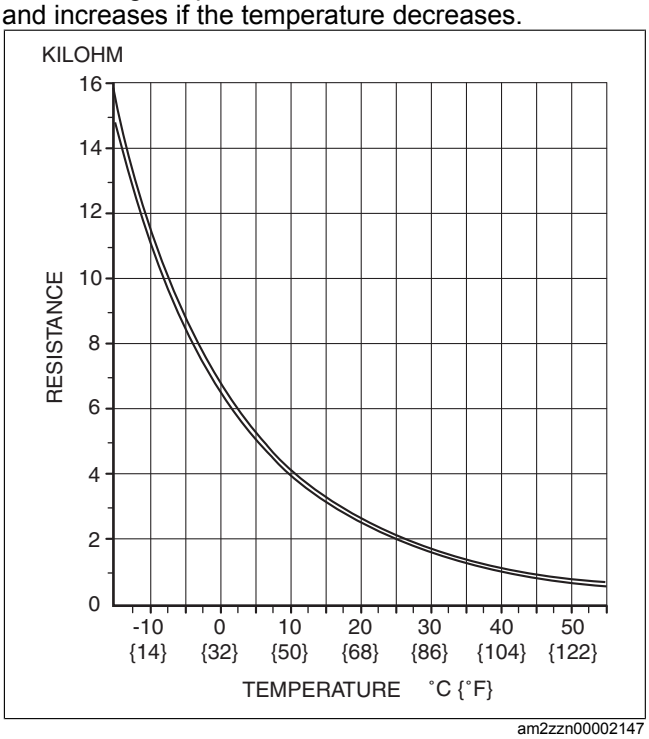


am2zzn00002147

### Fail-safe

- Not applicable