
AIR INTAKE ACTUATOR [FULL-AUTO AIR CONDITIONER]

id0740a1004800

Purpose
- The air intake actuator opens/closes the air intake door in the blower unit to switch the air intake.

Function
- The air intake actuator opens/closes the air intake door to the FRESH or RECIRCULATE position by the motor drive.

Construction
- A mechanical lock-type air intake actuator has been adopted.
- The air intake actuator is located in the blower unit.
- The operation range of the air intake actuator is as indicated in the diagram.

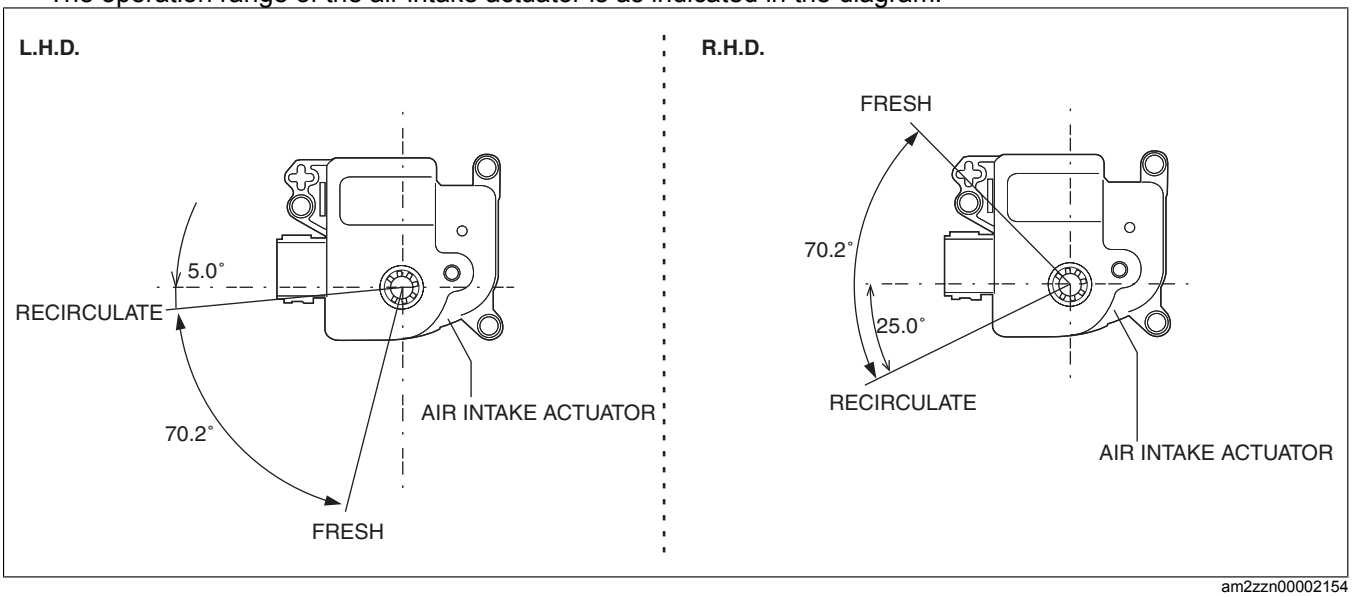

am2zzn00002154

Operation
- For the air intake actuator operation, refer to the FULL-AUTO AIR CONDITIONING SYSTEM [FULL-AUTO AIR CONDITIONER]. (See FULL-AUTO AIR CONDITIONER SYSTEM [FULL-AUTO AIR CONDITIONER].)

Fail-safe
- Not applicable