CABIN TEMPERATURE SENSOR [FULL-AUTO AIR CONDITIONER]


id0740a1005800

Purpose, Function

- The cabin temperature sensor converts the detected cabin temperature to an electric signal.

Construction

- A thermistor-type cabin temperature sensor has been adopted.

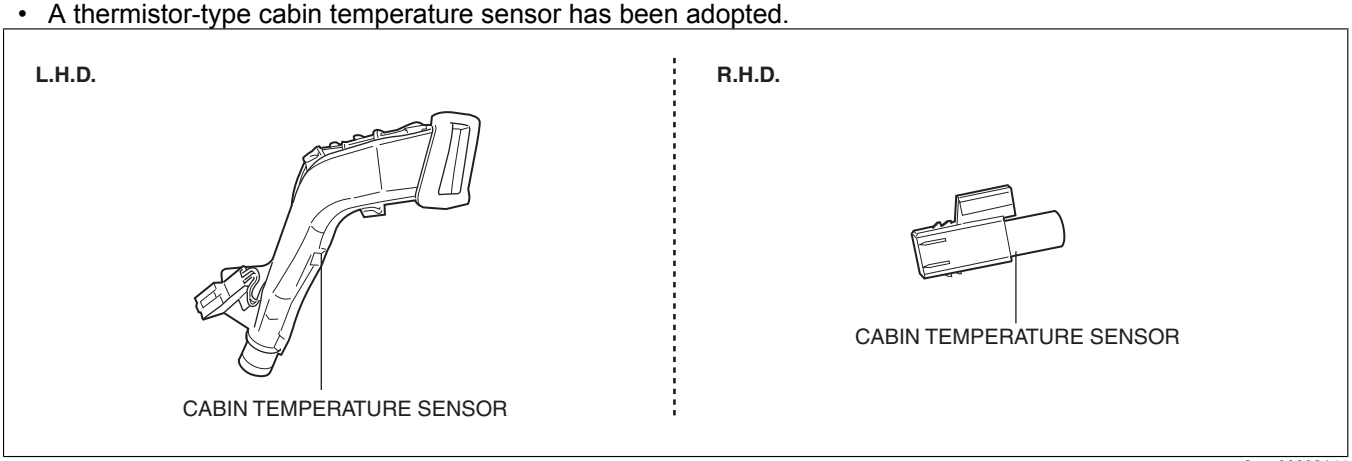


am2zzn00002144

- The cabin temperature sensor is located on the lower panel (driver's side).

Operation

- The thermistor changes the resistance according to the surrounding temperature.
- The resistance decreases if the temperature increases, and increases if the temperature decreases.

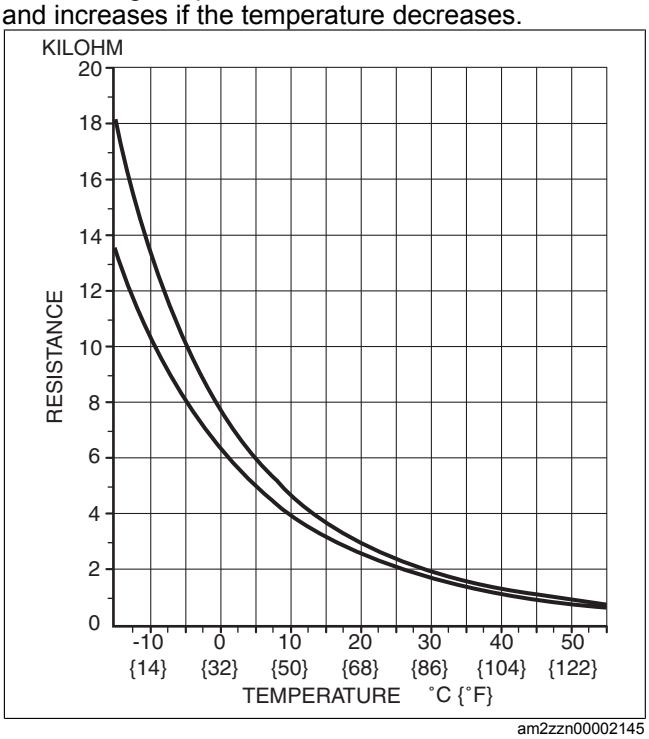

am2zzn00002145

Fail-safe

- Not applicable