
AIR INTAKE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER]

id0740a1801400

Installation position

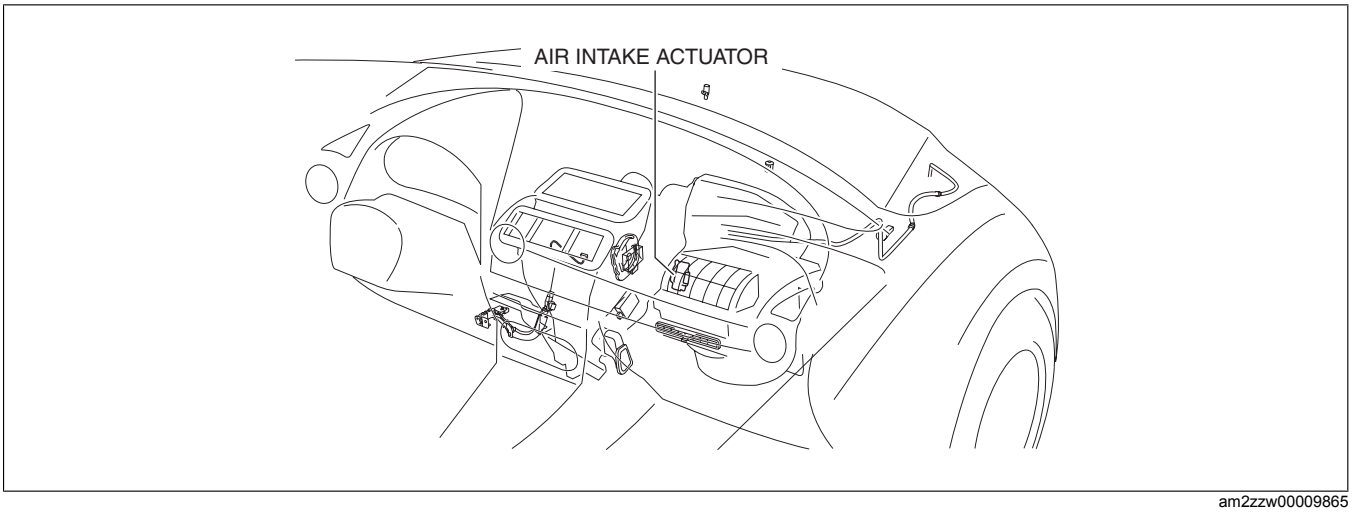


am2zzw00009865

Caution


- **If a non-specified grease is used, it may result in abnormal noise or an operation malfunction of the links. Use only a grease coating agent on each link and do not wipe off or add additional grease.**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Disconnect the air intake actuator connector.

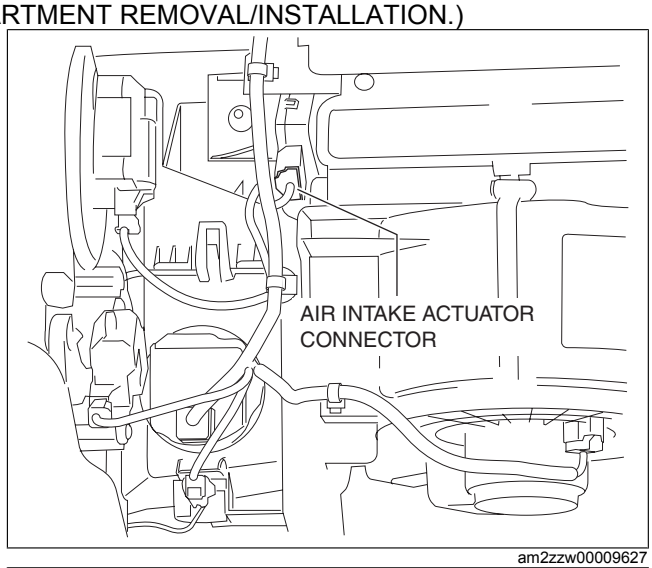

am2zzw00009627

4. Remove the screws.
5. Remove the air intake actuator.
6. Install in the reverse order of removal.

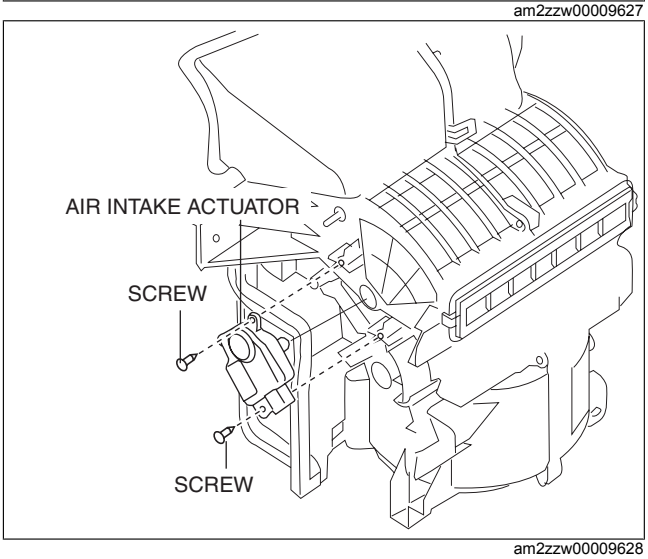

am2zzw00009628