AIR INTAKE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER]


id0740a1801500

L.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Remove the air intake actuator. (See AIR INTAKE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)
4. Apply battery positive voltage and connect the ground to the air intake actuator terminals as indicated in the table below and verify the operation condition.

B+ Terminal	Ground Terminal	Operation
A	F	FRESH → RECIRCULATE

B+ Terminal	Ground Terminal	Operation
F	A	RECIRCULATE → FRESH

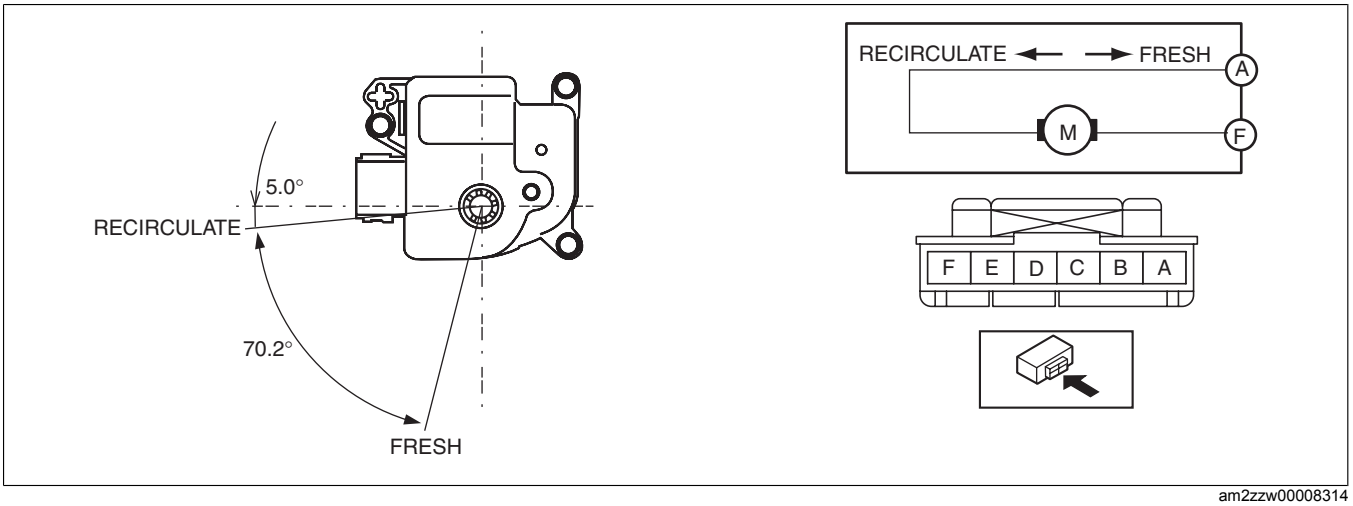

am2zzw00008314


- If not as indicated in the table, replace the air intake actuator. (See AIR INTAKE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)

R.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Remove the air intake actuator. (See AIR INTAKE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)
4. Apply battery positive voltage and connect the ground to the air intake actuator terminals as indicated in the table below and verify the operation condition.

B+ Terminal	Ground Terminal	Operation
A	F	RECIRCULATE → FRESH

B+ Terminal	Ground Terminal	Operation
F	A	FRESH → RECIRCULATE

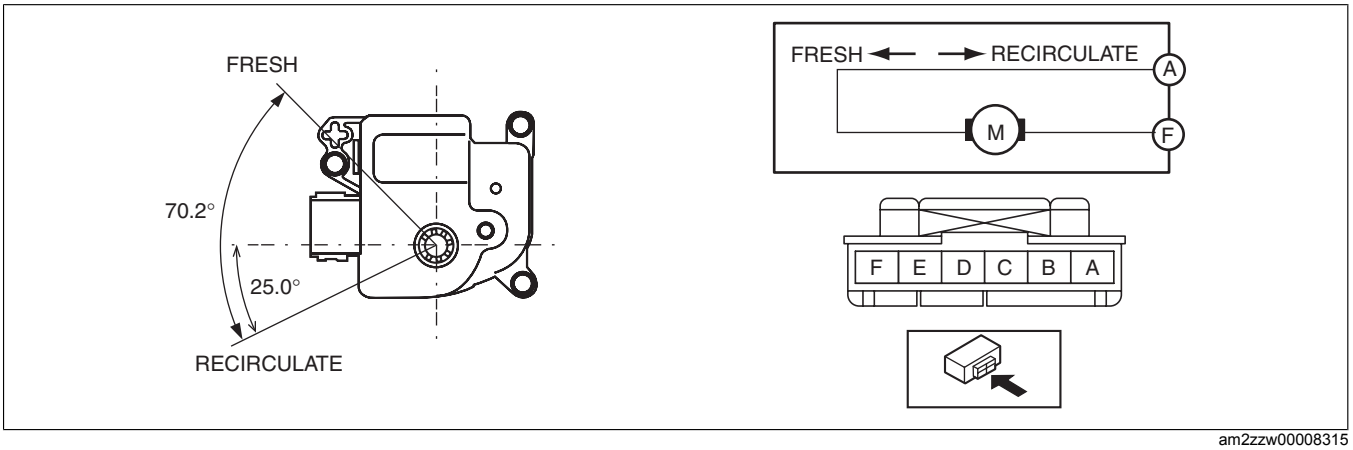

am2zzw00008315

- If not as indicated in the table, replace the air intake actuator. (See AIR INTAKE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)