
AIRFLOW MODE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER]

id0740a1801600

Caution

- **If a non-specified grease is used, it may result in abnormal noise or an operation malfunction of the links. Use only a grease coating agent on each link and do not wipe off or add additional grease.**


Installation position

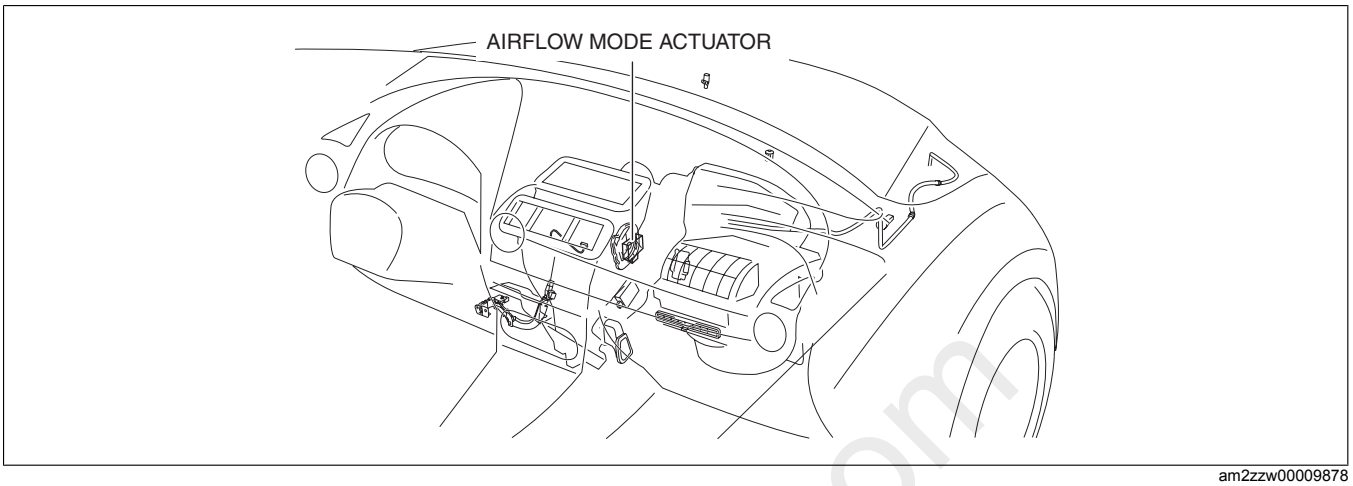

am2zzw00009878

L.H.D.


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Disconnect the airflow mode actuator connector.

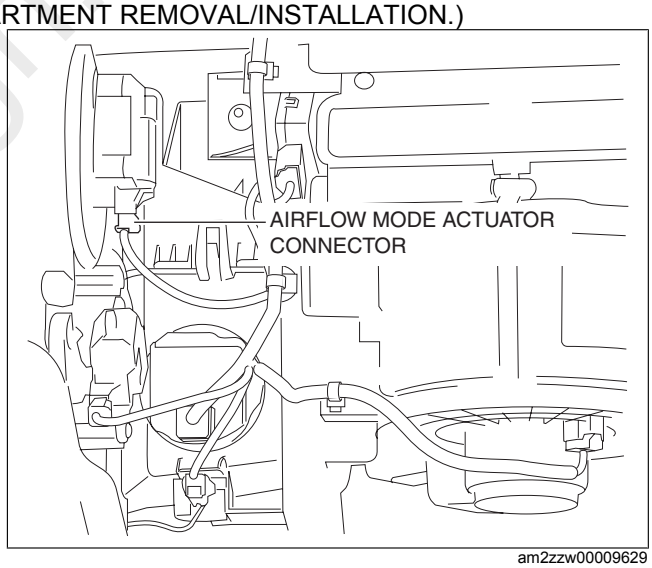

am2zzw00009629


cardiagn.com

4. Remove the screws.
5. Remove the airflow mode actuator.

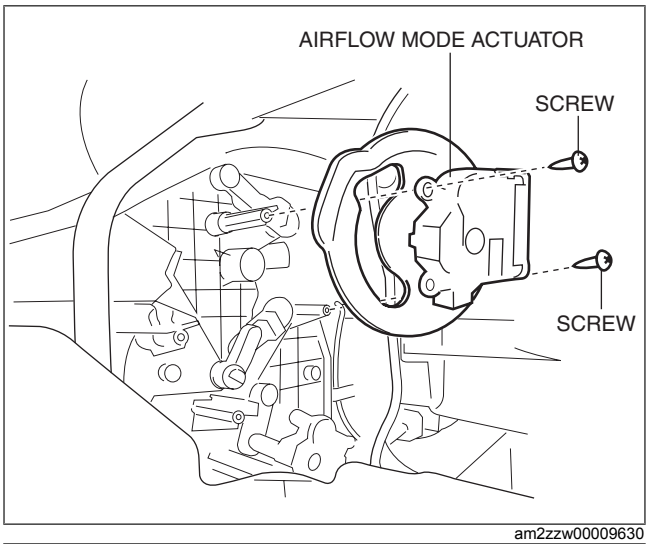


am2zzw00009630

6. Remove the airflow mode main link.

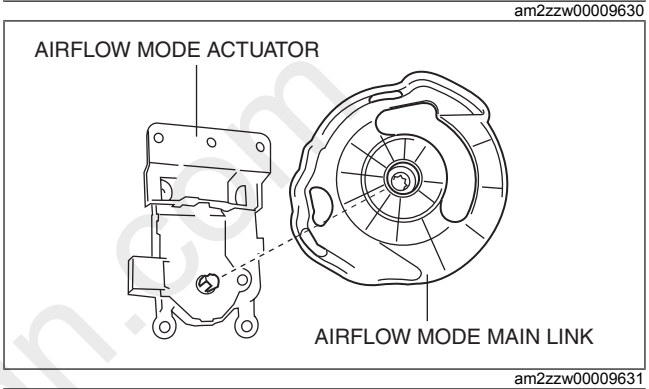

am2zzw00009631


7. Remove the bracket.
8. Install in the reverse order of removal. (See Airflow mode main link installation note.)

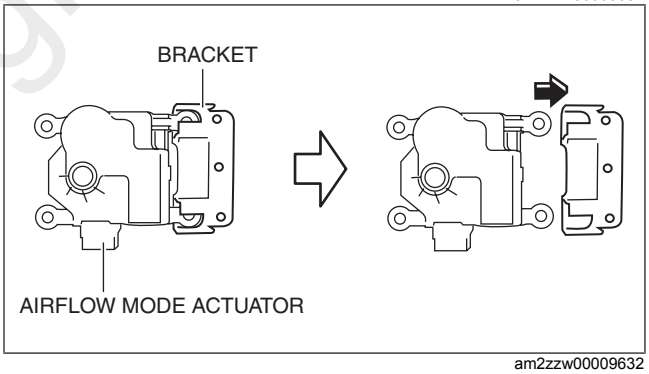

am2zzw00009632

Airflow mode main link installation note

1. Align the airflow mode main link installation hole with the shape of the airflow mode actuator shaft.

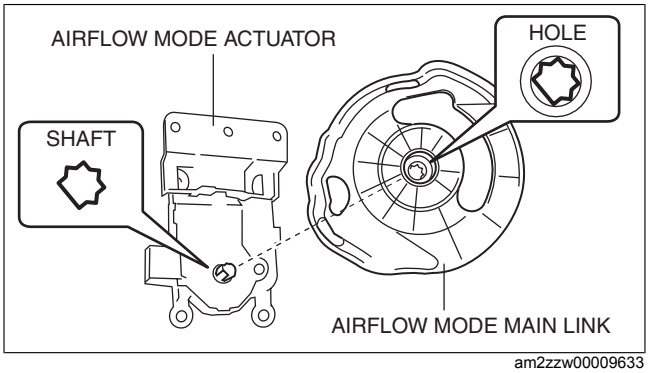


am2zzw00009633

R.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)


cardiagn.com

3. Disconnect the airflow mode actuator connector.

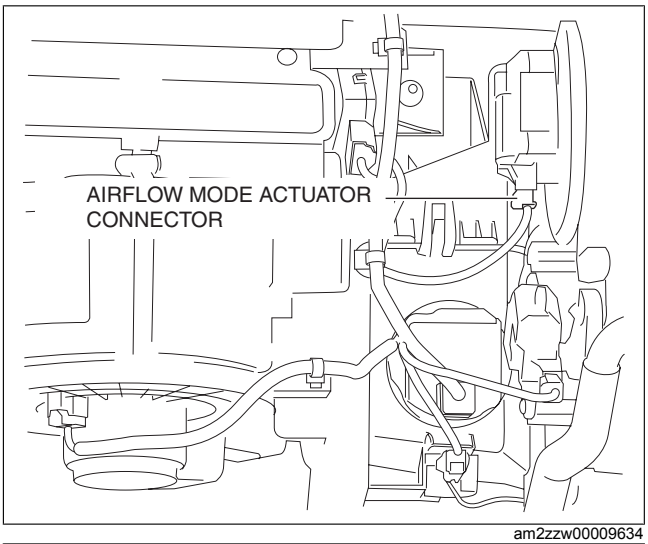


am2zzw00009634

4. Remove the screws.
5. Remove the airflow mode actuator.

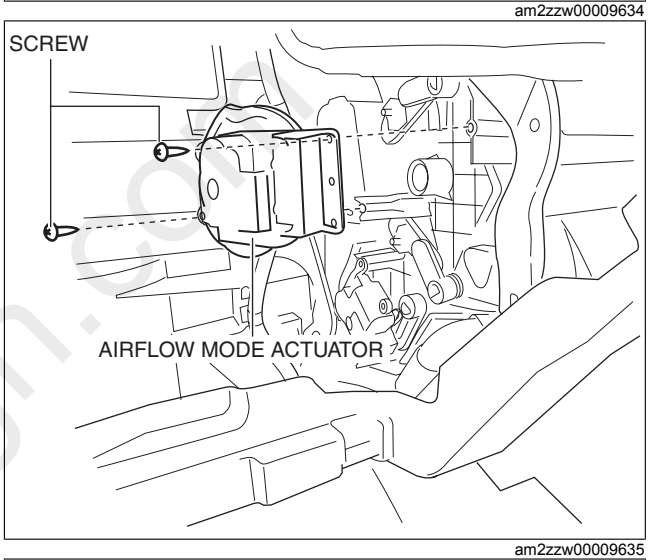


am2zzw00009635

6. Remove the airflow mode main link.

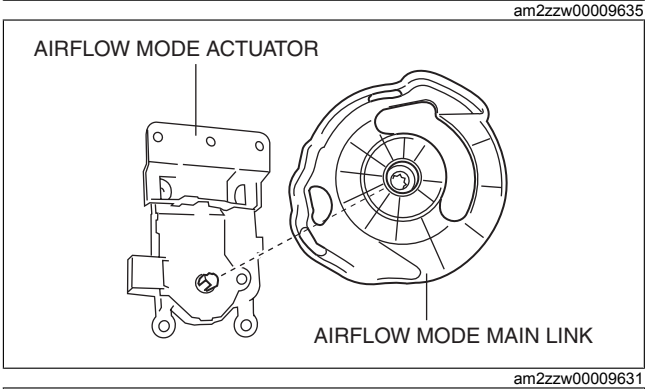

am2zzw00009631

7. Remove the bracket.
8. Install in the reverse order of removal. (See Airflow mode main link installation note.)

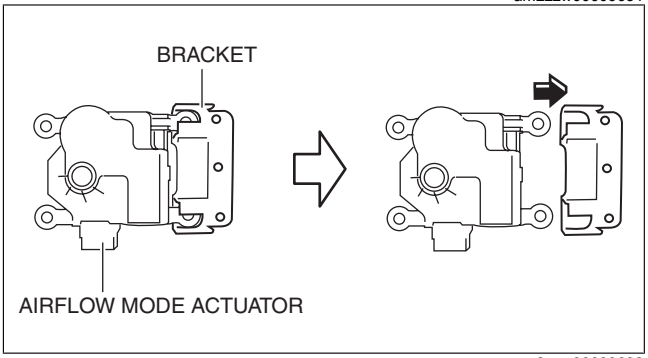


am2zzw00009632

cardiagn.com

Airflow mode main link installation note

1. Align the airflow mode main link installation hole with the shape of the airflow mode actuator shaft.

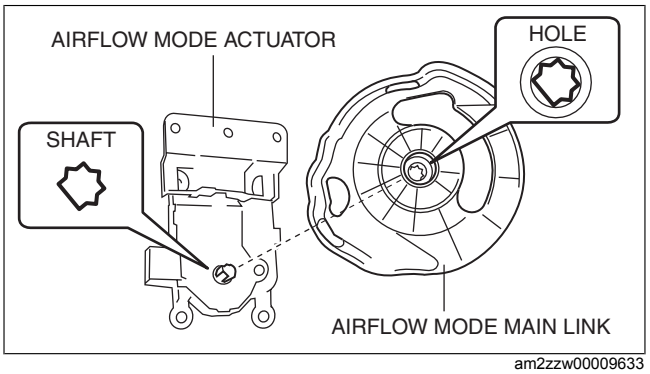

am2zzw00009633

cardiagn.com