
CLIMATE CONTROL UNIT INSPECTION [FULL-AUTO AIR CONDITIONER]

id0740a1802200

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Driver-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Driver-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/ INSTALLATION.)
   (4) Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (5) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
   (6) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
   (7) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (8) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (9) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].)(See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (10) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.)
   (11) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
   (12) Console side panel (See CONSOLE SIDE PANEL REMOVAL/INSTALLATION.)
   (13) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
   (14) CD player (with CD player) (See CD PLAYER REMOVAL.)(See CD PLAYER INSTALLATION.)
   (15) DVD/CD player (with DVD/CD player) (See DVD/CD PLAYER REMOVAL.)(See DVD/CD PLAYER INSTALLATION.)
   (16) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
   (17) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
   (18) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
   (19) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (20) Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
   (21) Center lower panel (See CENTER LOWER PANEL REMOVAL/INSTALLATION.)
3. Remove the climate control unit with the connector connected. (See CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].)
4. Connect the negative battery cable.
5. Switch the ignition ON (engine off or on).
6. Connect the negative (-) lead of the tester to body ground.
7. Insert the positive (+) lead of the tester into each climate control unit terminal and measure the voltage according to the terminal voltage table.
   - If there is any malfunction, inspect the parts under “Inspection item (s)”.
     — If the parts under “Inspection item (s)” are found to be normal (except for terminal Q), replace the climate control unit. (See CLIMATE CONTROL UNIT REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)
     — For terminal Q, first try replacing the blower fan controller. If there is still any malfunction, replace the climate control unit. (See CLIMATE CONTROL UNIT REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)

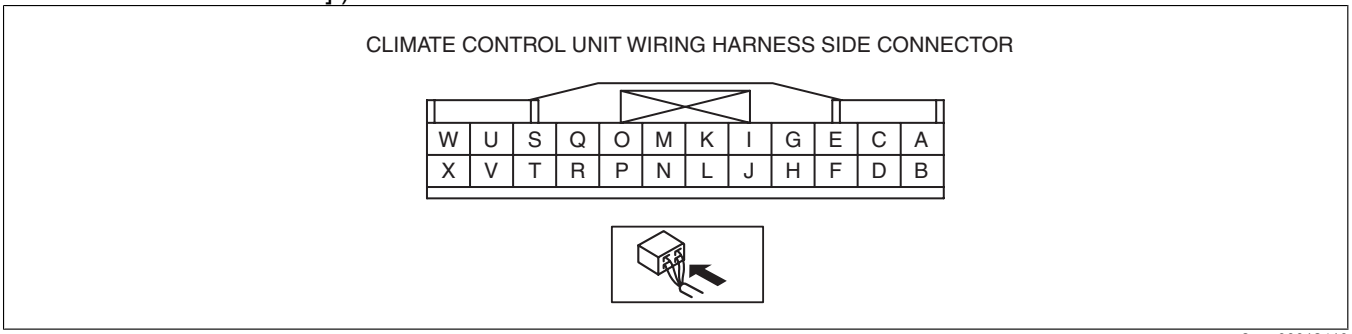

am2zzw00012419

Terminal voltage table (reference)


Terminal	Signal name	Connected to	Measurement condition	Voltage (V)	Inspection item (s)
A	—	—	—	—	—
B	MS_CAN_L	CAN related module	Because this terminal is for communication, integrity determination by terminal voltage is not possible.		• Related wiring harness
C	GND	Body ground	Under any condition	1.0 or less	• Related wiring harness
D	MS_CAN_H	CAN related module	Because this terminal is for communication, integrity determination by terminal voltage is not possible.		• Related wiring harness

Terminal	Signal name	Connected to	Measurement condition	Voltage (V)	Inspection item (s)
E	Sensor GND	• Air mix actuator • Airflow mode actuator • Cabin temperature sensor • Evaporator temperature sensor	Under any condition	1.0 or less	• Related wiring harness • Climate control unit: terminal voltage (H)
F	Cabin temperature sensor input	Cabin temperature sensor	Compared with temperature detected by cabin temperature sensor	Refer to graph 1	• Related wiring harness • Cabin temperature sensor • Climate control unit: terminal voltage (E)
G	Potentiometer input	Passenger-side air mix actuator	Set temperature at MAX HOT	4.0 or more	• Related wiring harness • Passenger-side air mix actuator • Climate control unit: terminal voltage (H)
			Set temperature at MAX COLD	1.0 or less	
H	+5V	• Air mix actuator • Airflow mode actuator • Solar radiation sensor	Under any condition	5	• Related wiring harness • Air mix actuator • Airflow mode actuator • Solar radiation sensor • Climate control unit: terminal voltage (E)
I	Potentiometer input	Airflow mode actuator	VENT	4.0 or more	• Related wiring harness • Airflow mode actuator • Climate control unit: terminal voltage (H)
			BI-LEVEL	3.2	
			HEAT	2.4	
			HEAT/DEF	1.6	
			DEFROSTER	0.8 or less	
J	Evaporator temperature sensor input	Evaporator temperature sensor	Compared with temperature detected by evaporator temperature sensor	Refer to graph 2	• Related wiring harness • Evaporator temperature sensor • Climate control unit: terminal voltage (E)
K	Solar radiation sensor input	Solar radiation sensor	Sunlight shined directly on solar radiation sensor	Voltage value is output	• Related wiring harness • Climate control unit: terminal voltage (H) • Solar radiation sensor
			Blocking light to solar radiation sensor	1.0 or less	
L	B+	INTERIOR 15 A fuse	Under any condition	B+	• Related wiring harness • INTERIOR 15 A fuse
M	—	—	—	—	—
N	IG1	C/U IG1 15 A fuse	Switch the ignition ON (engine off or on)	B+	• Related wiring harness • C/U IG1 15 A fuse
			Switch the ignition off	1.0 or less	
O	—	—	—	—	—
P	—	—	—	—	—
Q	Blower fan speed control	Blower fan controller	(See Blower Fan Speed Control Signal)		• Related wiring harness • Blower fan controller
R	—	—	—	—	—
S	Motor operation (RECIRCULATE)	Air intake actuator	Moving towards RECIRCULATE	B+	• Related wiring harness • Air intake actuator
			Moving towards FRESH	1.0 or less	
T	Motor operation (VENT)	Airflow mode actuator	Moving towards VENT	B+	• Related wiring harness • Airflow mode actuator
			Moving towards DEFROSTER	1.0 or less	
U	Motor operation (FRESH)	Air intake actuator	Moving towards RECIRCULATE	1.0 or less	• Related wiring harness • Air intake actuator
			Moving towards FRESH	B+	


cardiagn.com

Terminal	Signal name	Connected to	Measurement condition	Voltage (V)	Inspection item (s)
V	Motor operation (DEFROSTER)	Airflow mode actuator	Moving towards DEFROSTER	B+	• Related wiring harness • Airflow mode actuator
			Moving towards VENT	1.0 or less	
W	Motor operation (COLD)	Air mix actuator	Moving towards HOT	1.0 or less	• Related wiring harness • Air mix actuator
			Moving towards COLD	B+	
X	Motor operation (HOT)	Air mix actuator	Moving towards HOT	B+	• Related wiring harness • Air mix actuator
			Moving towards COLD	1.0 or less	

GRAPH 1 (CABIN TEMPERATURE SENSOR)

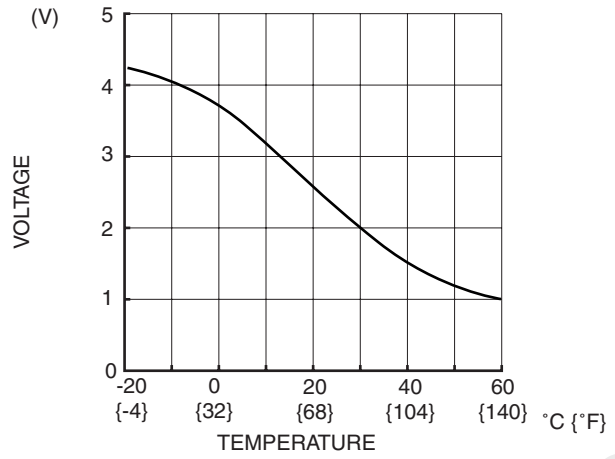


GRAPH 2 (EVAPORATOR TEMPERATURE SENSOR)

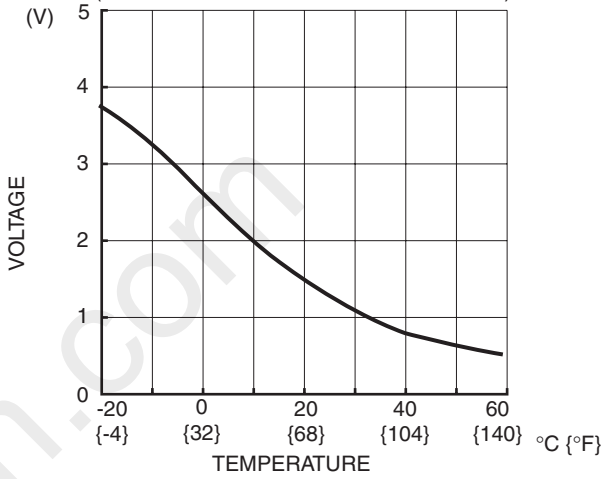

Blower Fan Speed Control Signal
Fan stopped
Climate control unit terminal
- Q(+)—body ground(-)

Oscilloscope setting
- 5 V/DIV (Y), 1 ms/DIV (X), DC range

Vehicle condition
- Switch the ignition ON (engine off or on)

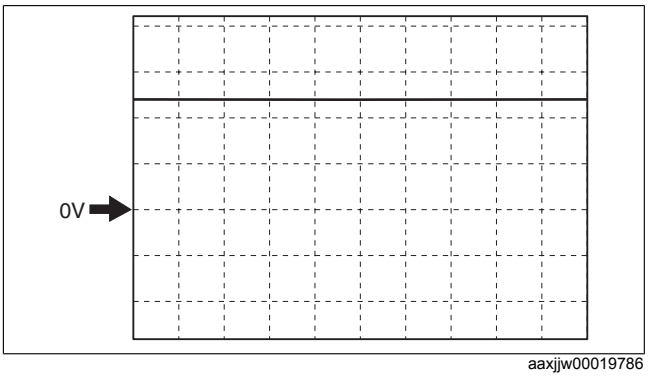


aaxjjw00019786

Manual 1st
Climate control unit terminal
- Q(+)—body ground(-)

Oscilloscope setting
- 5 V/DIV (Y), 1 ms/DIV (X), DC range

Vehicle condition
- Switch the ignition ON (engine off or on)
- Airflow mode: VENT
- Air intake mode: RECIRCULATE

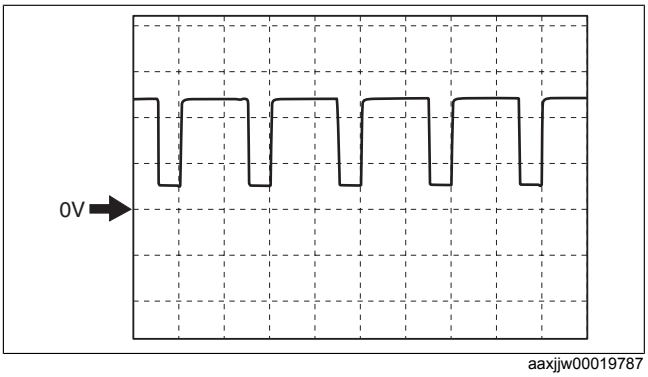


aaxjjw00019787

cardiagn.com

Manual 3rd
Climate control unit terminal
- Q(+)—body ground(-)

Oscilloscope setting
- 5 V/DIV (Y), 1 ms/DIV (X), DC range

Vehicle condition
- Switch the ignition ON (engine off or on)
- Airflow mode: VENT
- Air intake mode: RECIRCULATE

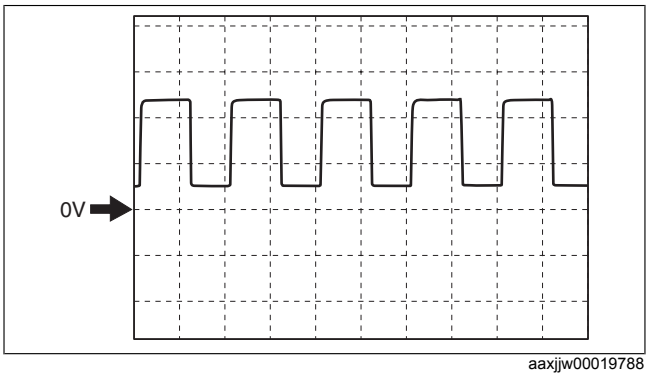


aaxjjw00019788

Manual 7th
Climate control unit terminal
- Q(+)—body ground(-)

Oscilloscope setting
- 5 V/DIV (Y), 1 ms/DIV (X), DC range

Vehicle condition
- Switch the ignition ON (engine off or on)
- Airflow mode: VENT
- Air intake mode: RECIRCULATE

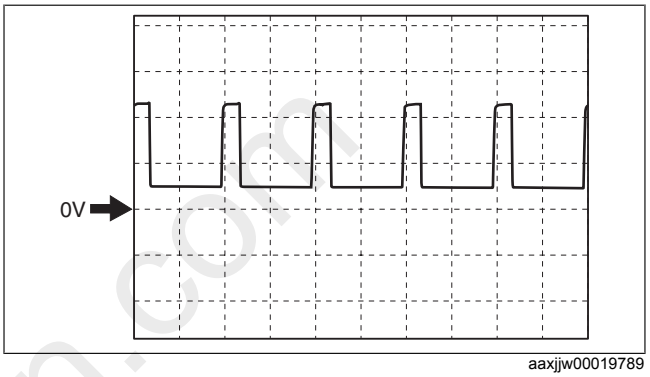

aaxjjw00019789

cardiagn.com