
SOLAR RADIATION SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER]

id0740a1802900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Remove the solar radiation sensor. (See SOLAR RADIATION SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)
4. Shine a fluorescent light or expose the solar radiation sensor to natural sunlight.
5. Connect the positive (+) lead to terminals A and negative (-) lead to terminal B of the solar radiation sensor, and verify that the voltage value is output.
   - If the voltage is **0 V**, replace the solar radiation sensor. (See SOLAR RADIATION SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)

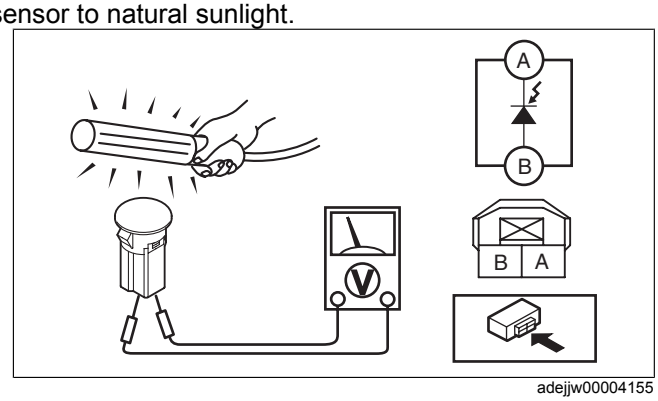

adejjw00004155