
AMBIENT TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER]

id0740a1803200

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL.)(See FRONT BUMPER INSTALLATION.)
3. Disconnect the connector.
4. Remove the clip and remove the ambient temperature sensor.
5. Install in the reverse order of removal.

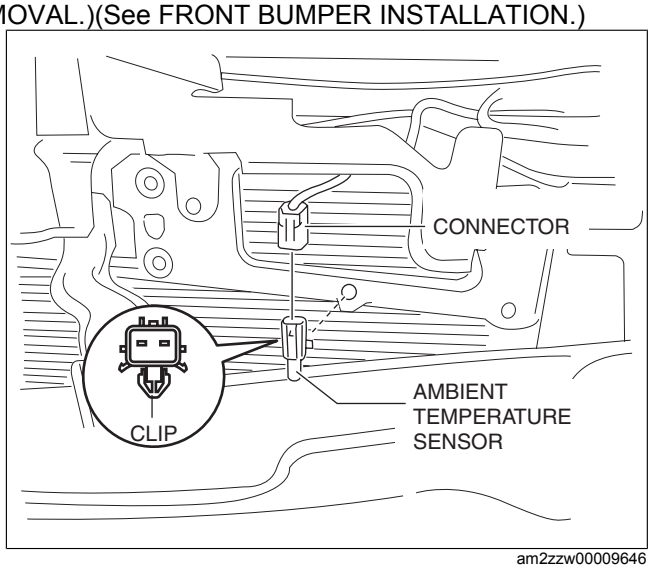

am2zzw00009646