
AMBIENT TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER]


id0740a1803300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL.)(See FRONT BUMPER INSTALLATION.)
3. Remove the ambient temperature sensor. (See AMBIENT TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].)
4. Measure the temperature around the ambient temperature sensor and measure the resistance between the ambient temperature sensor terminals A and B.

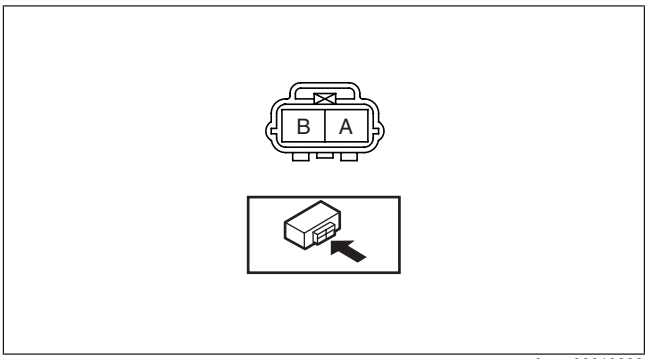

am3uuw00010222

- If the characteristics of the ambient temperature sensor are not as shown in the graph, replace the ambient temperature sensor. (See AMBIENT TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)

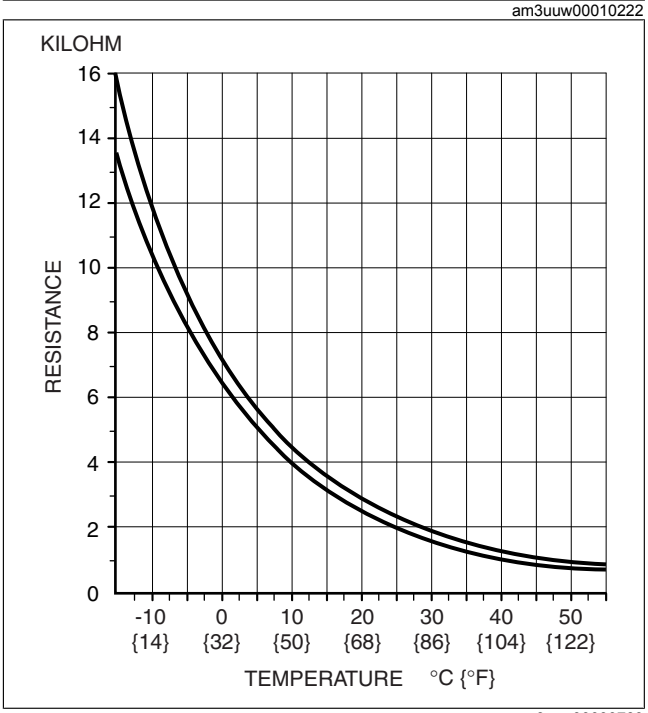

am3zzw00000769