
## HVAC CONTROL SYSTEM LOCATION INDEX [FULL-AUTO AIR CONDITIONER]

id0740a1803600

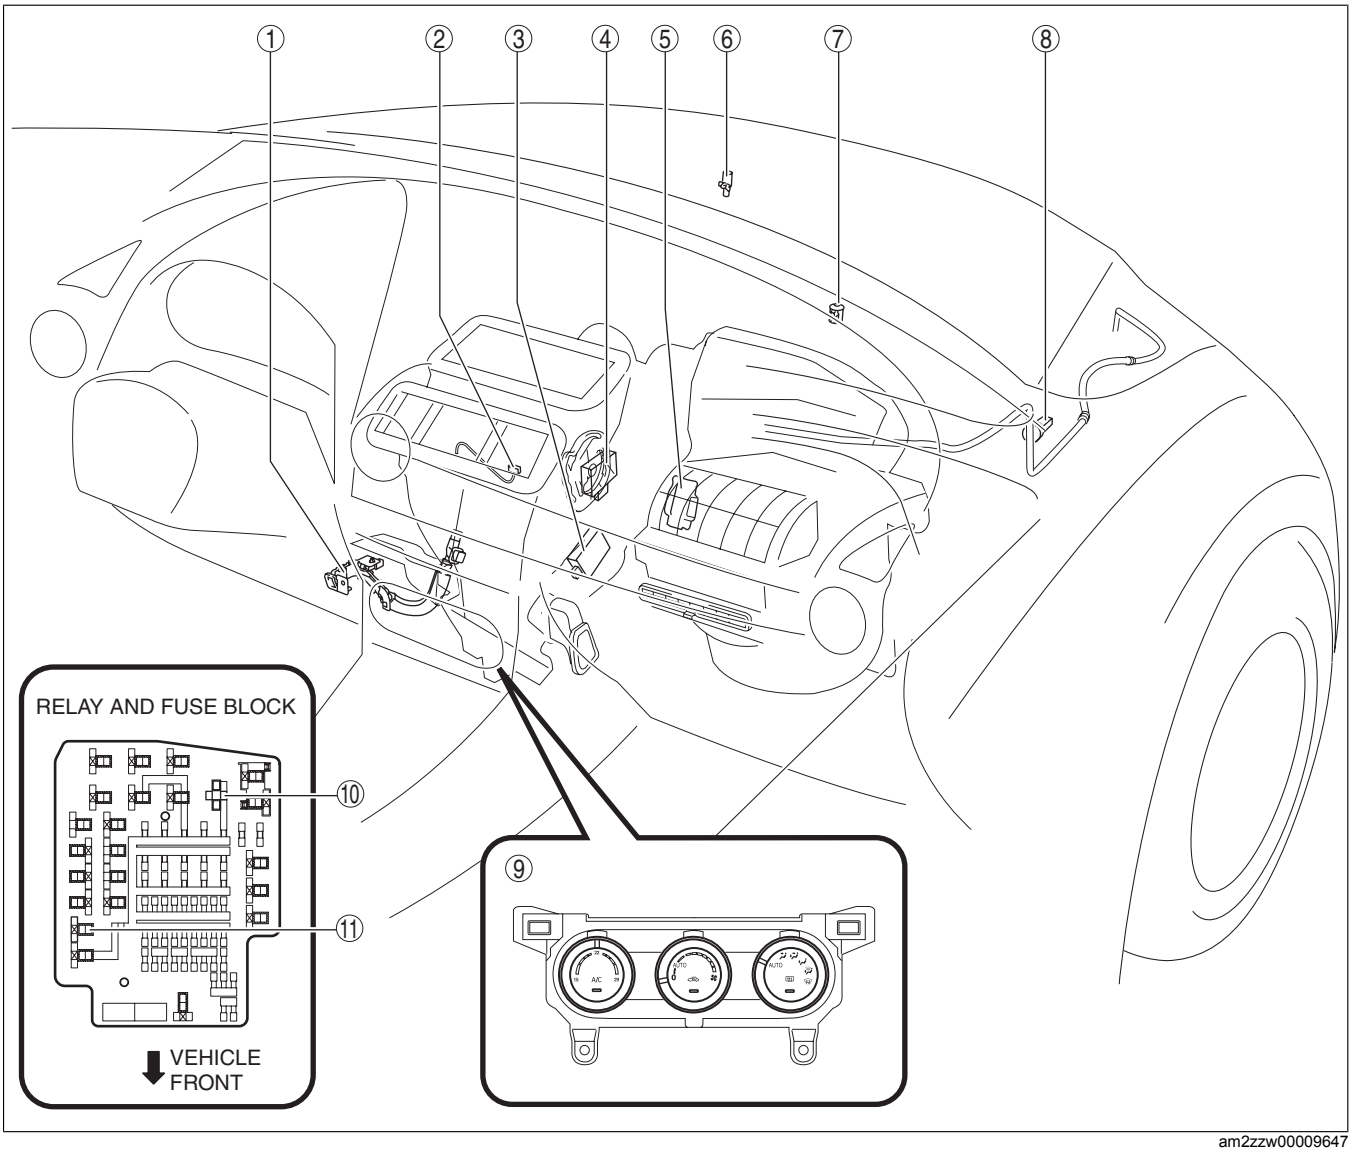


am2zzw00009647

| | |
|---|---|
| 1 | Cabin temperature sensor<br>(See CABIN TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].)<br>(See CABIN TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].) |
| 2 | Evaporator temperature sensor<br>(See EVAPORATOR TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)<br>(See EVAPORATOR TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].) |
| 3 | Air mix actuator<br>(See AIR MIX ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].)<br>(See AIR MIX ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].) |
| 4 | Airflow mode actuator<br>(See AIRFLOW MODE ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].)<br>(See AIRFLOW MODE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].) |

| | |
|---|---|
| 5 | Air intake actuator<br>(See AIR INTAKE ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].)<br>(See AIR INTAKE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].) |
| 6 | Ambient temperature sensor<br>(See AMBIENT TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)<br>(See AMBIENT TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].) |
| 7 | Solar radiation sensor<br>(See SOLAR RADIATION SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].)<br>(See SOLAR RADIATION SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].) |
| 8 | Refrigerant pressure sensor<br>(See REFRIGERANT PRESSURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)<br>(See REFRIGERANT PRESSURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].) |
| 9 | Climate control unit<br>(See CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].)<br>(See CLIMATE CONTROL UNIT INSPECTION [FULL-AUTO AIR CONDITIONER].) |
| 10 | Blower relay<br>(See RELAY LOCATION.)<br>(See RELAY INSPECTION.) |
| 11 | A/C relay<br>(See RELAY LOCATION.)<br>(See RELAY INSPECTION.) |