
CABIN TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER]


id0740a1807700

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Driver-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Driver-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Fuel filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (4) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/ INSTALLATION.)
   (5) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
3. Remove the cabin temperature sensor. (See CABIN TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)
4. Measure the temperature around the cabin temperature sensor and measure the resistance between cabin temperature sensor terminals A and B.

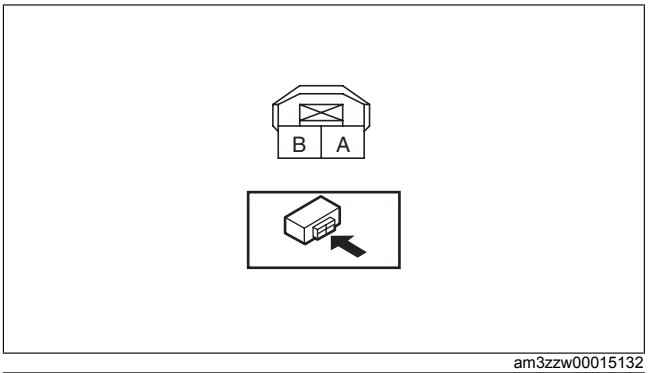

am3zzw00015132

- If the characteristics of the cabin temperature sensor are not as shown in the graph, replace the cabin temperature sensor. (See CABIN TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].)

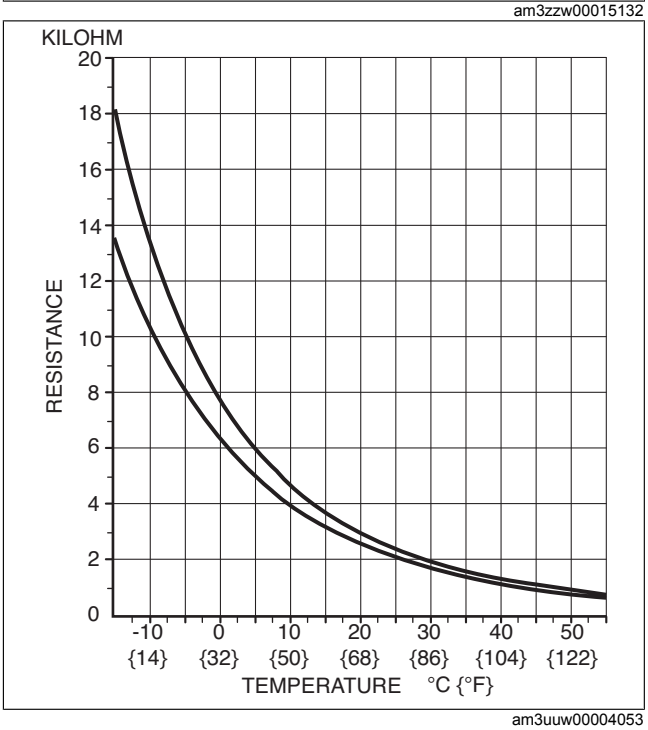

am3uuw00004053