
CABIN TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER]

id0740a1807800


Installation position

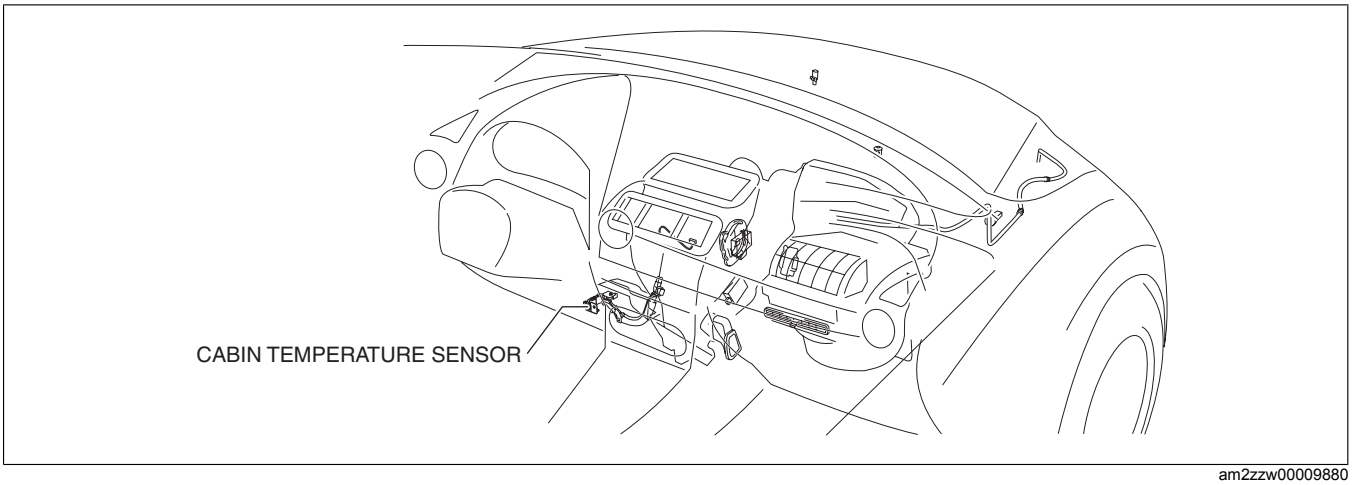

am2zzw00009880


L.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Driver-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Driver-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Fuel filer lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (4) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/ INSTALLATION.)
   (5) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
3. Disconnect the aspirator from the cabin temperature sensor.
4. Disconnect the cabin temperature sensor connector.

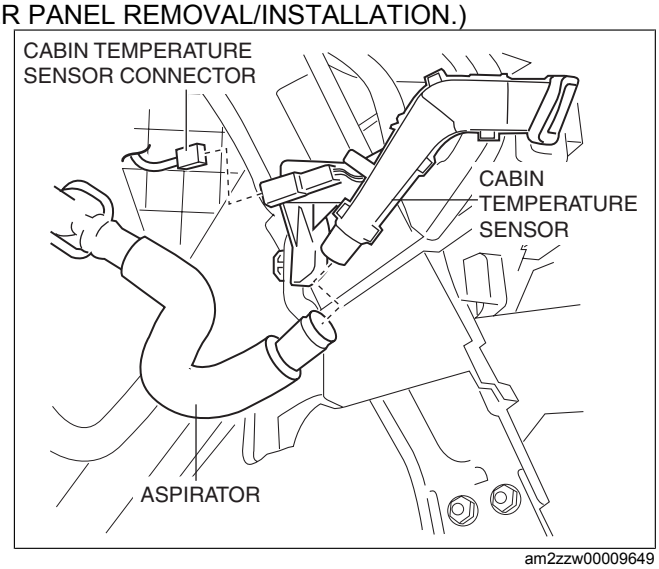


am2zzw00009649

5. Remove the screw.
6. Remove the cabin temperature sensor.

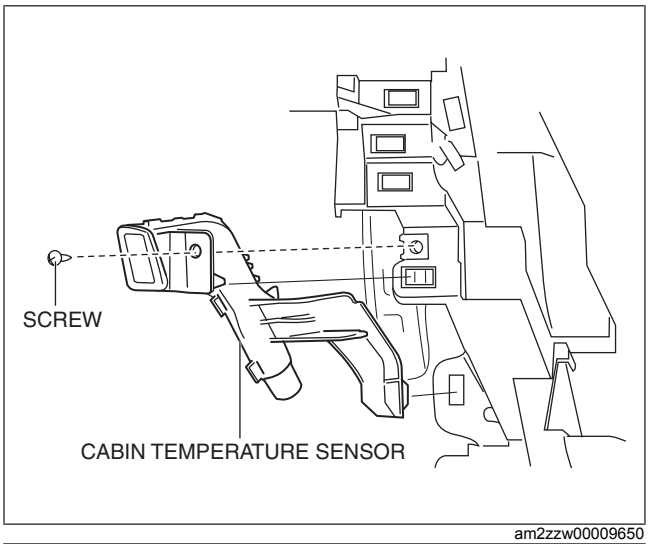

am2zzw00009650

7. Remove the aspirator.
8. Install in the reverse order of removal.

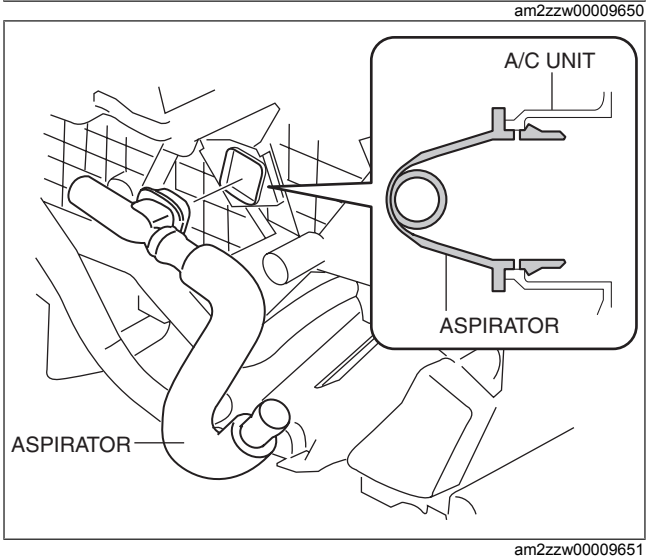


am2zzw00009651

R.H.D.


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Driver-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Driver-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Fuel filer lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (4) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/ INSTALLATION.)
   (5) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)

3. Disconnect the aspirator from the cabin temperature sensor.
4. Disconnect the cabin temperature sensor connector.

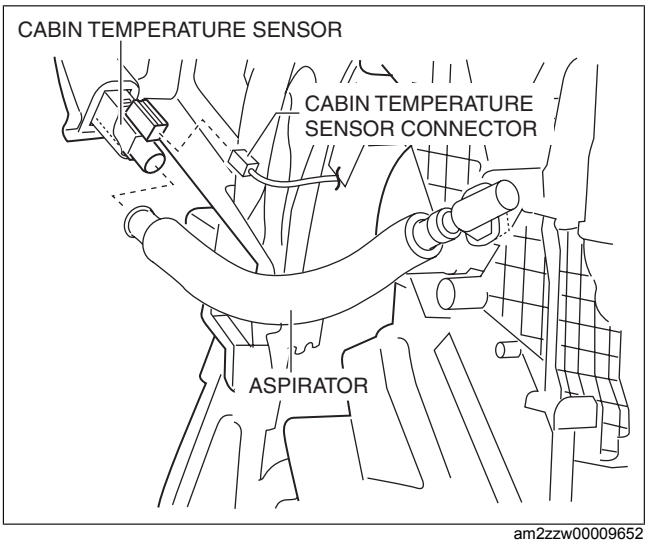

am2zzw00009652


5. Lift up the location shown in the figure in the direction of the arrow and remove the tab using a flathead screwdriver wrapped in protective tape.

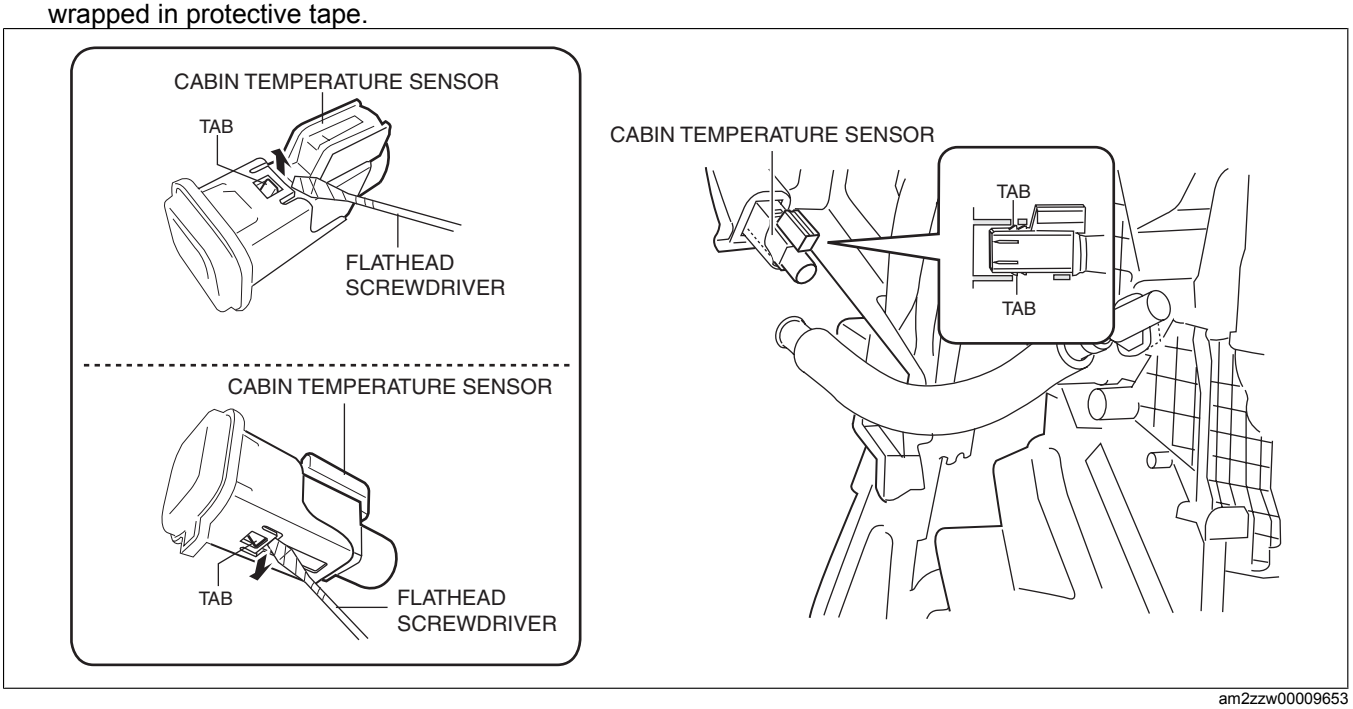

am2zzw00009653

6. Remove the cabin temperature sensor.

7. Remove the aspirator.
8. Install in the reverse order of removal.

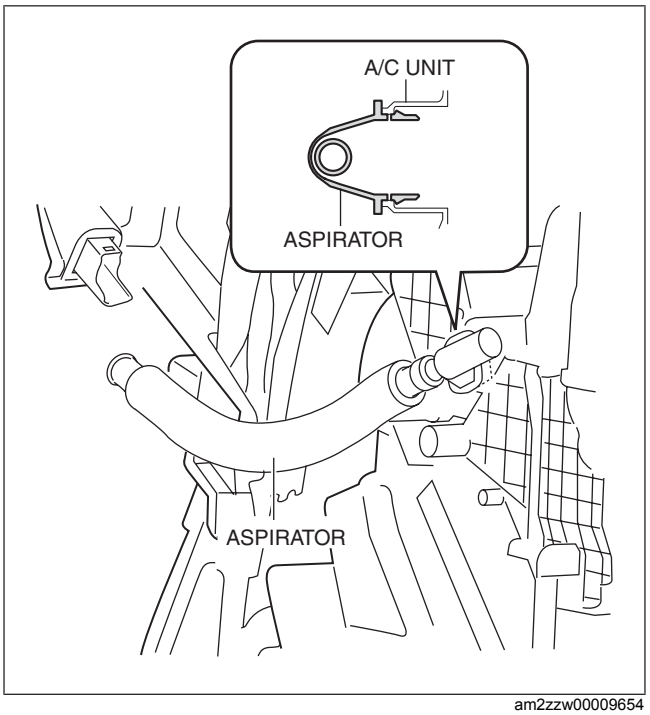

am2zzw00009654