EVAPORATOR TEMPERATURE SENSOR [MANUAL AIR CONDITIONER]


id0740a2005300

Purpose, Function

- The evaporator temperature sensor converts the airflow temperature passing through the detected evaporator to an electrical signal.

Construction


- A thermistor-type evaporator temperature sensor has been adopted.
- A fin-thermo-type sensor has been adopted to the sensor area of the evaporator temperature sensor which inserts between the evaporator fins.
- The evaporator temperature sensor is located on the A/C unit.

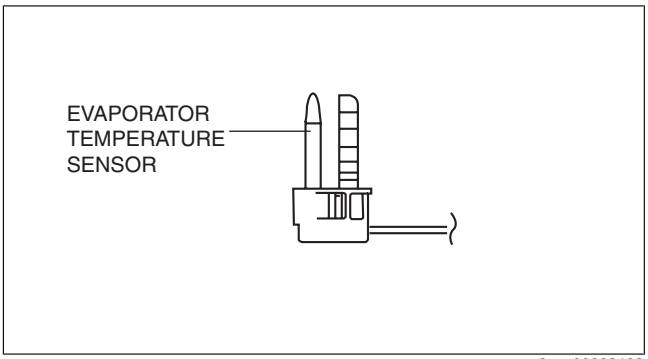

am2zzn00002162

Operation

- The thermistor changes the resistance according to the surrounding temperature.
- The resistance decreases if the temperature increases, and increases if the temperature decreases.

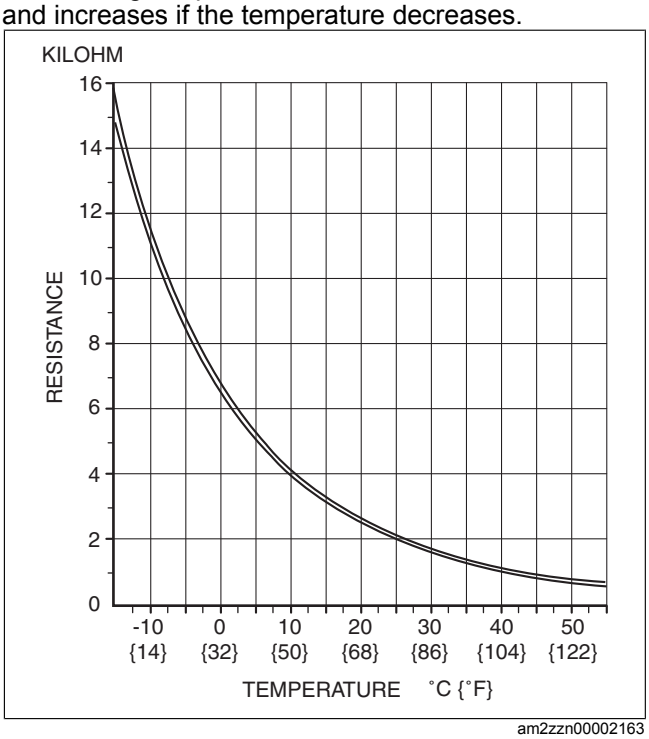

am2zzn00002163

Fail-safe

- Not applicable