
## FAN SWITCH INSPECTION [MANUAL AIR CONDITIONER]

id0740a2801300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (2) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
   (3) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (4) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
   (5) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].)(See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (6) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.)
   (7) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
   (8) Front console box (See FRONT CONSOLE REMOVAL/INSTALLATION.)
   (9) CD player (with CD player) (See CD PLAYER REMOVAL.)(See CD PLAYER INSTALLATION.)
   (10) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
   (11) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
3. Remove the climate control unit. (See CLIMATE CONTROL UNIT REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].)
4. Verify that the continuity between the fan switch terminals as indicated in the table.
   - If there is any malfunction, replace the fan switch.

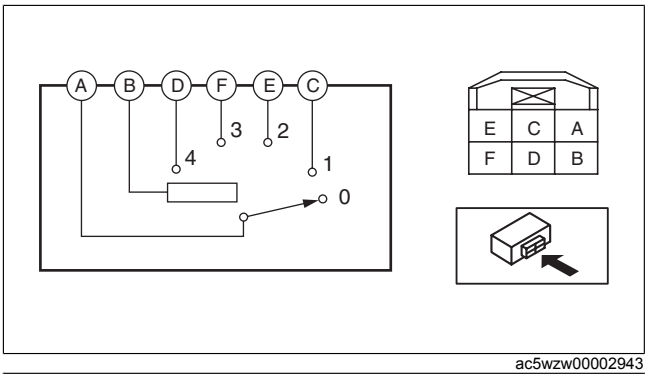


ac5wzw00002943

○—○: Continuity

| Switch position | Terminal | | | | | |
|---|---|---|---|---|---|---|
| | A | B | C | D | E | F |
| 0 | | | | | | |
| 1 | ○ | | ○ | | | |
| 2 | ○ | | | | ○ | |
| 3 | ○ | ○ | | | | ○ |
| 4 | ○ | ○ | | ○ | | |

ac5wzw00001905