AIR INTAKE ACTUATOR INSPECTION [MANUAL AIR CONDITIONER]


id0740a2801500

L.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Remove the following parts (with center display)(with Bluetooth® system):
   (1) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
   (2) Front scuff plate (passenger-side) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (3) Front side trim (passenger-side) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (4) Tuner and amp unit (TAU) (with center display)(See TUNER AND AMP UNIT (TAU) REMOVAL/INSTALLATION.)
   (5) Bluetooth® unit (with Bluetooth® system)(See Bluetooth® UNIT REMOVAL/INSTALLATION.)
4. Remove the air intake actuator. (See AIR INTAKE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)
5. Apply battery positive voltage and connect the ground to the air intake actuator terminals as indicated in the table below and verify the operation condition.

B+ Terminal	Ground Terminal	Operation
A	F	FRESH → RECIRCULATE

B+ Terminal	Ground Terminal	Operation
F	A	RECIRCULATE → FRESH

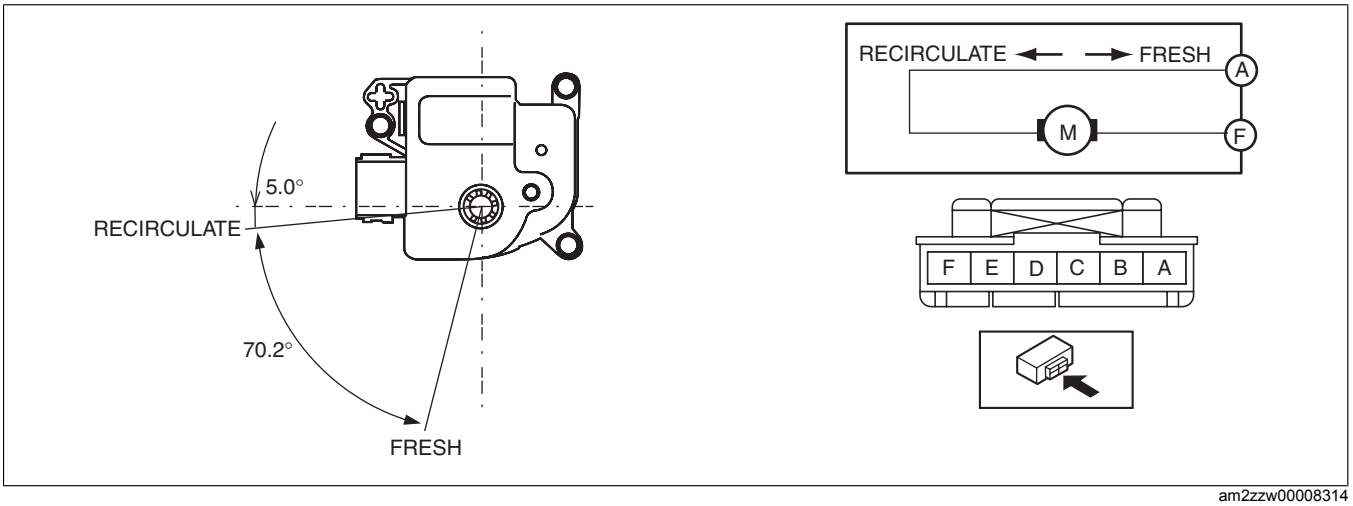

am2zzw00008314


- If not as indicated in the table, replace the air intake actuator. (See AIR INTAKE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)

R.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (2) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
   (3) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
   (4) Front scuff plate (passenger-side) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (5) Front side trim (passenger-side) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (6) Lower panel (passenger-side) (See PASSENGER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
3. Remove the air intake actuator. (See AIR INTAKE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)
4. Apply battery positive voltage and connect the ground to the air intake actuator terminals as indicated in the table below and verify the operation condition.

B+ Terminal	Ground Terminal	Operation
A	F	RECIRCULATE → FRESH

B+ Terminal	Ground Terminal	Operation
F	A	FRESH → RECIRCULATE

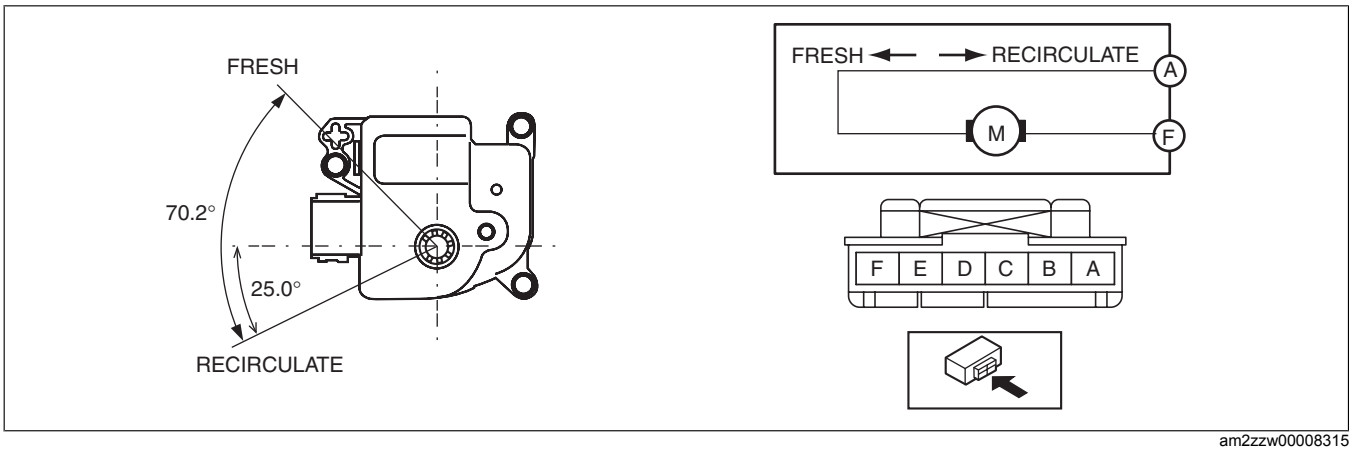

am2zzw00008315

- If not as indicated in the table, replace the air intake actuator. (See AIR INTAKE ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)