
CLIMATE CONTROL UNIT DISASSEMBLY/ASSEMBLY [MANUAL AIR CONDITIONER]

id0740a2802000

L.H.D. (RECIRCULATE/FRESH lever type)

1. Disassemble in the order indicated in the figure.

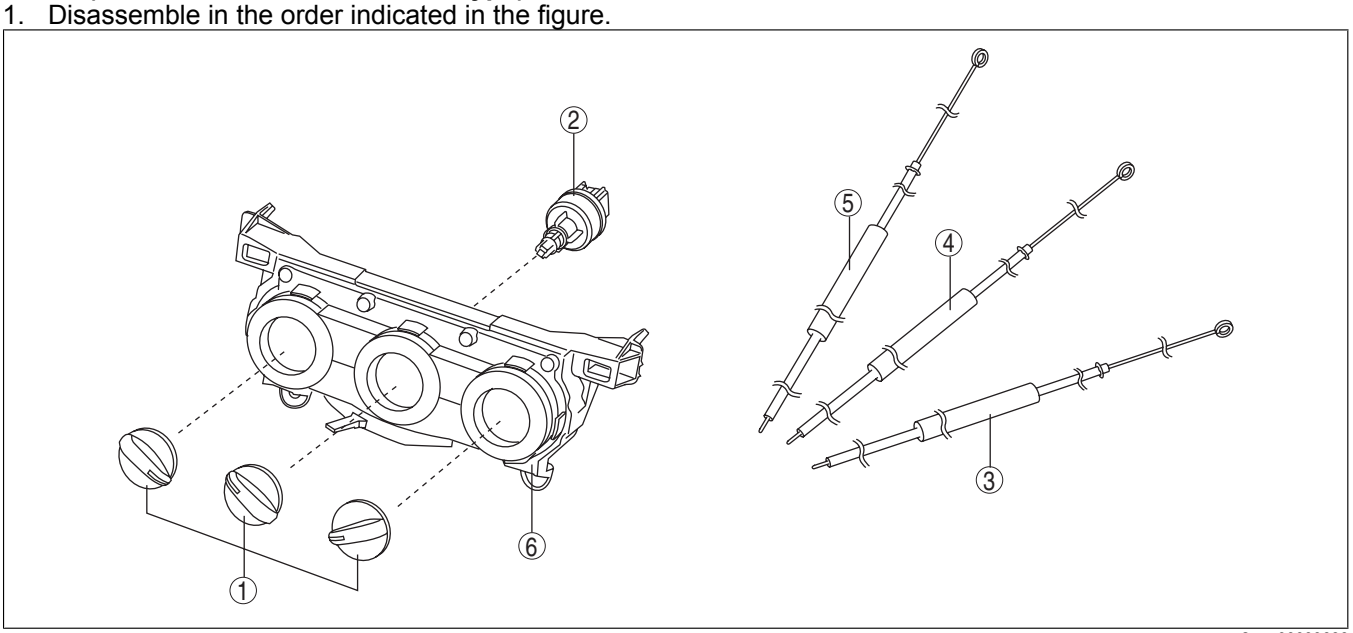


am2zzw00009666

1	Dial
2	Fan switch
3	Air mix wire (See Wire removal note.)
4	Airflow mode wire (See Wire removal note.)
5	Air intake wire (See Wire removal note.)
6	Climate control unit

2. Assemble in the reverse order of disassembly.

Wire removal note


1. Remove in the order indicated in the figure.

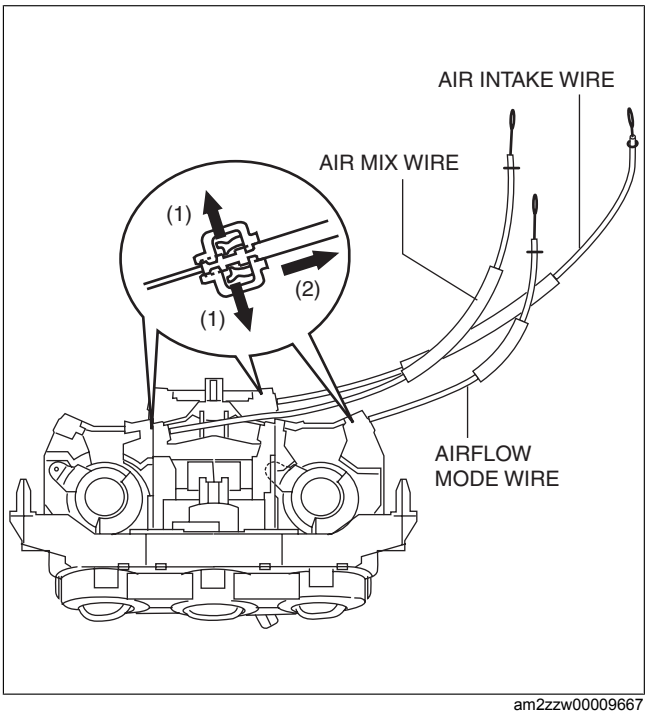

am2zzw00009667

L.H.D. (RECIRCULATE/FRESH switch type)

1. Disassemble in the order indicated in the figure.

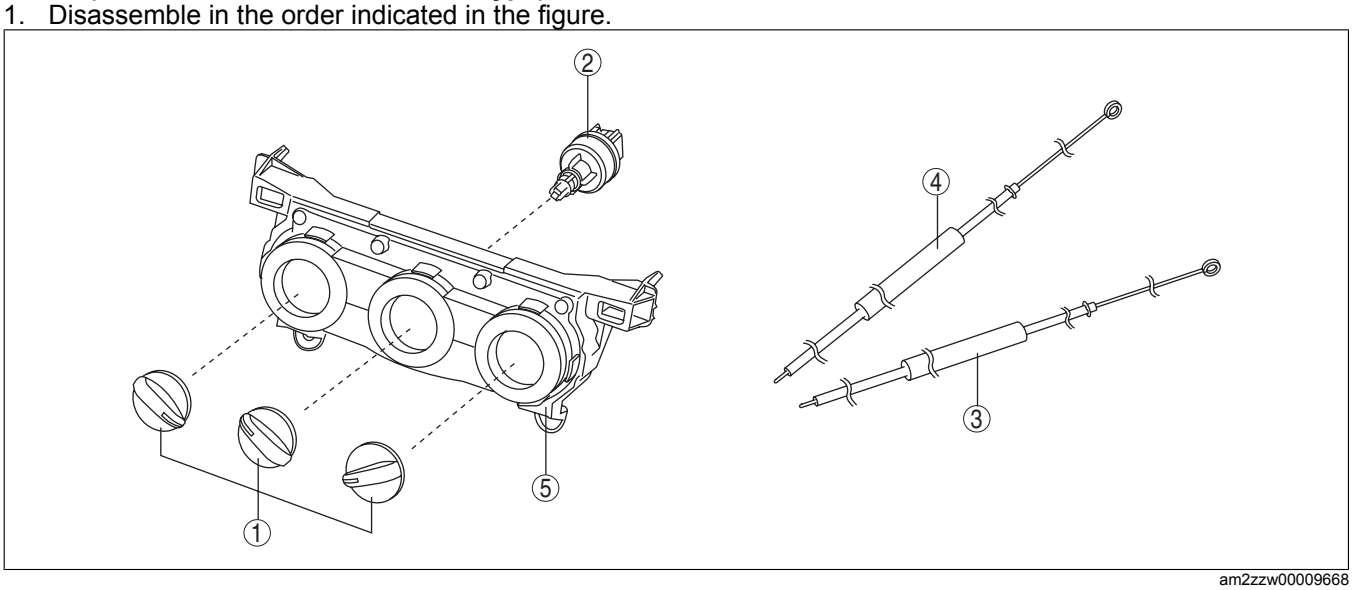


am2zzw00009668

1	Dial
2	Fan switch
3	Air mix wire (See Wire removal note.)
4	Airflow mode wire (See Wire removal note.)
5	Climate control unit

2. Assemble in the reverse order of disassembly.

Wire removal note


1. Remove in the order indicated in the figure.

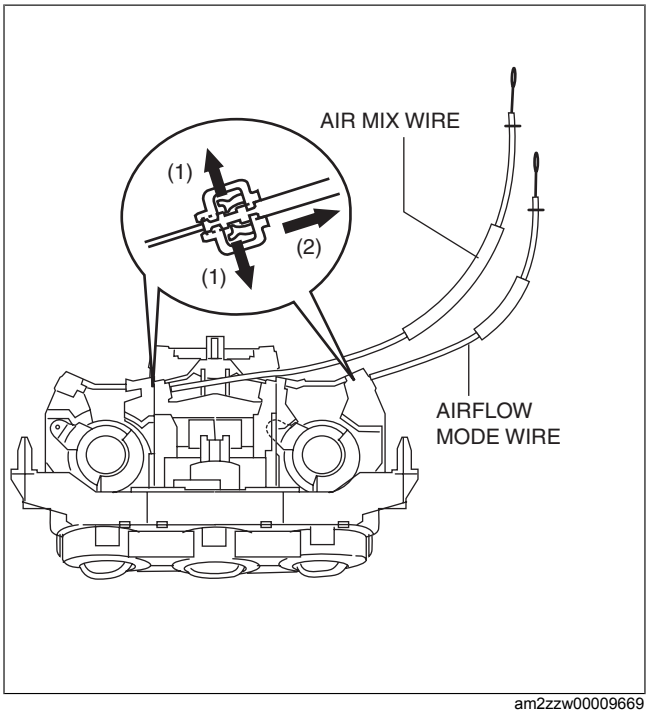

am2zzw00009669

R.H.D. (RECIRCULATE/FRESH lever type)

1. Disassemble in the order indicated in the figure.

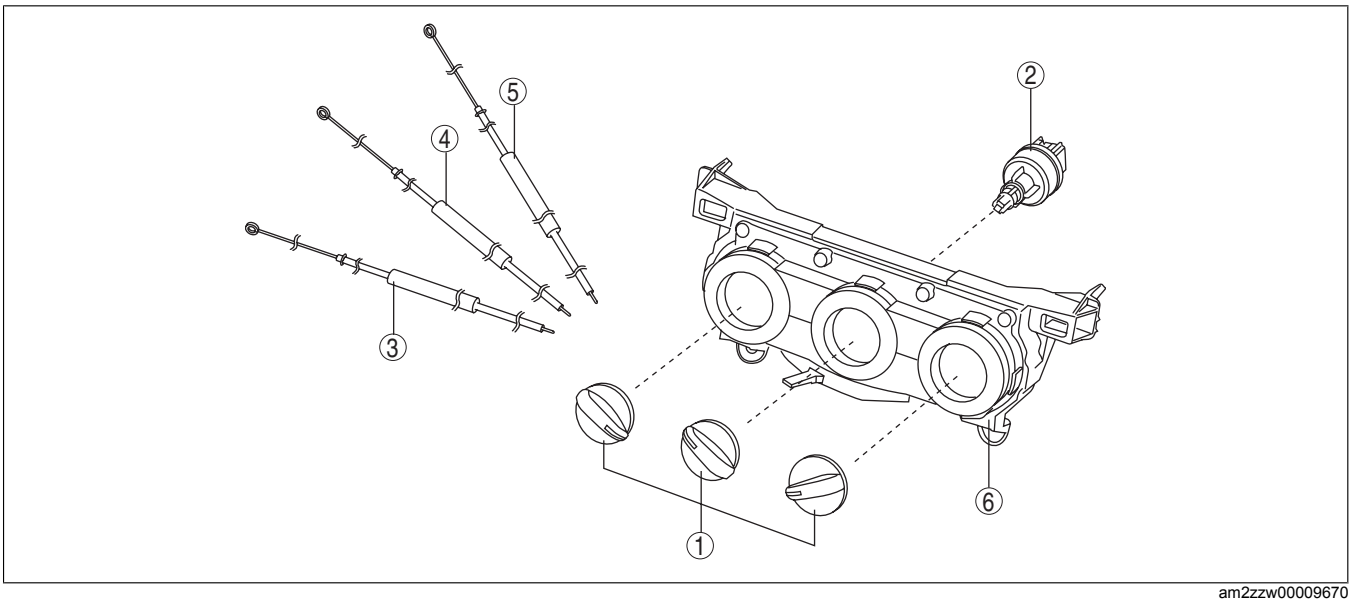


am2zzw00009670

1	Dial
2	Fan switch
3	Air mix wire (See Wire removal note.)
4	Airflow mode wire (See Wire removal note.)
5	Air intake wire (See Wire removal note.)
6	Climate control unit

2. Assemble in the reverse order of disassembly.

Wire removal note


1. Remove in the order indicated in the figure.

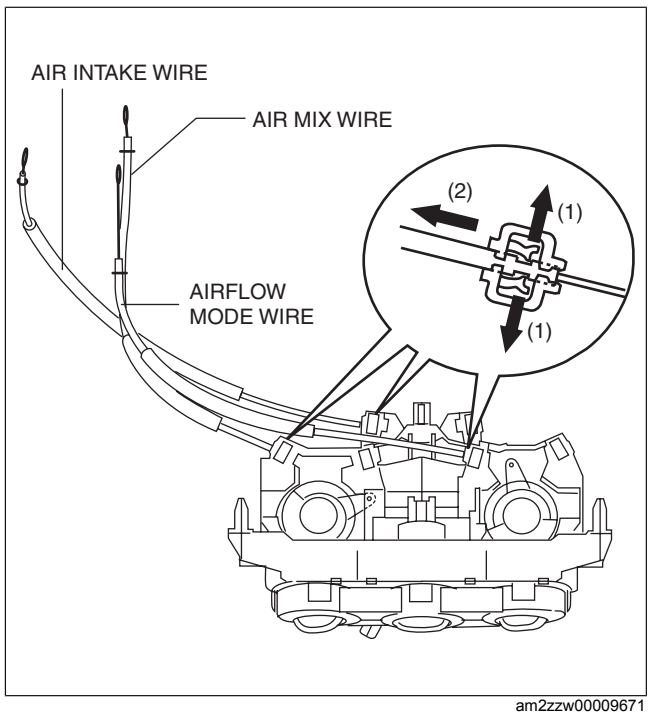

am2zzw00009671

R.H.D. (RECIRCULATE/FRESH switch type)

1. Disassemble in the order indicated in the figure.

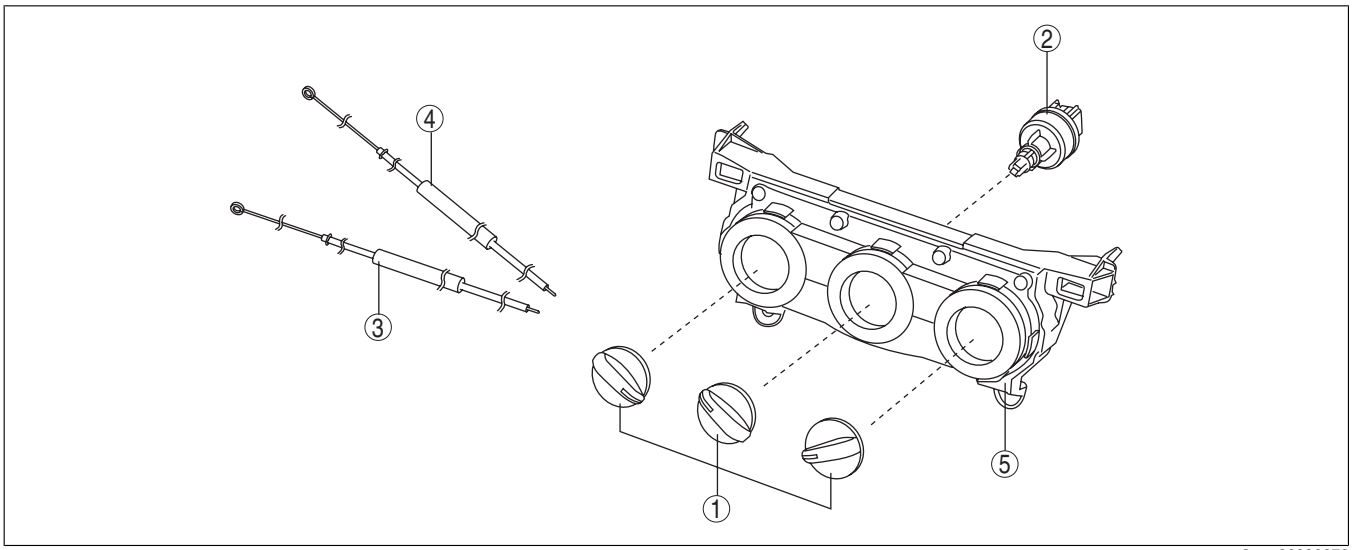


am2zzw00009672

1	Dial
2	Fan switch
3	Air mix wire (See Wire removal note.)
4	Airflow mode wire (See Wire removal note.)
5	Climate control unit

2. Assemble in the reverse order of disassembly.

Wire removal note

1. Remove in the order indicated in the figure.

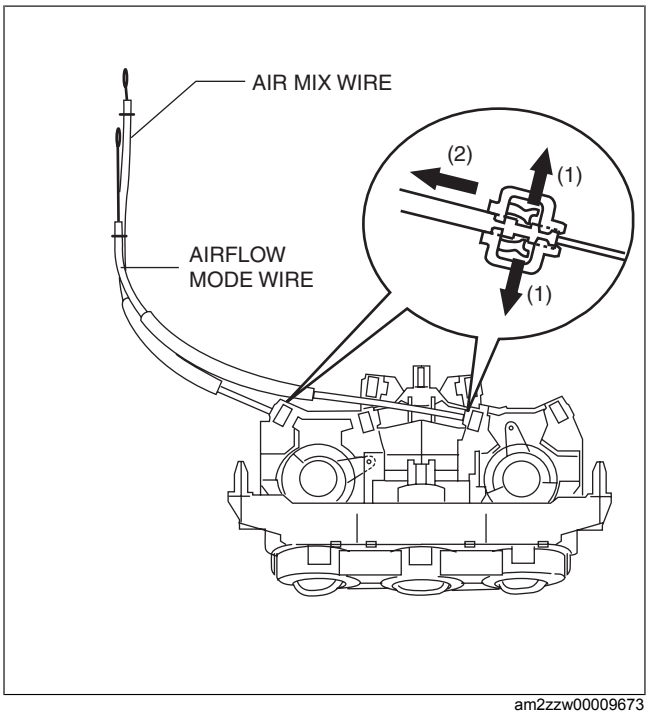

am2zzw00009673