
REFRIGERANT PRESSURE SENSOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER]

id0740a2817300

SKYACTIV-G 1.3, SKYACTIV-G 1.5


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Discharge the refrigerant. (See REFRIGERANT RECOVERY.)(See REFRIGERANT CHARGING.)
3. Disconnect the refrigerant pressure sensor connector.

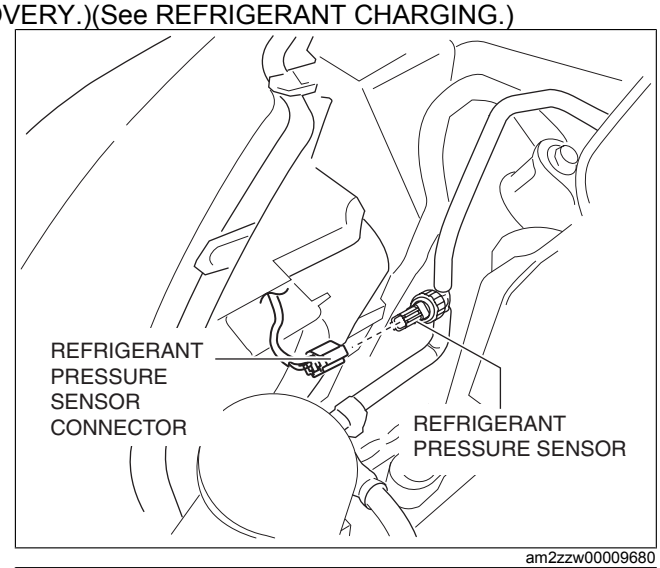

am2zzw00009680

4. Wrap a cloth around the pipe and secure it using pliers.
5. Loosen the refrigerant pressure sensor

Tightening torque
10—11 N·m {102—112 kgf·cm, 89—97 in·lbf}

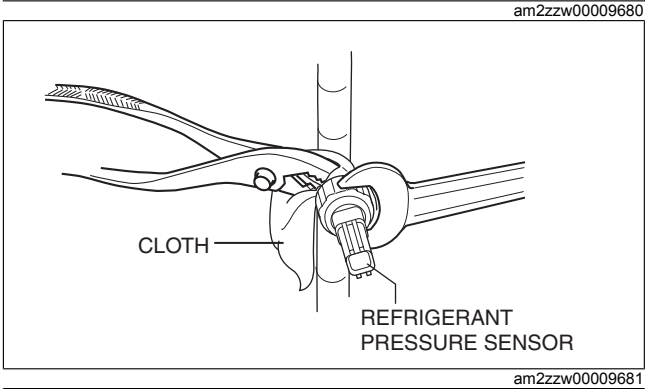


am2zzw00009681

6. Remove the refrigerant pressure sensor.

Caution
- **If moisture or foreign matter enters the refrigeration cycle, cooling ability will be lowered and abnormal noise will occur. Always immediately plug all open fittings after removing any refrigeration cycle parts to keep moisture or foreign matter out of the cycle.**

7. Install in the reverse order of removal. (See Refrigerant pressure sensor installation note.)
8. Perform the refrigerant system performance test. (See REFRIGERANT SYSTEM PERFORMANCE TEST.)

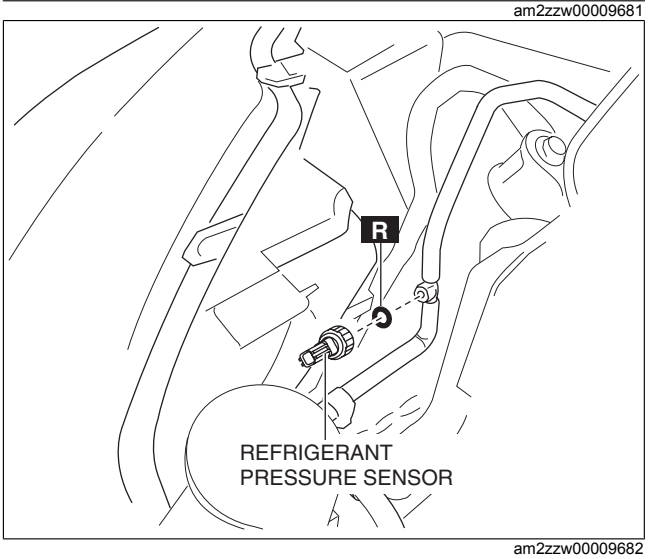

am2zzw00009682


Refrigerant pressure sensor installation note

1. Apply compressor oil to the O-rings and connect the joints.

SKYACTIV-D 1.5


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Discharge the refrigerant. (See REFRIGERANT RECOVERY.)(See REFRIGERANT CHARGING.)

3. Disconnect the connector.
4. Remove the clips.

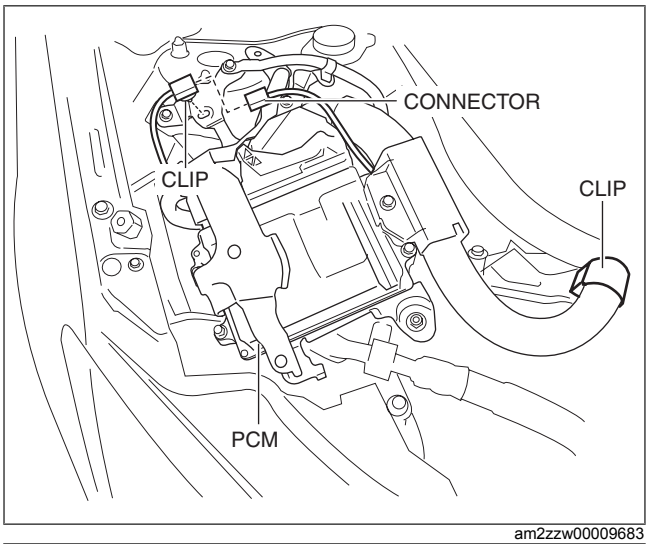

am2zzw00009683


5. Remove bolt A.
6. Remove the clip.
7. Disconnect the engine ground.
8. Remove bolt B.
9. Remove the nut.
10. Remove bolt C.

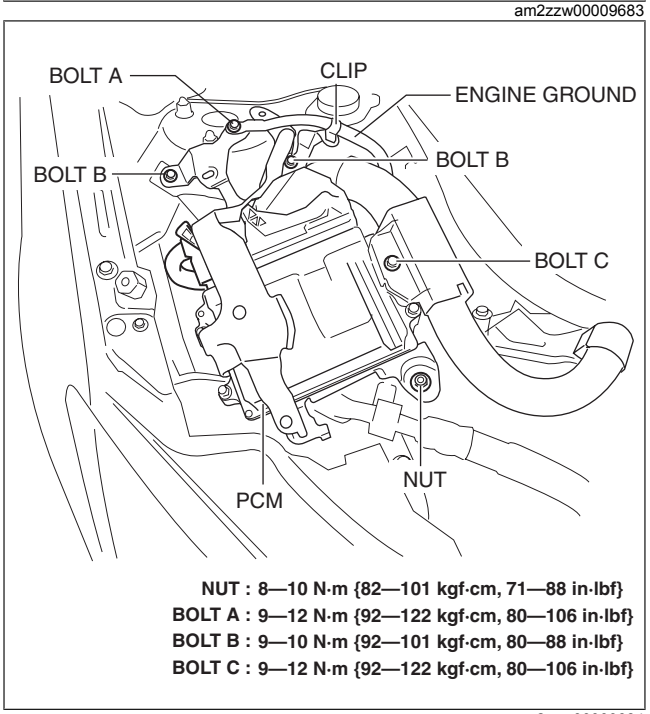

NUT : 8—10 N·m {82—101 kgf·cm, 71—88 in·lbf}
BOLT A : 9—12 N·m {92—122 kgf·cm, 80—106 in·lbf}
BOLT B : 9—10 N·m {92—101 kgf·cm, 80—88 in·lbf}
BOLT C : 9—12 N·m {92—122 kgf·cm, 80—106 in·lbf}


am2zzw00009684

11. Set the PCM out of the way in the direction shown in the figure

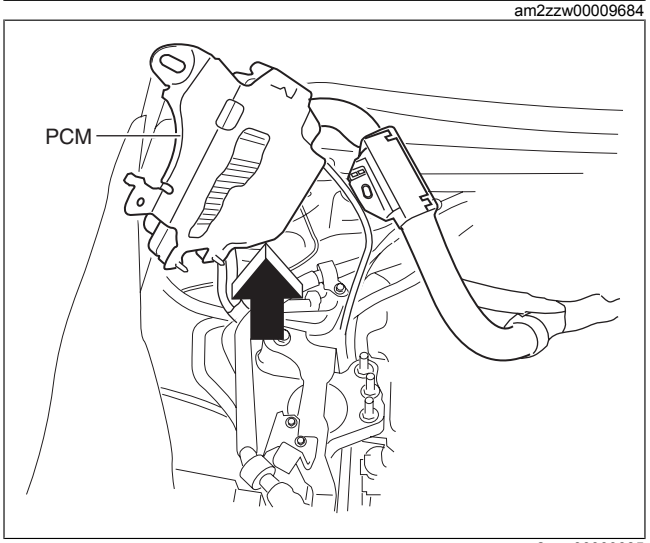


am2zzw00009685

12. Remove the nuts.
13. Set the cooler hose (LO) out of the way.

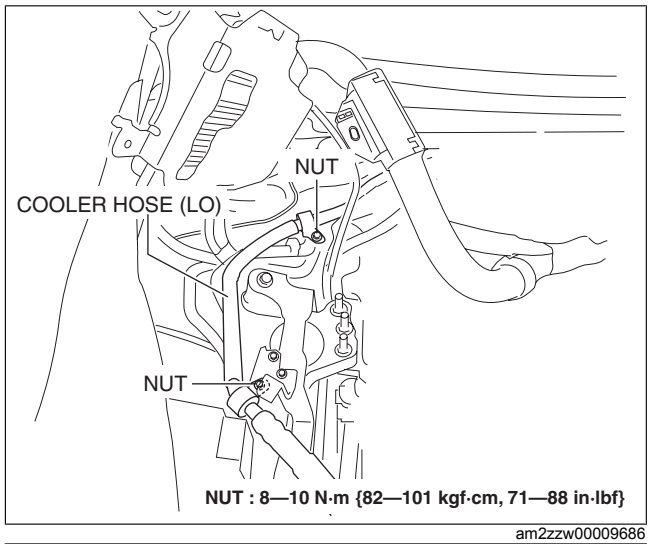

am2zzw00009686


14. Disconnect the refrigerant pressure sensor connector.

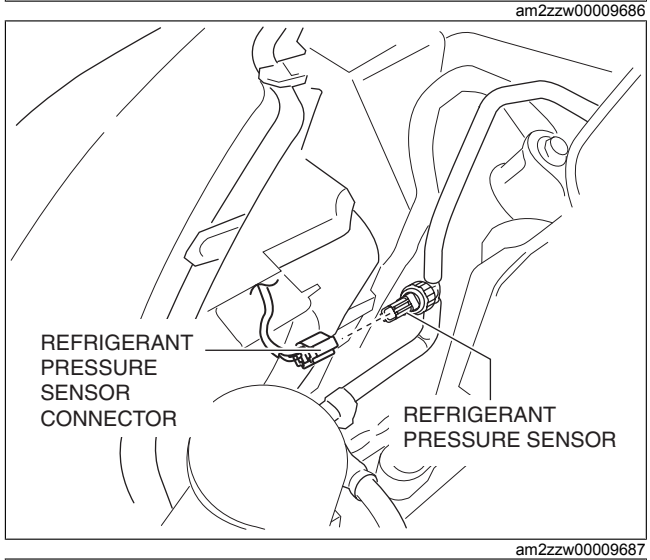

am2zzw00009687

15. Wrap a cloth around the pipe and secure it using pliers.
16. Loosen the refrigerant pressure sensor

Tightening torque
10—11 N·m {102—112 kgf·cm, 89—97 in·lbf}

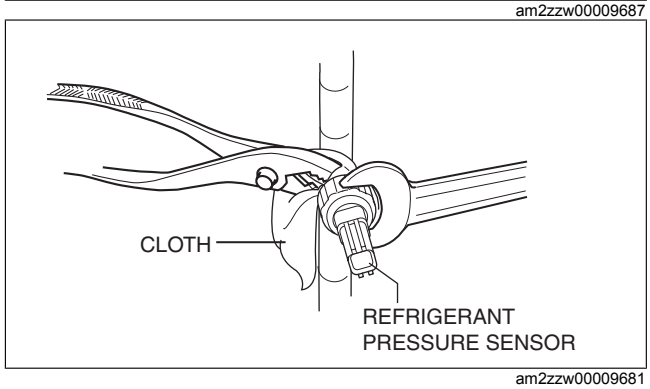


am2zzw00009681

17. Remove the refrigerant pressure sensor.

Caution
- **If moisture or foreign material enters the refrigeration cycle, cooling ability will be lowered and abnormal noise will occur. Always immediately plug all open fittings after removing any refrigeration cycle parts to keep moisture or foreign material out of the cycle.**

18. Install in the reverse order of removal. (See Refrigerant pressure sensor installation note.)
19. Perform the refrigerant system performance test. (See REFRIGERANT SYSTEM PERFORMANCE TEST.)

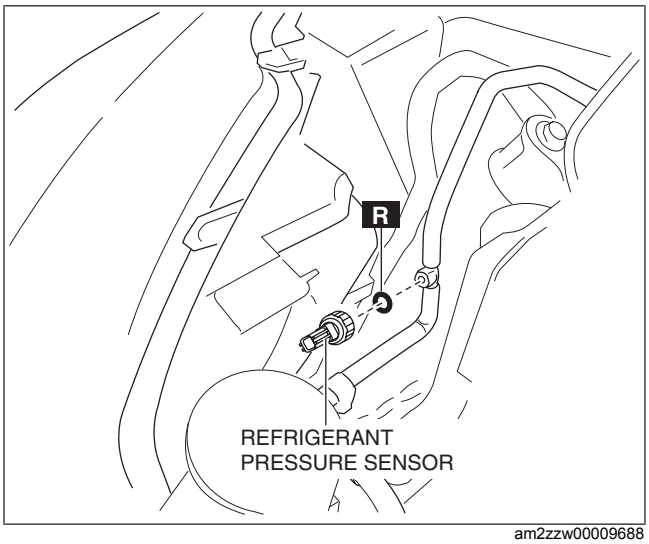

am2zzw00009688

Refrigerant pressure sensor installation note
1. Apply compressor oil to the O-rings and connect the joints.