
DTC B1011:95 [STANDARD DEPLOYMENT CONTROL SYSTEM]

id0802b1823100

System malfunction location	• SAS control module connectors are poorly connected
Detection condition	**Warning** **• Detection conditions are for understanding the DTC outline before performing an inspection. Performing an inspection according to only the detection conditions may cause injury due to an operating error, or damage the system. When performing an inspection, always follow the inspection procedure.** • No continuity between poorly connected detector bar terminals of the SAS control module, or the measurement value is out of the normal range even though there is continuity
Fail-safe function	Not applicable
Possible cause	• SAS control module connectors are poorly connected • SAS control module connector cover malfunction • SAS control module connector malfunction • SAS control module malfunction

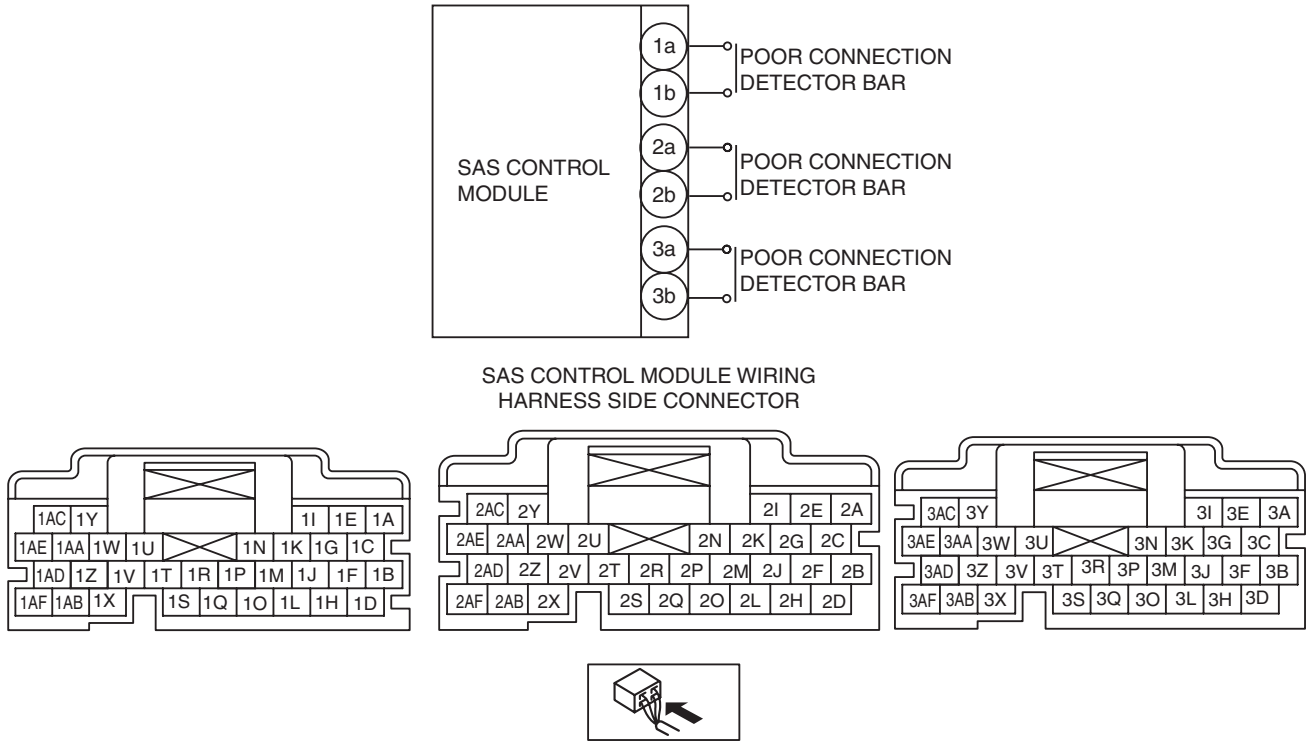

Diagnostic Procedure

Step	Inspection		Action
1	**PERFORM MALFUNCTION DIAGNOSIS USING FLOWCHART** • Is the malfunction diagnosis performed using the flowchart? (See FLOWCHART [STANDARD DEPLOYMENT CONTROL SYSTEM].)	Yes	Go to the next step.
		No	Re-perform the malfunction diagnosis using the flowchart. (See FOREWORD [STANDARD DEPLOYMENT CONTROL SYSTEM].)

Step	Inspection		Action
2	**INSPECT SAS CONTROL MODULE CONNECTORS CONNECTION CONDITION** **Warning** **• Handling the component parts improperly can accidentally operate (deploy) the air bag modules and pre-tensioner seat belts, which may seriously injure you. Read the service warnings/cautions and the workshop manual before handling the air bag system components. (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Remove the rear console. (See REAR CONSOLE REMOVAL/ INSTALLATION.) • Are all SAS control module connectors securely connected?	Yes	Go to the next step.
		No	Reconnect the SAS control module connector properly, then go to Step 4.

Step	Inspection		Action
3	**VERIFY PARTIALLY DISCONNETCTED DETECTION BAR OF SAS CONTROL MODULE CONNECTOR** • Remove the column cover. (See COLUMN COVER REMOVAL/ INSTALLATION.) • Disconnect the clock spring connector. (See CLOCK SPRING REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/ INSTALLATION.) • Disconnect the passenger-side air bag module connector. (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Disconnect the driver and passenger-side front seat connectors. (with side air bag module) (See FRONT SEAT REMOVAL/ INSTALLATION.) • Remove the B-pillar lower trim. (See B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.) • Disconnect the driver and passenger-side pre-tensioner seat belt connectors. (See FRONT SEAT BELT REMOVAL/ INSTALLATION.) • Remove the headliner. (with curtain air bag module) (See HEADLINER REMOVAL/ INSTALLATION.) • Disconnect the driver and passenger-side curtain air bag module connectors. (with curtain air bag module) (See CURTAIN AIR BAG MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Verify the condition of the detector bars of the SAS control module connectors. (Corrosion, damage, and disconnected pins) • Are the detector bars of the SAS control module connectors normal?	Yes	Go to the next step.
		No	Replace the air bag harness.
4	**PERFORM DTC INSPECTION FOR SAS CONTROL MODULE** • Connect the SAS control module connectors. • Reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Clear the DTC for the SAS control module using the M-MDS. (See CLEARING DTC [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Perform the DTC inspection for the SAS control module using the M-MDS. (See DTC INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the SAS control module. (See SAS CONTROL MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
		No	DTC troubleshooting completed.