

DTC B1214:11/B1214:12/B1214:13/B1214:19/B1214:1A [STANDARD DEPLOYMENT CONTROL SYSTEM]


id0802b1880400

System malfunction location	• B1214:11: Passenger-side pre-tensioner seat belt circuit short to body ground • B1214:12: Passenger-side pre-tensioner seat belt circuit short to power supply • B1214:13: Passenger-side pre-tensioner seat belt circuit open circuit or resistance high • B1214:19: Short circuit to passenger-side pre-tensioner seat belt and other air bag module circuits • B1214:1A: Passenger-side pre-tensioner seat belt circuit resistance low
Detection condition	**Warning** **• Detection conditions are for understanding the DTC outline before performing an inspection. Performing an inspection according to only the detection conditions may cause injury due to an operating error, or damage the system. When performing an inspection, always follow the inspection procedure.** • Resistance other than **0.88—6.33 ohms** detected in passenger-side pre-tensioner seat belt circuit • Wiring harness between the passenger-side pre-tensioner seat belt and SAS control module has a malfunction
Fail-safe function	Not applicable
Possible cause	• Passenger-side pre-tensioner seat belt connector malfunction • Short circuit to power supply or body ground in the wiring harness between the passenger-side pre-tensioner seat belt and SAS control module • Open circuit in the wiring harness between the passenger-side pre-tensioner seat belt and SAS control module • Passenger-side pre-tensioner seat belt malfunction • SAS control module malfunction

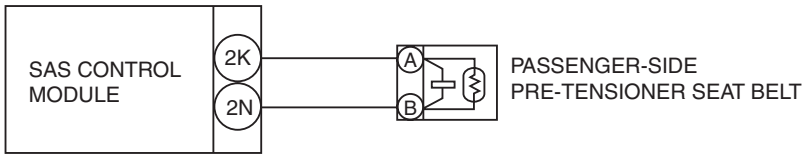



SAS CONTROL MODULE WIRING HARNESS SIDE CONNECTOR

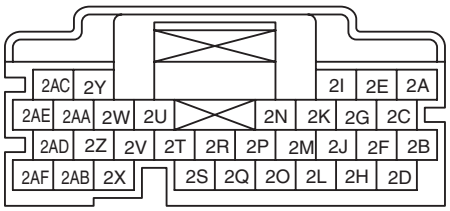



PASSENGER-SIDE PRE-TENSIONER SEAT BELT WIRING HARNESS-SIDE CONNECTOR





Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT PASSENGER-SIDE PRE-TENSIONER SEAT BELT CONNECTOR** **Warning** **• Handling the component parts improperly can accidentally operate (deploy) the air bag modules and pre-tensiner seat belts, which may seriously injure you. Read the service warnings/ cautions and the workshop manual before handling the air bag system components. (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Remove the passenger-side B-pillar lower trim. (See B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.) • Disconnect the passenger-side pre-tensioner seat belt connector. (See FRONT SEAT BELT REMOVAL/ INSTALLATION.) • Inspect the passenger-side pre-tensioner seat belt connector. (Corrosion, damage, and disconnected pins) • Is there any malfunction of the passenger-side pre-tensioner seat belt connector?	Yes	Replace the malfunctioning part, then go to Step 6.
		No	Go to the next step.

Step	Inspection		Action
2	**INSPECT PASSENGER-SIDE PRE-TENSIONER SEAT BELT CIRCUIT FOR SHORT TO GROUND** • Remove the column cover. (See COLUMN COVER REMOVAL/ INSTALLATION.) • Disconnect the clock spring connector. (See CLOCK SPRING REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/ INSTALLATION.) • Disconnect the passenger-side air bag module connector. (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Disconnect the driver and passenger-side front seat connectors. (with side air bag module) (See FRONT SEAT REMOVAL/ INSTALLATION.) • Remove the driver-side B-pillar lower trim. (See B-PILLAR UPPER TRIM REMOVAL/ INSTALLATION.) • Disconnect the driver-side pre-tensioner seat belt connector. (See FRONT SEAT BELT REMOVAL/ INSTALLATION.) • Remove the headliner. (with curtain air bag module) (See HEADLINER REMOVAL/ INSTALLATION.) • Disconnect the driver and passenger-side curtain air bag module connectors. (with curtain air bag module) (See CURTAIN AIR BAG MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Disconnect the all SAS control module connectors. (See SAS CONTROL MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — SAS control module terminal 2K — SAS control module terminal 2N **Note** • Inspect for continuity while shaking the wiring harness between the SAS control module and passenger-side pre-tensioner seat belt. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between SAS control module terminal and passenger-side pre-tensioner seat belt terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Replace the malfunctioning part. **If there is no common connector:** • Replace the wiring harness which has a short to ground. Go to Step 6.
		No	Go to the next step.

Step	Inspection		Action
3	**INSPECT PASSENGER-SIDE PRE-TENSIONER SEAT BELT CIRCUIT FOR OPEN CIRCUIT** • Passenger-side pre-tensioner seat belt and SAS control module connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — Passenger-side pre-tensioner seat belt terminal A—SAS control module terminal 2K — Passenger-side pre-tensioner seat belt terminal B—SAS control module terminal 2N **Note** • Inspect for continuity while shaking the wiring harness between the SAS control module and passenger-side pre-tensioner seat belt. • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between SAS control module terminal and passenger-side pre-tensioner seat belt terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Replace the malfunctioning part. **If there is no common connector:** • Replace the wiring harness which has an open circuit. Go to Step 6.
4	**INSPECT PASSENGER-SIDE PRE-TENSIONER SEAT BELT CIRCUIT FOR SHORT TO POWER SUPPLY** • Passenger-side pre-tensioner seat belt and SAS control module connectors are disconnected. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at the following terminals (wiring harness-side): — SAS control module terminal 2K — SAS control module terminal 2N **Note** • Measure the voltage while shaking the wiring harness between the SAS control module and passenger-side pre-tensioner seat belt. • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between SAS control module terminal and passenger-side pre-tensioner seat belt terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Replace the malfunctioning part. **If there is no common connector:** • Replace the wiring harness which has a short to power supply. Go to Step 6.

Step	Inspection		Action
5	**INSPECT PASSENGER-SIDE PRE-TENSIONER SEAT BELT** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Connect the SAS control module connectors. • Except for the passenger-side pre-tensioner seat belt connector, reconnect all disconnected connectors. • Connect the **SST (Fuel and thermometer checker)** or apply **2 ohms** resistance to the passenger-side pre-tensioner seat belt connector terminals A–B. • Set the **SST (Fuel and thermometer checker)** to **2 ohms**. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Clear the DTC for the SAS control module using the M-MDS. (See CLEARING DTC [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Perform the DTC inspection for the SAS control module using the M-MDS. (See DTC INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Are the same DTCs present?	Yes	Go to the next step.
		No	Replace the passenger-side pre-tensioner seat belt. (See FRONT SEAT BELT REMOVAL/INSTALLATION.) Then go to the next step.
6	**PERFORM SAS CONTROL MODULE DTC INSPECTION** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the **SST (Fuel and thermometer checker)** or the **2 ohms** resistance. • Connect the passenger-side pre-tensioner seat belt connector. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Clear the DTC for the SAS control module using the M-MDS. (See DTC INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Perform the DTC inspection for the SAS control module using the M-MDS. (See DTC INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Are the same DTCs present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the SAS control module. (See SAS CONTROL MODULE REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
		No	DTC troubleshooting completed.