
DTC B0002:11/B0002:12/B0002:13/B0002:19/B0002:1A [TWO-STEP DEPLOYMENT CONTROL SYSTEM]

id0802b2000200

System malfunction location	• B0002:11:Driver-side air bag module (inflator No.2) circuit short to body ground • B0002:12:Driver-side air bag module (inflator No.2) circuit short to power supply • B0002:13:Driver-side air bag module (inflator No.2) circuit open circuit or resistance high • B0002:19:Short circuit to driver-side air bag module (inflator No.2) and other air bag module circuits • B0002:1A:Driver-side air bag module (inflator No.2) circuit resistance low
Detection condition	**Warning** **• Detection conditions are for understanding the DTC outline before performing an inspection. Performing an inspection according to only the detection conditions may cause injury due to an operating error, or damage the system. When performing an inspection, always follow the inspection procedure.** • Resistance other than **1.37—6.33 ohms** detected in the driver-side air bag module (inflator No.2) circuit • Malfunction in the wiring harness between the driver-side air bag module (inflator No.2) and SAS control module
Fail-safe function	Not applicable
Possible cause	• Clock spring connector malfunction • Clock spring malfunction • Short circuit to power supply or body ground in the wiring harness between the clock spring and SAS control module • Open circuit in the wiring harness between the clock spring and SAS control module • Driver-side air bag module malfunction • SAS control module malfunction

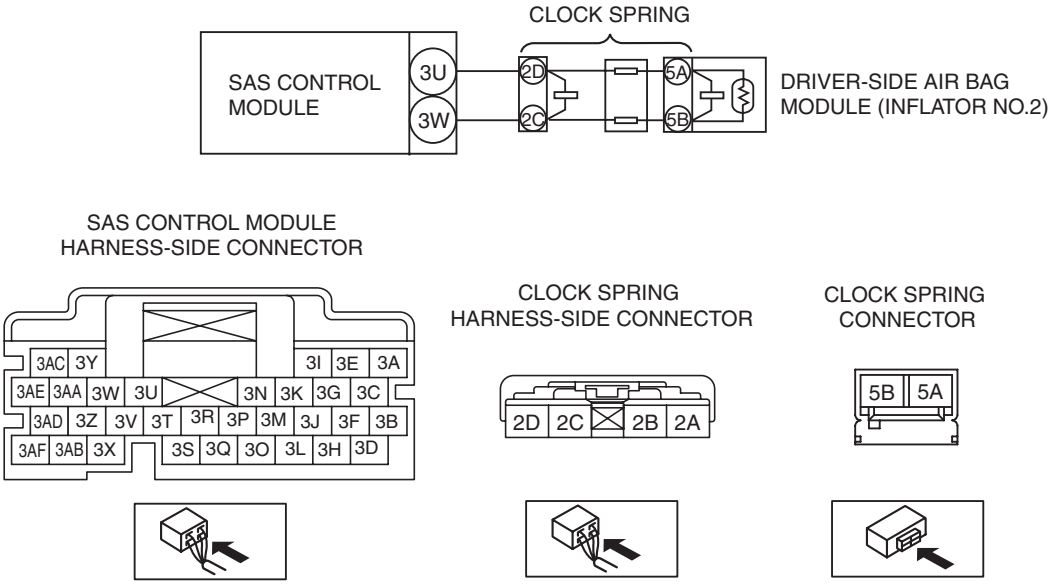

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT DRIVER-SIDE AIR BAG MODULE (INFLATOR NO.2) CONNECTOR** **Warning** **• Handling the component parts improperly can accidentally operate (deploy) the air bag modules and pre-tensioner seat belts, which may seriously injure you. Read the service warnings/cautions and the workshop manual before handling the air bag system components. (See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the driver-side air bag module (inflator No.2) connector. (See DRIVER-SIDE AIR BAG MODULE REMOVAL [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Inspect the clock spring connector. (Corrosion, damage, and disconnected pins) • Is there any malfunction of the clock spring connector?	Yes	Replace clock spring. (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) Then go to Step 7.
		No	Go to the next step.
2	**INSPECT CLOCK SPRING** • Remove the steering wheel. (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.) • Remove the column cover. (See COLUMN COVER REMOVAL/INSTALLATION.) • Remove the clock spring. (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Inspect for continuity between clock spring connector terminals 2D—5A and 2C—5B. **Note** • Inspect the clock spring wiring harness for continuity while shaking it. • Is there continuity?	Yes	Go to the next step.
		No	Replace clock spring. (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) Then go to Step 7.

Step	Inspection		Action
3	**INSPECT DRIVER-SIDE AIR BAG MODULE (INFLATOR NO.2) CIRCUIT FOR SHORT TO GROUND** • Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/ INSTALLATION.) • Disconnect the passenger-side air bag module connector. (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Disconnect the driver and passenger-side front seat connector. (See FRONT SEAT REMOVAL/ INSTALLATION.) • Remove the B-pillar lower trim. (See B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.) • Disconnect the driver and passenger-side pre-tensioner seat belt connectors. • Remove the headliner. (See HEADLINER REMOVAL/ INSTALLATION.) • Disconnect the driver and passenger-side curtain air bag module connectors. (See CURTAIN AIR BAG MODULE REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Remove the rear package trim. (See REAR PACKAGE TRIM REMOVAL/ INSTALLATION.) • Disconnect the rear pre-tensioner seat belt connectors. • Disconnect the all SAS control module connectors. (See SAS CONTROL MODULE REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — SAS control module terminal 3U — SAS control module terminal 3W **Note** • Inspect for continuity while shaking the wiring harness between the SAS control module and clock spring. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between SAS control module terminal and clock spring terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Replace the malfunctioning part. **If there is no common connector:** • Replace the wiring harness which has a short to ground. Go to Step 7.
		No	Go to the next step.

Step	Inspection		Action
4	**INSPECT DRIVER-SIDE AIR BAG MODULE (INFLATOR NO.2) CIRCUIT FOR OPEN CIRCUIT** • Clock spring and SAS control module connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — Clock spring terminal 2D—SAS control module terminal 3U — Clock spring terminal 2C—SAS control module terminal 3W **Note** • Inspect for continuity while shaking the wiring harness between the SAS control module and clock spring. • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between SAS control module terminal and clock spring terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Replace the malfunctioning part. **If there is no common connector:** • Replace the wiring harness which has an open circuit. Go to Step 7.
5	**INSPECT DRIVER-SIDE AIR BAG MODULE (INFLATOR NO.2) CIRCUIT FOR SHORT TO POWER SUPPLY** • Clock spring and SAS control module connectors are disconnected. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at the following terminals (wiring harness-side): — SAS control module terminal 3U — SAS control module terminal 3W **Note** • Measure the voltage while shaking the wiring harness between the SAS control module and clock spring. • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between SAS control module terminal and clock spring terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Replace the malfunctioning part. **If there is no common connector:** • Replace the wiring harness which has a short to power supply. Go to Step 7.
6	**INSPECT DRIVER-SIDE AIR BAG MODULE** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. • Connect the SAS control module connectors. • Except for the driver-side air bag module (inflator No.2) connector, reconnect all disconnected connectors. • Connect the **SST (Fuel and thermometer checker)** or apply **2 ohms** resistance to clock spring connector terminals 5A and 5B. • Set the **SST (Fuel and thermometer checker)** to **2 ohms**. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Clear the DTC for the SAS control module using the M-MDS. (See CLEARING DTC [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Perform the DTC inspection for the SAS control module using the M-MDS. (See DTC INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Are the same DTCs present?	Yes	Go to the next step.
		No	Replace the driver-side air bag module. (See DRIVER-SIDE AIR BAG MODULE REMOVAL [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) Then go to the next step.

Step	Inspection		Action
7	**PERFORM SAS CONTROL MODULE DTC INSPECTION** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. • Disconnect the **SST (Fuel and thermometer checker)** or the **2 ohms** resistance. • Connect the driver-side air bag module (inflator No.2) connector. (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Clear the DTC for the SAS control module using the M-MDS. (See CLEARING DTC [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Perform the DTC inspection for the SAS control module using the M-MDS. (See DTC INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Are the same DTCs present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the SAS control module. (See SAS CONTROL MODULE REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
		No	DTC troubleshooting completed.