

DTC B00B5:11/B00B5:12/B00B5:13/B00B5:1D/B00B5:2B [TWO-STEP DEPLOYMENT CONTROL SYSTEM]

id0802b2005600


System malfunction location	• B00B5:11:Seat track position sensor circuit short to body ground • B00B5:12:Seat track position sensor circuit short to power supply • B00B5:13:Seat track position sensor circuit open • B00B5:1D:Seat track position sensor circuit current of range • B00B5:2B:Short circuit to seat track position sensor and other air bag sensor circuits
Detection condition	**Warning** **• Detection conditions are for understanding the DTC outline before performing an inspection. Performing an inspection according to only the detection conditions may cause injury due to an operating error, or damage the system. When performing an inspection, always follow the inspection procedure.** • Seat track position sensor has a malfunction • Malfunction in the seat track position sensor circuit
Fail-safe function	Not applicable
Possible cause	• Seat track position sensor connector malfunction • Malfunction of connector between the seat track position sensor and SAS control module • Open or short circuit to ground or to power supply in the wiring harness between the seat track position sensor and SAS control module • Seat track position sensor malfunction • SAS control module malfunction

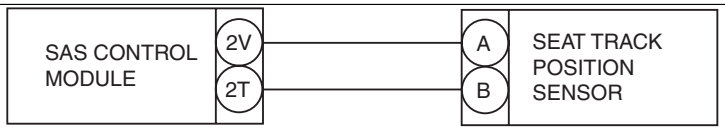

SAS CONTROL MODULE WIRING HARNESS-SIDE CONNECTOR

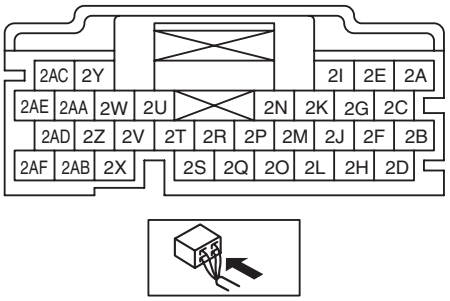

SEAT TRACK POSITION SENSOR WIRING HARNESS-SIDE CONNECTOR

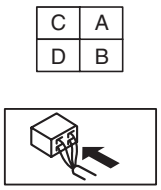

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT SEAT TRACK POSITION SENSOR CIRCUIT** • Check the following PID/DATA monitor, using M-MDS. (See PID/DATA MONITOR TABLE [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) — D_SP_S_FLT • Is seat track position sensor circuit normal?	Yes	Replace the SAS control module. (See SAS CONTROL MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
		No	Go to the next step.

Step	Inspection		Action
2	**INSPECT SEAT TRACK POSITION SENSOR CONNECTOR** **Warning** **• Handling the air bag system components improperly can accidentally deploy the air bag modules and pre-tensioner seat belts, which may seriously injure you. Read the service warnings and cautions before handling the air bag system components. (See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)** • Switch the ignition to off. • Disconnect the negative battery cable and wait for **1 min or more**. • Disconnect the seat track position sensor connector. • Inspect the seat track position sensor connection. (Corrosion, damage, and disconnected pins) • Is there any malfunction of the seat track position sensor connector?	Yes	Replace the malfunctioning part.
		No	Go to the next step.

Step	Inspection		Action
3	**INSPECT WIRING HARNESS BETWEEN SEAT TRACK POSITION SENSOR AND SAS CONTROL MODULE** • Switch the ignition to off. • Disconnect the negative battery cable and wait for **1 min or more**. • Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/ INSTALLATION.) • Disconnect the passenger-side air bag module connector. (See SIDE AIR BAG MODULE REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Disconnect the driver and passenger-side front seat connectors. (See FRONT SEAT REMOVAL/ INSTALLATION.) • Remove the B-pillar lower trim. (See B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.) • Disconnect the driver and passenger-side pre-tensioner seat belt connectors. • Remove the headliner. (See HEADLINER REMOVAL/ INSTALLATION.) • Disconnect the driver and passenger-side curtain air bag module connectors. (See CURTAIN AIR BAG MODULE REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Remove the rear package trim. (See REAR PACKAGE TRIM REMOVAL/ INSTALLATION.) • Disconnect the rear pre-tensioner seat belt connectors. • Disconnect the seat track position sensor connector. • Inspect the wiring harness between SAS control module terminal and seat track position sensor terminal for short to ground, short to power supply, and open circuit: — 2V—A — 2T—B • Is the wiring harness normal?	Yes	Replace the seat track position sensor, then go to the next step.
		No	Replace wiring harness, then go to the next step.

Step	Inspection		Action
4	**PERFORM SAS CONTROL MODULE DTC INSPECTION** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1min or more**. • Connect the SAS control module connectors. • Reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Clear the DTC for the SAS control module using the M-MDS. (See CLEARING DTC [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Perform the DTC inspection for the SAS control module using the M-MDS. (See DTC INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Are the same DTCs present?	Yes	Perform the inspection from Step 1. • If the malfunction recurs, replace the SAS control module. (See SAS CONTROL MODULE REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
		No	DTC troubleshooting completed.