

DTC B1126:11/B1126:12/B1126:13/B1126:19/B1126:1A [TWO-STEP DEPLOYMENT CONTROL SYSTEM]


id0802b2821400

System malfunction location	• B1126:11: Driver-side side air bag module circuit short to body ground • B1126:12: Driver-side side air bag module circuit short to power supply • B1126:13: Driver-side side air bag module circuit open circuit or resistance high • B1126:19: Short circuit to driver-side side air bag module and other air bag module circuits • B1126:1A: Driver-side side air bag module circuit resistance low
Detection condition	**Warning** **• Detection conditions are for understanding the DTC outline before performing an inspection. Performing an inspection according to only the detection conditions may cause injury due to an operating error, or damage the system. When performing an inspection, always follow the inspection procedure.** • Resistance **other than 0.88–10.53 ohms** is detected in driver-side side air bag module circuit • Wiring harness between the driver-side side air bag module and SAS control module has a malfunction
Fail-safe function	Not applicable
Possible cause	• Driver-side side air bag module connector malfunction • Short circuit to power supply or body ground in the wiring harness between the driver-side side air bag module and SAS control module • Open circuit in the wiring harness between the driver-side side air bag module and SAS control module • Driver-side side air bag module malfunction • SAS control module malfunction

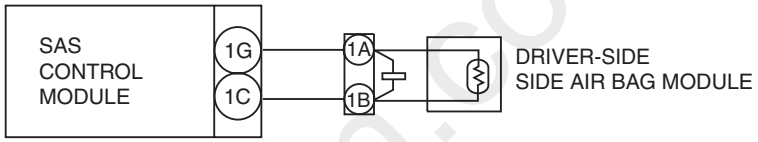



SAS CONTROL MODULE WIRING HARNESS-SIDE CONNECTOR

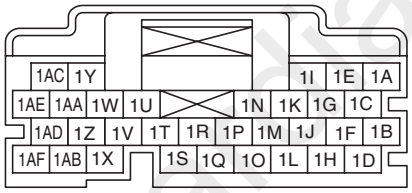



DRIVER-SIDE SIDE AIR BAG MODULE WIRING HARNESS-SIDE CONNECTOR





carmanuals.com

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT DRIVER-SIDE SIDE AIR BAG MODULE CONNECTOR** **Warning** **• Handling the component parts improperly can accidentally operate (deploy) the air bag modules and pre-tensioner seat belts, which may seriously injure you. Read the service warnings/cautions and the workshop manual before handling the air bag system components. (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the driver-side side air bag module connector installed to the lower side of the seat cushion of the front seat. (See FRONT SEAT REMOVAL/ INSTALLATION.) • Inspect the driver-side side air bag module connector. (Corrosion, damage, and disconnected pins) • Is there any malfunction of the driver-side side air bag module connector?	Yes	Replace the malfunctioning part, then go to Step 6.
		No	Go to the next step.

cardiagn.com

Step	Inspection		Action
2	**INSPECT DRIVER-SIDE SIDE AIR BAG MODULE CIRCUIT FOR SHORT TO GROUND** • Remove the column cover. (See COLUMN COVER REMOVAL/ INSTALLATION.) • Disconnect the clock spring connector. (See CLOCK SPRING REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/ INSTALLATION.) • Disconnect the passenger-side air bag module connector. (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Disconnect the passenger-side front seat connector. (See FRONT SEAT REMOVAL/ INSTALLATION.) • Remove the B-pillar lower trim. (See B-PILLAR LOWER TRIM REMOVAL/ INSTALLATION.) • Disconnect the driver and passenger-side pre-tensioner seat belt connectors. (See FRONT SEAT BELT REMOVAL/ INSTALLATION.) • Remove the headliner. (See HEADLINER REMOVAL/ INSTALLATION.) • Disconnect the driver and passenger-side curtain air bag module connectors. (See CURTAIN AIR BAG MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Disconnect the all SAS control module connectors. (See SAS CONTROL MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — SAS control module terminal 1G — SAS control module terminal 1C **Note** • Inspect for continuity while shaking the wiring harness between the SAS control module and the driver-side side air bag module. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between SAS control module terminal and driver-side side air bag module terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Replace the malfunctioning part. **If there is no common connector:** • Replace the wiring harness which has a short to ground. Go to Step 6.
		No	Go to the next step.

manualsgn.com

Step	Inspection		Action
3	**INSPECT DRIVER-SIDE SIDE AIR BAG MODULE CIRCUIT FOR OPEN CIRCUIT** • Driver-side side air bag module and SAS control module connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — Driver-side side air bag module terminal 1A —SAS control module terminal 1G — Driver-side side air bag module terminal 1B —SAS control module terminal 1C **Note** • Inspect for continuity while shaking the wiring harness between the SAS control module and driver-side side air bag module. • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between SAS control module terminal and driver-side side air bag module terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Replace the malfunctioning part. **If there is no common connector:** • Replace the wiring harness which has an open circuit. Go to Step 6.
4	**INSPECT DRIVER-SIDE SIDE AIR BAG MODULE CIRCUIT FOR SHORT TO POWER SUPPLY** • Driver-side side air bag module and SAS control module connectors are disconnected. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at the following terminals (wiring harness-side): — SAS control module terminal 1G — SAS control module terminal 1C **Note** • Measure the voltage while shaking the wiring harness between the SAS control module and driver-side side air bag module. • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between SAS control module terminal and driver-side side air bag module terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Replace the malfunctioning part. **If there is no common connector:** • Replace the wiring harness which has a short to power supply. Go to Step 6.

cardiagn.com

Step	Inspection		Action
5	**INSPECT DRIVER-SIDE SIDE AIR BAG MODULE** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Connect the SAS control module connectors. • Except for the driver-side side air bag module connector, reconnect all disconnected connectors. • Connect the **SST (Fuel and thermometer checker)** or apply **2 ohms** resistance to the driver-side side air bag module connector terminals 1A and 1B. • Set the **SST (Fuel and thermometer checker)** to **2 ohms**. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Clear the DTC for the SAS control module using the M-MDS. (See CLEARING DTC [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Perform the DTC inspection for the SAS control module using the M-MDS. (See DTC INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Are the same DTCs present?	Yes	Go to the next step.
		No	Replace the driver-side side air bag module. (See SIDE AIR BAG MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) Then go to the next step.
6	**PERFORM SAS CONTROL MODULE DTC INSPECTION** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the **SST (Fuel and thermometer checker)** or the **2 ohms** resistance. • Connect the driver-side side air bag module connector. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Clear the DTC for the SAS control module using the M-MDS. (See CLEARING DTC [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Perform the DTC inspection for the SAS control module using the M-MDS. (See DTC INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Are the same DTCs present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the SAS control module. (See SAS CONTROL MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
		No	DTC troubleshooting completed.

cardiagn.com