

DTC B1129:11/B1129:12/B1129:13/B1129:19/B1129:1A [TWO-STEP DEPLOYMENT CONTROL SYSTEM]


id0802b2821700

System malfunction location	• B1129:11: Passenger-side curtain air bag module circuit short to body ground • B1129:12: Passenger-side curtain air bag module circuit short to power supply • B1129:13: Passenger-side curtain air bag module circuit open circuit or resistance high • B1129:19: Short circuit to passenger-side curtain air bag module and other air bag module circuits • B1129:1A: Passenger-side curtain air bag module circuit resistance low
Detection condition	**Warning** **• Detection conditions are for understanding the DTC outline before performing an inspection. Performing an inspection according to only the detection conditions may cause injury due to an operating error, or damage the system. When performing an inspection, always follow the inspection procedure.** • Resistance **other than 0.88–6.33 ohms** detected in passenger-side curtain air bag module circuit • Wiring harness between the passenger-side curtain air bag module and SAS control module has a malfunction
Fail-safe function	Not applicable
Possible cause	• Passenger-side curtain air bag module connector malfunction • Short circuit to power supply or body ground in the wiring harness between the passenger-side curtain air bag module and SAS control module • Open circuit in the wiring harness between the passenger-side curtain air bag module and SAS control module • Passenger-side curtain air bag module malfunction • SAS control module malfunction

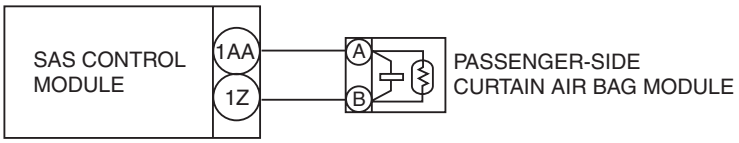



SAS CONTROL MODULE WIRING HARNESS-SIDE CONNECTOR

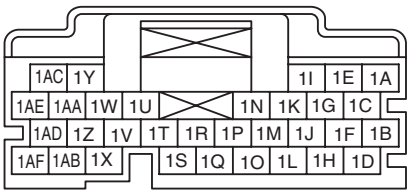



PASSENGER-SIDE CURTAIN AIR BAG MODULE WIRING HARNESS-SIDE CONNECTOR





Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT PASSENGER-SIDE CURTAIN AIR BAG MODULE CONNECTOR** **Warning** **• Handling the component parts improperly can accidentally operate (deploy) the air bag modules and pre-tensioner seat belts, which may seriously injure you. Read the service warnings/cautions and the workshop manual before handling the air bag system components. (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Remove the headliner. (See HEADLINER REMOVAL/ INSTALLATION.) • Disconnect the passenger-side curtain air bag module connector. (See CURTAIN AIR BAG MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Inspect the passenger-side curtain air bag module connector. (Corrosion, damage, and disconnected pins) • Is there any malfunction of the passenger-side curtain air bag module connector?	Yes	Replace the malfunctioning part, then go to Step 6.
		No	Go to the next step.

Step	Inspection		Action
2	**INSPECT PASSENGER-SIDE CURTAIN AIR BAG MODULE CIRCUIT FOR SHORT TO GROUND** • Remove the column cover. (See COLUMN COVER REMOVAL/ INSTALLATION.) • Disconnect the clock spring connector. (See CLOCK SPRING REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/ INSTALLATION.) • Disconnect the passenger-side air bag module connector. (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Disconnect the driver and passenger-side front seat connectors. (See FRONT SEAT REMOVAL/ INSTALLATION.) • Disconnect the driver and passenger-side pre-tensioner seat belt connectors. (See FRONT SEAT BELT REMOVAL/ INSTALLATION.) • Disconnect the driver-side curtain air bag module connector. (See CURTAIN AIR BAG MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Disconnect the all SAS control module connectors. (See SAS CONTROL MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — SAS control module terminal 1AA — SAS control module terminal 1Z **Note** • Inspect for continuity while shaking the wiring harness between the SAS control module and the passenger-side curtain air bag module. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between SAS control module terminal and passenger-side curtain air bag module terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Replace the malfunctioning part. **If there is no common connector:** • Replace the wiring harness which has a short to ground. Go to Step 6.
		No	Go to the next step.

Step	Inspection		Action
3	**INSPECT PASSENGER-SIDE CURTAIN AIR BAG MODULE CIRCUIT FOR OPEN CIRCUIT** • Passenger-side curtain air bag module and SAS control module connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — Passenger-side curtain air bag module terminal A—SAS control module terminal 1AA — Passenger-side curtain air bag module terminal B—SAS control module terminal 1Z **Note** • Inspect for continuity while shaking the wiring harness between the SAS control module and passenger-side curtain air bag module. • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between SAS control module terminal and passenger-side curtain air bag module terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Replace the malfunctioning part. **If there is no common connector:** • Replace the wiring harness which has an open circuit. Go to Step 6.
4	**INSPECT PASSENGER-SIDE CURTAIN AIR BAG MODULE CIRCUIT FOR SHORT TO POWER SUPPLY** • Passenger-side curtain air bag module and SAS control module connectors are disconnected. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at the following terminals (wiring harness-side): — SAS control module terminal 1AA — SAS control module terminal 1Z **Note** • Measure the voltage while shaking the wiring harness between the SAS control module and passenger-side curtain air bag module. • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between SAS control module terminal and passenger-side curtain air bag module terminal. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Replace the malfunctioning part. **If there is no common connector:** • Replace the wiring harness which has a short to power supply. Go to the next step.

Step	Inspection		Action
5	**INSPECT PASSENGER-SIDE CURTAIN AIR BAG MODULE** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Connect the SAS control module connectors. • Except for the passenger-side curtain air bag module connector, reconnect all disconnected connectors. • Connect the **SST (Fuel and thermometer checker)** or apply **2 ohms** resistance to the passenger-side curtain air bag module connector terminals A and B. • Set the **SST (Fuel and thermometer checker)** to **2 ohms**. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Clear the DTC for the SAS control module using the M-MDS. (See CLEARING DTC [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Perform the DTC inspection for the SAS control module using the M-MDS. (See DTC INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Are the same DTCs present?	Yes	Go to the next step.
		No	Replace the passenger-side curtain air bag module. (See CURTAIN AIR BAG MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) Then go to the next step.
6	**PERFORM SAS CONTROL MODULE DTC INSPECTION** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the **SST (Fuel and thermometer checker)** or the **2 ohms** resistance. • Connect the passenger-side curtain air bag module connector. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Clear the DTC for the SAS control module using the M-MDS. (See CLEARING DTC [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Perform the DTC inspection for the SAS control module using the M-MDS. (See DTC INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Are the same DTCs present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the SAS control module. (See SAS CONTROL MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
		No	DTC troubleshooting completed.