
AIR BAG SYSTEM WARNING LIGHT ILLUMINATES CONSTANTLY

id080300814400

Description	• Air bag system warning light is illuminated constantly and remains illuminated after 6 s have elapsed.
Possible cause	• Weak battery • SAS control module connectors are poorly connected • Instrument cluster connector is poorly connected • SAS control module malfunction • Instrument cluster malfunction • SAS control module power supply circuit malfunction — Short to ground in wiring harness between SRS1 7.5 A fuse and SAS control module terminal 2AD — SRS1 7.5 A fuse malfunction — Open circuit in wiring harness between IG1 relay and SAS control module terminal 2AD

System Wiring Diagram

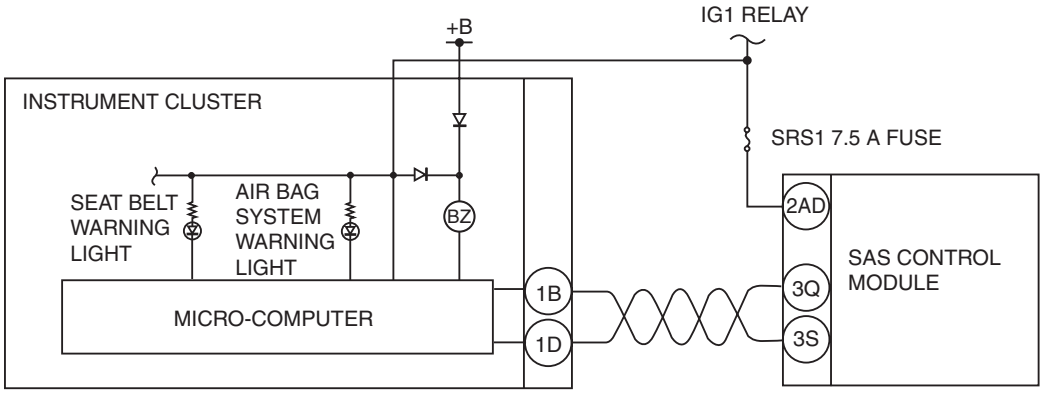

am2zzw00012422

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT BATTERY** • Measure the voltage of battery. • Is the voltage **8 V or more**?	Yes	Go to the next step.
		No	Battery is weak. Inspect charge/discharge system, then go to Step 8. (See BATTERY INSPECTION.)
2	**VERIFY THAT SAS CONTROL MODULE CONNECTOR IS CONNECTED** **Warning** **• Handling the component parts improperly can accidentally operate (deploy) the air bag module, which may seriously injure you. Read the service warnings/cautions and the workshop manual before handling the air bag system components.** **(See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)(See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].)** **(See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)(See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.) • Remove the rear console. (See REAR CONSOLE REMOVAL/INSTALLATION.) • Are all SAS control module connectors securely connected?	Yes	Go to the next step.
		No	Reconnect the connector properly, then go to Step 8.

Step	Inspection		Action
3	**VERIFY THAT INSTRUMENT CLUSTER CONNECTOR IS CONNECTED** • Disconnect the instrument cluster connector. (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.) • Are all instrument cluster connectors securely connected?	Yes	Go to the next step.
		No	Reconnect the connector properly, then go to Step 8.
4	**INSPECT DTCs IN SAS CONTROL MODULE** • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.) • Switch the ignition ON (engine off or on). • Clear the DTC for the SAS control module using the M-MDS. (See CLEARING DTC [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See CLEARING DTC [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Inspect the DTC for the SAS control module on-board diagnostic system. (See DTC INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See DTC INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Have DTCs been recorded in memory?	Yes	Perform the applicable DTC inspection, then go to Step 8. (See DTC TABLE [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See DTC TABLE [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
		No	Go to the next step.
5	**INSPECT DTCs IN INSTRUMENT CLUSTER** • Inspect the DTC for the instrument cluster on-board diagnostic system. (See DTC INSPECTION [INSTRUMENT CLUSTER].) • Have DTCs been recorded in memory?	Yes	Perform the applicable DTC inspection, then go to Step 8. (See DTC TABLE [INSTRUMENT CLUSTER].)
		No	Go to the next step.
6	**VERIFY WHERE MALFUNCTION IS IN WARNING LIGHTS INDICATION CIRCUIT OR ELSEWHERE** • Turn on all warning lights and indicator lights using the instrument cluster PID WL+IL of simulation function using the M-MDS. (See ACTIVE COMMAND MODES INSPECTION [INSTRUMENT CLUSTER].) • Do other warning and indicator lights illuminate?	Yes	Go to the next step.
		No	Repair the instrument cluster. (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.) Then go to Step 8.

Step	Inspection		Action
7	**INSPECT POWER SUPPLY CIRCUIT OF SAS CONTROL MODULE (TERMINAL 2AD)** **Warning** **• Handling the component parts improperly can accidentally operate (deploy) the air bag module, which may seriously injure you. Read the service warnings/cautions and the workshop manual before handling the air bag system components.** **(See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)(See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].)** **(See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)(See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)** • Switch the ignition off. • Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.) • Remove the column cover. (See COLUMN COVER REMOVAL/INSTALLATION.) • Disconnect the clock spring connector. (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.) • Disconnect the passenger-side air bag module connector. (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Disconnect the driver and passenger-side front seat connector. (See FRONT SEAT REMOVAL/INSTALLATION.) • Remove the headliner. (See HEADLINER REMOVAL/INSTALLATION.) • Disconnect the driver and passenger-side curtain air bag module connectors. (See CURTAIN AIR BAG MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See CURTAIN AIR BAG MODULE REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].) • Remove the B-pillar lower trim. (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.) • Disconnect the driver and passenger-side pre-tensioner seat belt connectors. • Disconnect the driver and passenger-side lap pre-tensioner seat belt connector. (See FRONT SEAT BELT REMOVAL/INSTALLATION.) • Disconnect all SAS control module connectors. (See SAS CONTROL MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See SAS CONTROL MODULE REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM] • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at SAS control module at wiring harness-side connector terminal 2AD. • Is the voltage **8 V—16V**?	Yes	Go to the next step.
		No	Inspect the SRS1 7.5 A fuse. • If a fuse is burnt out: — Repair or replace the wiring harness which is shorted to ground. — Replace the fuse. • Replace the fuse. — Replace the fuse. • If the fuse is normal: — Repair or replace the wiring harness which has an open circuit. Go to the next step.

Step	Inspection		Action
8	**VERIFY THAT MALFUNCTION SYMPTOMS DO NOT RECUR AFTER REPAIR**	Yes	Complete troubleshooting, then explain repairs to customer.
	• Connect the SAS control module connectors. • Reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.) • Switch the ignition ON (engine off or on). • Does the air bag system warning light illuminate for **approx. 6 s** and turn off?	No	Recheck malfunction symptoms, then repeat from Step 1 if malfunction recurs.