
CRASH ZONE SENSOR [TWO-STEP DEPLOYMENT CONTROL SYSTEM]

id0810b1511300

Purpose
- The crash zone sensor detects an impact during a frontal or frontal offset collision to the vehicle.

Function
- The crash zone sensor converts the detected impact to an electrical signal.

Construction
- The crash sensor is built into the crash zone sensor.
- The crash zone sensor is located on the shroud panel on the back side of the front bumper.

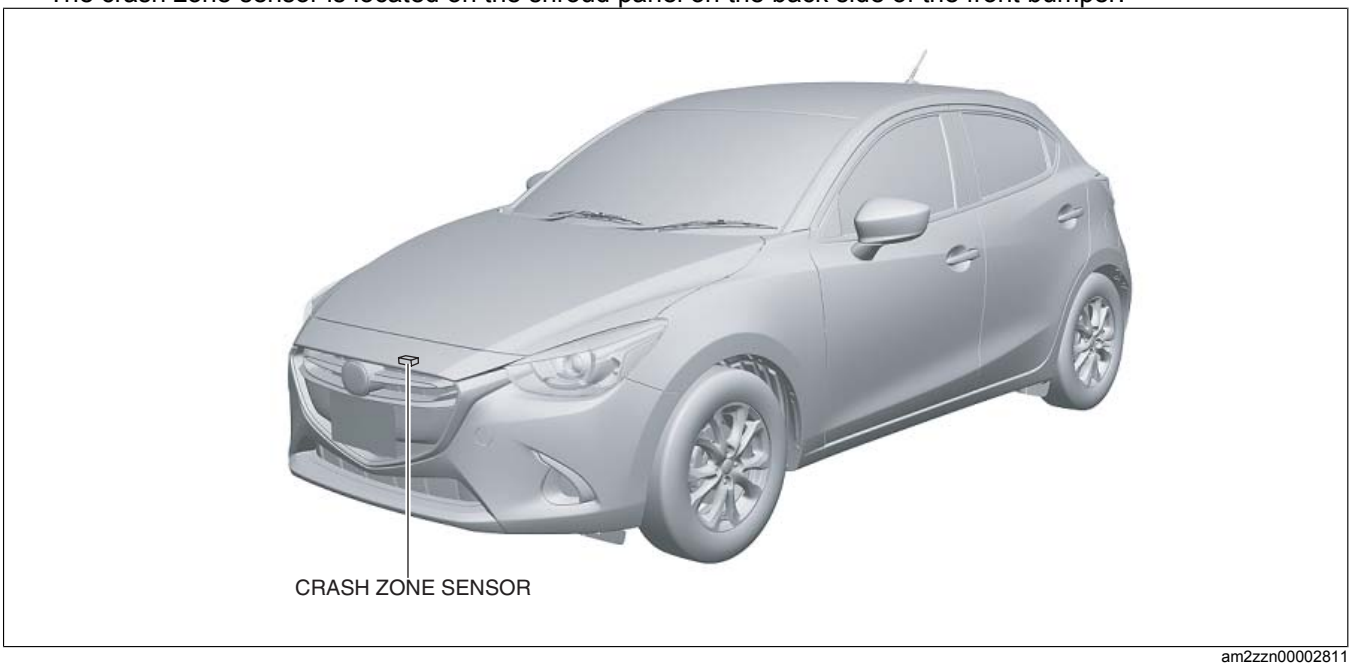

am2zzn00002811

Operation
- For the crash zone sensor operation, refer to the AIR BAG SYSTEM. (See AIR BAG SYSTEM [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)

Fail-safe
- Not applicable