
## CRASH ZONE SENSOR REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM]

id0810b1800500

**Warning**


- **Handling the crash zone sensor improperly can accidentally deploy the air bags and pre-tensioner seat belts, which may seriously injure you. Read the air bag system service warnings and cautions before handling the crash zone sensor. (See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)**

1. Switch the ignition off.
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the front bumper. (See FRONT BUMPER REMOVAL.)(See FRONT BUMPER INSTALLATION.)
4. Remove the bolt.

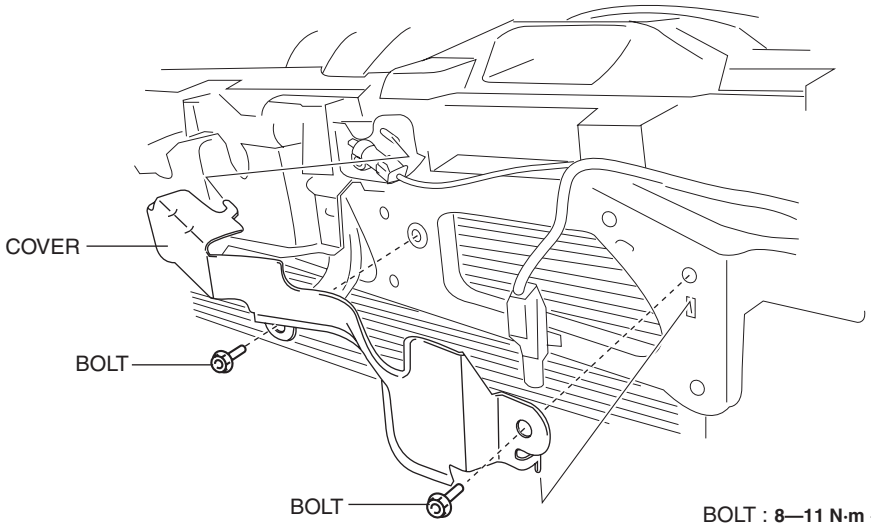


am2zzw00009690

5. Remove the cover.
6. Remove the bolt.

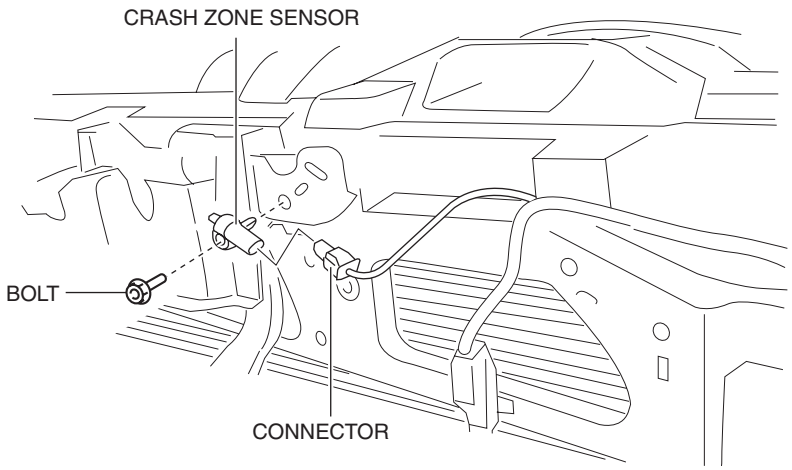



am2zzw00009691

7. Disconnect the connector. (See Connector Disconnect Note.)
8. Remove the crash zone sensor.
9. Install in the reverse order of removal.
10. Switch the ignition ON (engine off or on).
11. Verify that the air bag/seat belt pre-tensioner system warning light illuminates for **approx. 6 s** and turns off.
    - If the air bag/seat belt pre-tensioner system warning light does not operate normally, refer to the on-board diagnostic system (air bag system) and perform inspection of the system. (See FLOWCHART [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)

**Connector Disconnect Note**

1. Pull out the connector lock lever in the direction of arrow (1) shown in the figure.

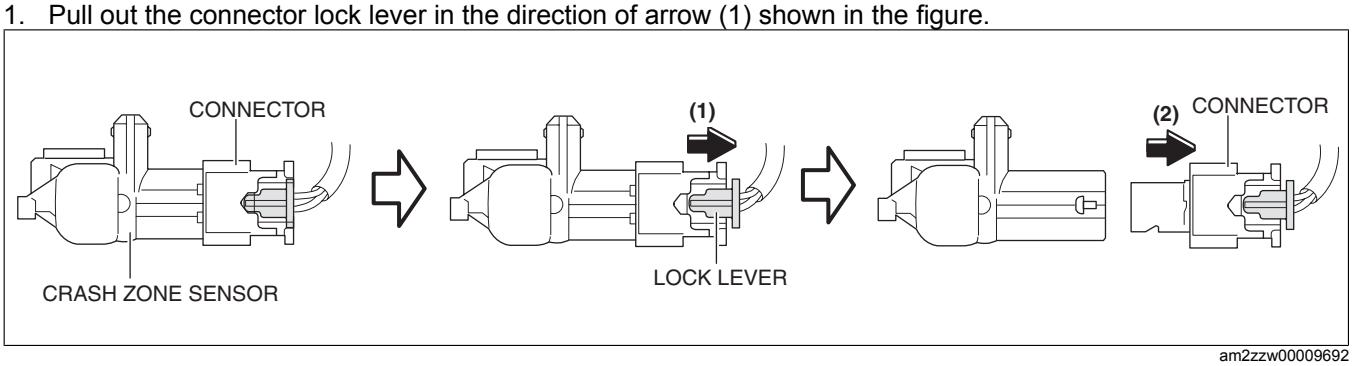


am2zzw00009692

2. Move the connector in the direction of arrow (2) shown in the figure to disconnect it.