AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM]

id0810b1801100

Warning
- **A live (undeployed) air bag module or pre-tensioner seat belt may accidentally operate (deploy) when it is disposed of and cause serious injury. Do not dispose of a live (undeployed) air bag module or pre-tensioner seat belt. If the SSTs (Deployment tool and Adapter harness) are not available, consult the nearest Mazda representative for assistance.**

Caution
- **Deploying the air bag modules or pre-tensioner seat belts inside the vehicle may cause damage to the vehicle interior. When the vehicle is not to be scrapped, always deploy the air bag modules or pre-tensioner seat belts outside the vehicle.**

- If the vehicle is to be scrapped, or when disposing of any air bag modules or pre-tensioner seat belts, operate (deploy) them inside the vehicle by following the deployment procedure below and using the **SST (Deployment tool)**.
- When disposing of an operated (deployed) air bag module and pre-tensioner seat belt, refer to “AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DISPOSAL PROCEDURES”. (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DISPOSAL PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)

Deployment Procedure for Inside of Vehicle
1. Inspect the **SST (Deployment tool)**. (See INSPECTION OF SST (DEPLOYMENT TOOL) [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
2. Move the vehicle to an open space, away from strong winds, and close all of the vehicle doors and windows.
3. Switch the ignition off.
4. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
5. Follow the procedure below for operating (deploying) the applicable air bag module or pre-tensioner seat belt.


Note
- The connector part of the air bag module, pre-tensioner seat belt, and the **SST (Adapter harness)** burns out from the high heat when the inflator is operated (deployed).

Driver-side Air Bag Module

Warning
- **The driver-side air bag module is a dual inflator type. If one inflator is forced to operate (deploy), the other may operate (deploy) accidentally. To prevent injury while disposing of the air bag module, make sure to operate (deploy) both driver-side air bag module inflators simultaneously, following the procedure below.**


Note
- The SSTs, two types of adapter harnesses (for inflators No.1 and No.2) and two deployment tools are to be used to operate (deploy) the driver-side air bag module.

1. Remove the driver-side air bag module. (See DRIVER-SIDE AIR BAG MODULE REMOVAL [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
2. Connect the **SST (Adapter harness)** to the driver-side air bag module as shown in the figure.
3. Install the driver-side air bag module. (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)

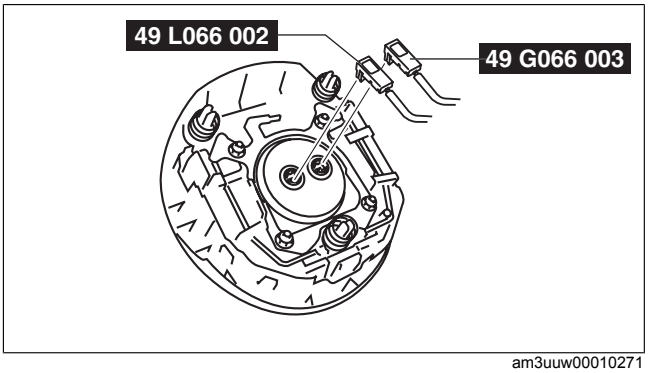


am3uuw00010271

4. Connect the **SST (Deployment tool)** to the **SST (Adapter harness)**.

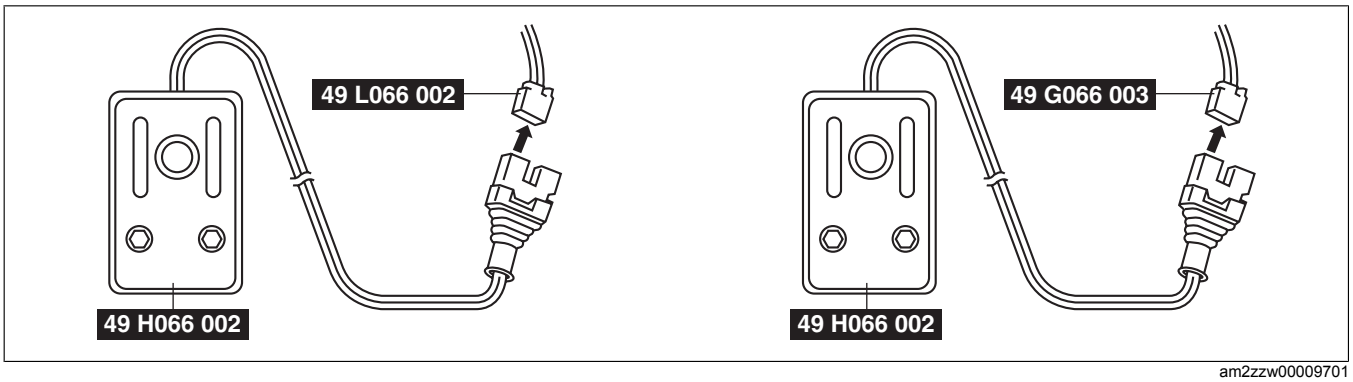

am2zzw00009701

5. Connect the **SST (Deployment tool)** to the battery. Connect the power supply red clip to the positive battery terminal, and the black clip to the negative battery terminal.
6. Verify that the red lamp on the **SST (Deployment tool)** is illuminated.
7. Verify that all persons are standing **at least 6 m {20 ft}** away from the vehicle.
8. Press the activation switch on the **SST (Deployment tool)** connected with **49 L066 002** (a yellow connector) of the **SST (Adapter harness)**, and after **3 s**, press the activation switch on the other **SST (Deployment tool)** to operate (deploy) the air bag module (both inflators).

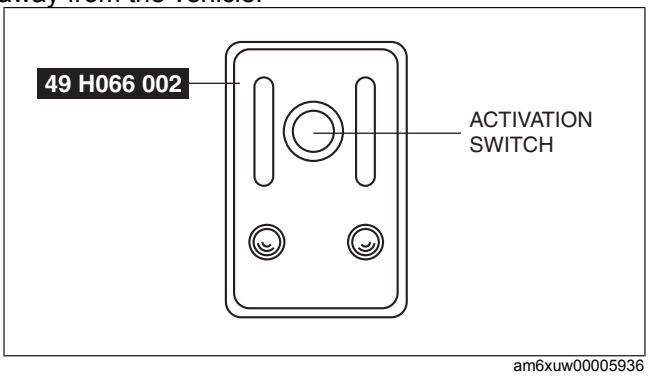


am6xuw00005936

Warning
- **Verify that air bag module operation (explosive) sound occurs twice. If no operation (explosive) sound was heard or a single operation (explosive) sound was heard, both inflators would not have operated (deployed) properly. This may cause serious injury if the air bag module operates (deploy) unexpectedly. If the two operation (explosive) sounds are not heard, perform Step 8 again. If a total of two operation (explosive) sounds cannot be verified even though Step 8 is performed again, leave the air bag module alone for 30 min or more before approaching it again.**
- **The air bag module is very hot immediately after it is operated (deployed). You can get burned. Do not touch the air bag module for at least 15 min after deployment.**


9. Disconnect the **SST (Deployment tool)** from the **SST (Adapter harness)**.

Passenger-side Air Bag Module
1. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
2. Remove the cap.
3. Using a flathead screwdriver, lift the locking device carefully, however do not remove it.
4. Disconnect the passenger-side air bag module connector.

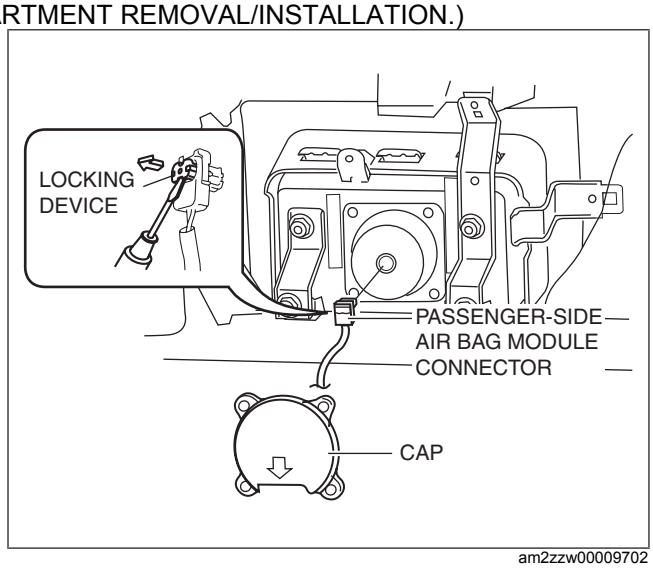


am2zzw00009702

5. Connect the **SST (Adapter harness)** to the passenger-side air bag module as shown in the figure.

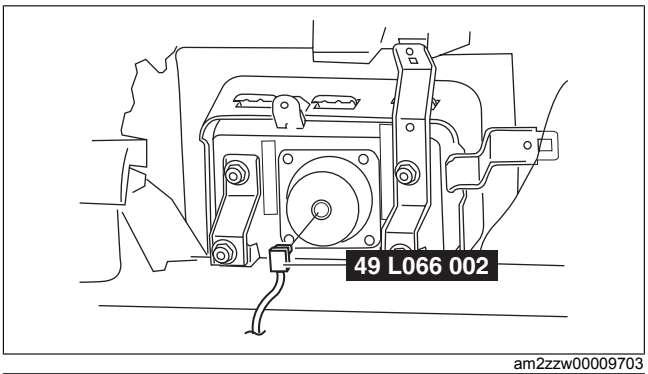

am2zzw00009703

6. Connect the **SST (Deployment tool)** to the **SST (Adapter harness)**.
7. Connect the **SST (Deployment tool)** to the battery. Connect the power supply red clip to the positive battery terminal, and the black clip to the negative battery terminal.
8. Verify that the red lamp on the **SST (Deployment tool)** is illuminated.
9. Verify that all persons are standing **at least 6 m {20 ft}** away from the vehicle.

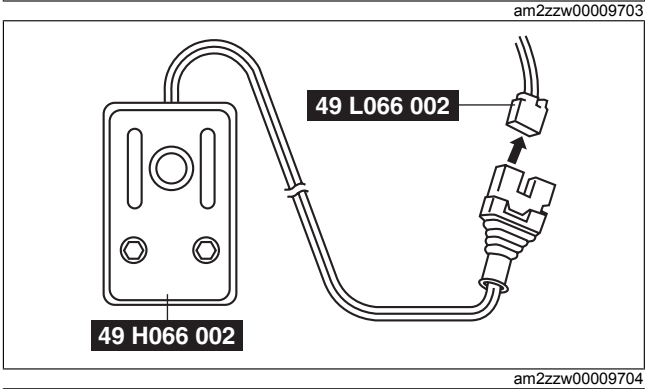


am2zzw00009704

10. Press the activation switch on the **SST (Deployment tool)** to operate (deploy) the air bag module.

    Warning
    - **The air bag module is very hot immediately after it is operated (deployed). You can get burned. Do not touch the air bag module for at least 15 min after deployment.**


11. Disconnect the **SST (Deployment tool)** from the **SST (Adapter harness)**.

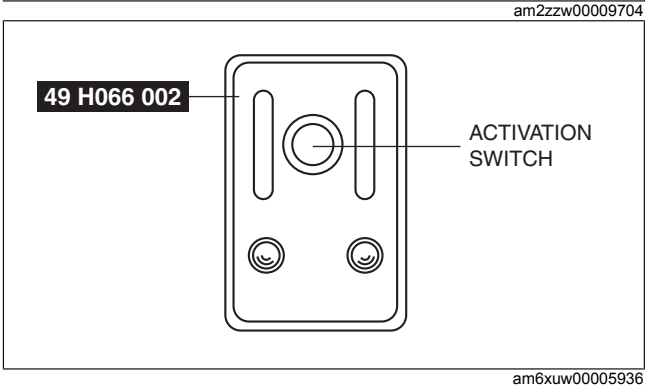

am6xuw00005936


Side Air Bag Module

1. Disconnect the front seat connector.

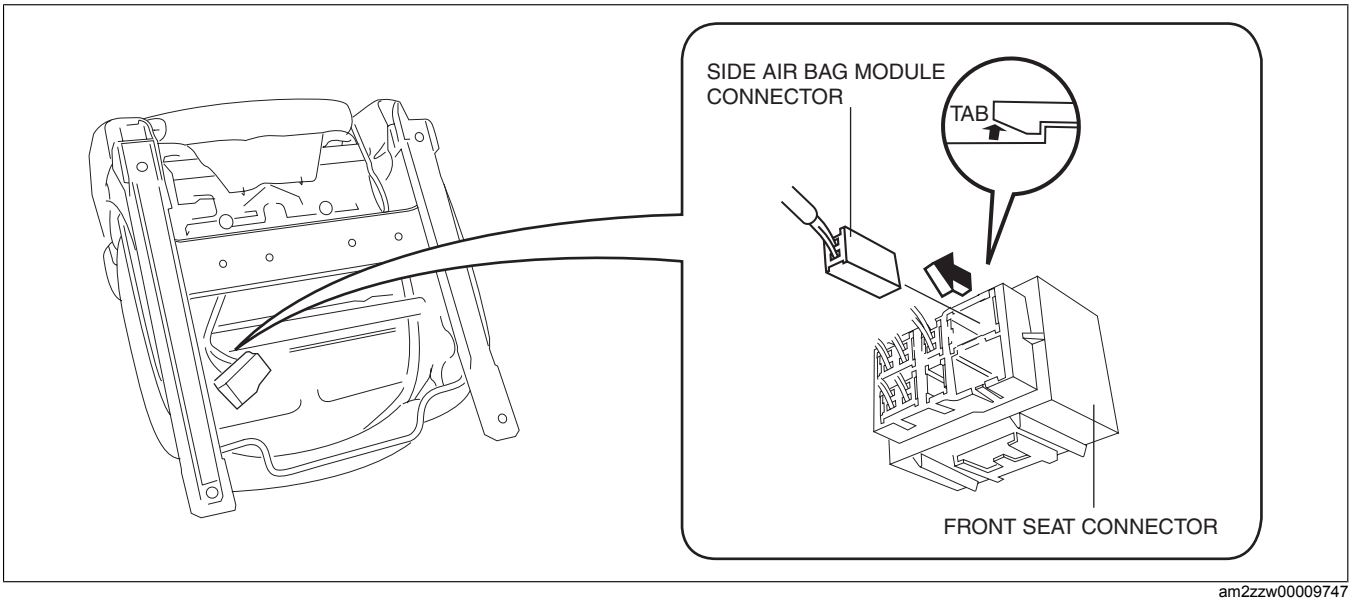


am2zzw00009747

2. Connect the **SST (Adapter harness)** to the front seat connector as shown in the figure.

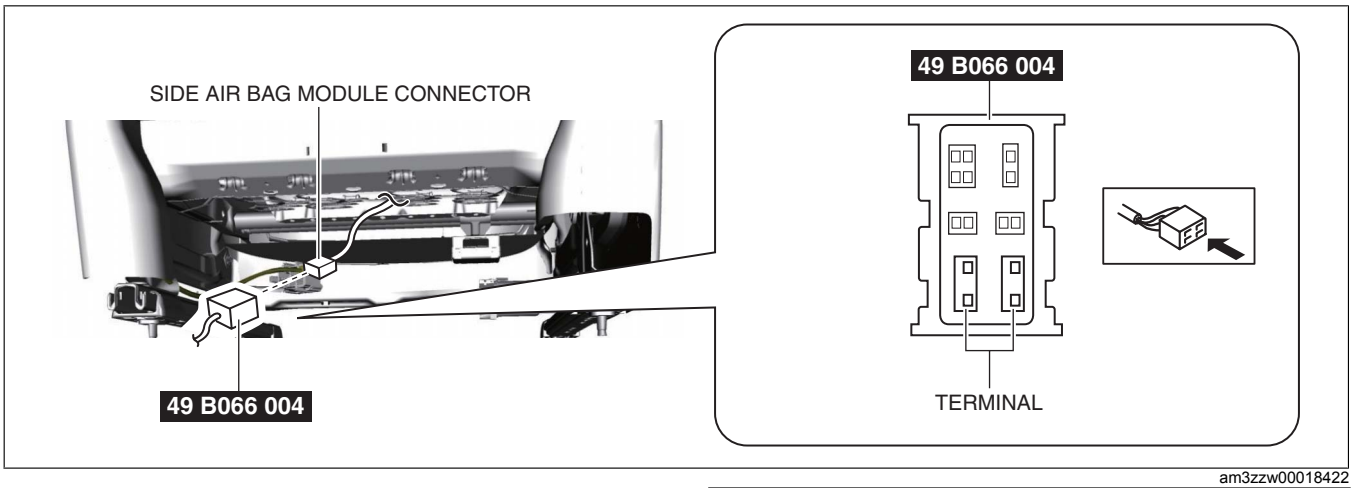

am3zzw00018422

3. Connect the **SST (Deployment tool)** to the **SST (Adapter harness)**.
4. Connect the **SST (Deployment tool)** to the battery. Connect the power supply red clip to the positive battery terminal, and the black clip to the negative battery terminal.
5. Verify that the red lamp on the **SST (Deployment tool)** is illuminated.
6. Verify that all persons are standing **at least 6 m {20 ft}** away from the vehicle.

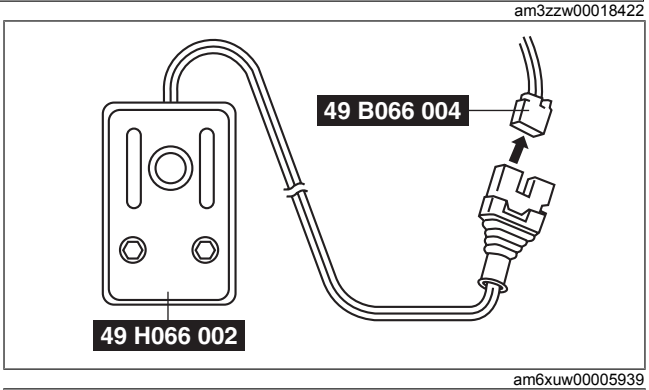


am6xuw00005939

7. Press the activation switch on the **SST (Deployment tool)** to operate (deploy) the side air bag module.

   Warning
   - **The air bag module is very hot immediately after it is operated (deployed). You can be burned. Do not touch the air bag module for at least 15 min after deployment.**

8. Disconnect the **SST (Deployment tool)** from the **SST (Adapter harness)**.

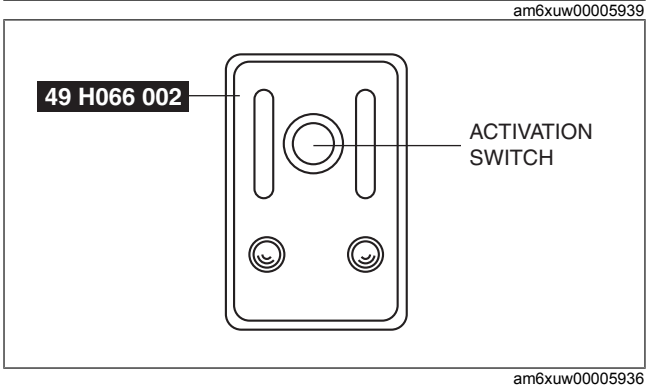


am6xuw00005936

Curtain Air Bag Module


1. Remove the following parts:
   (1) A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
   (2) Sunvisor (See SUNVISOR REMOVAL/INSTALLATION.)
   (3) Front map light (dual light type) (See FRONT MAP LIGHT REMOVAL/INSTALLATION.)
   (4) Assist handle (See ASSIST HANDLE REMOVAL/INSTALLATION.)
   (5) Coat hook (See HEADLINER REMOVAL/INSTALLATION.)
   (6) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (7) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (8) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
   (9) Adjust anchor cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (10) Upper anchor installation bolt on the front seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (11) B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
   (12) Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
   (13) Lower anchor installation bolt on the rear center seat belt (See REAR CENTER SEAT BELT REMOVAL/INSTALLATION.)
   (14) Rear seat back (See REAR SEAT BACK REMOVAL/INSTALLATION.)
   (15) Rear package tray (See REAR PACKAGE TRAY REMOVAL/INSTALLATION.)
   (16) Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)
   (17) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
   (18) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
   (19) C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
2. Peel back the headliner.

3. Using a flathead screwdriver, lift the locking device carefully, however do not remove it.
4. Disconnect the curtain air bag module connector.
5. Connect the **SST (Adapter harness)** to the curtain air bag module as shown in the figure.

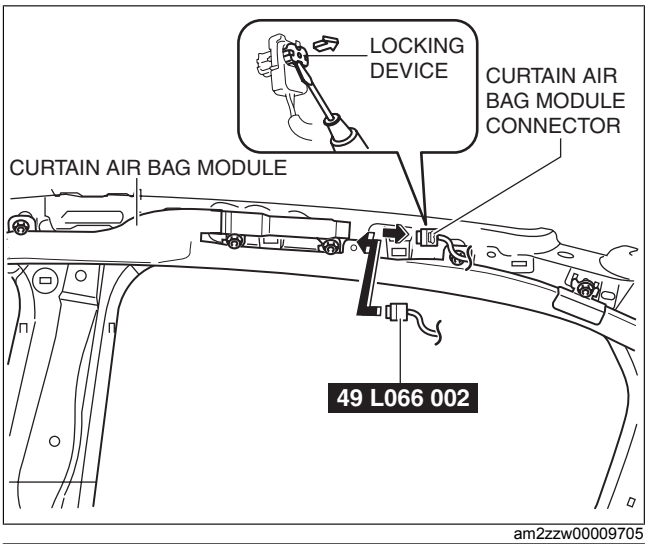

am2zzw00009705

6. Connect the **SST (Deployment tool)** to the **SST (Adapter harness)**.
7. Connect the **SST (Deployment tool)** to the battery. Connect the power supply red clip to the positive battery terminal, and the black clip to the negative battery terminal.
8. Verify that the red lamp on the **SST (Deployment tool)** is illuminated.
9. Verify that all persons are standing **at least 6 m {20 ft}** away from the vehicle.

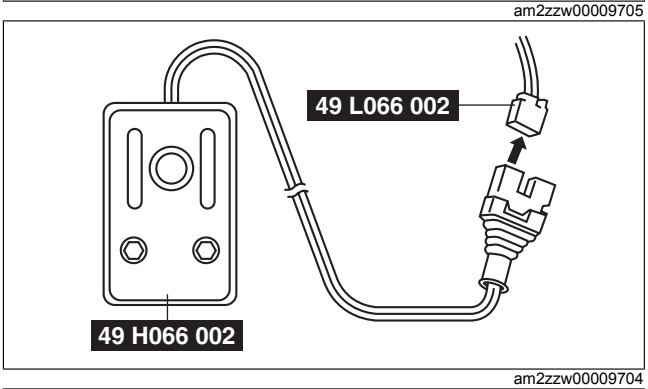


am2zzw00009704

10. Press the activation switch on the **SST (Deployment tool)** to operate (deploy) the curtain air bag module.

    Warning
    - **The air bag module is very hot immediately after it is operated (deployed). You can be burned. Do not touch the air bag module for at least 15 min after deployment.**


11. Disconnect the **SST (Deployment tool)** from the **SST (Adapter harness)**.

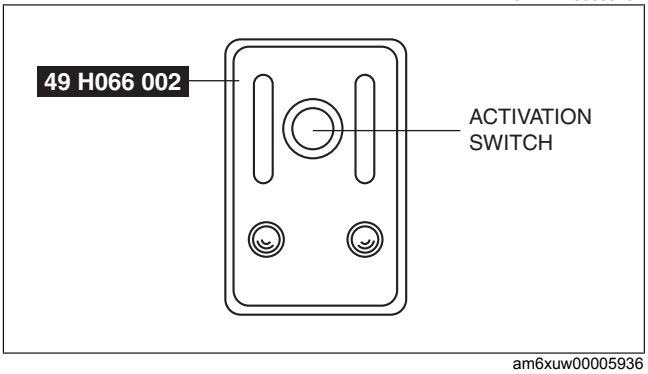

am6xuw00005936


Front Pre-tensioner Seat Belt

1. Remove the following parts:
   (1) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (3) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
2. Using a flathead screwdriver, lift the locking device carefully, however do not remove it.
3. Disconnect the front pre-tensioner seat belt connector.
4. Connect the **SST (Adapter harness)** as shown in the figure.

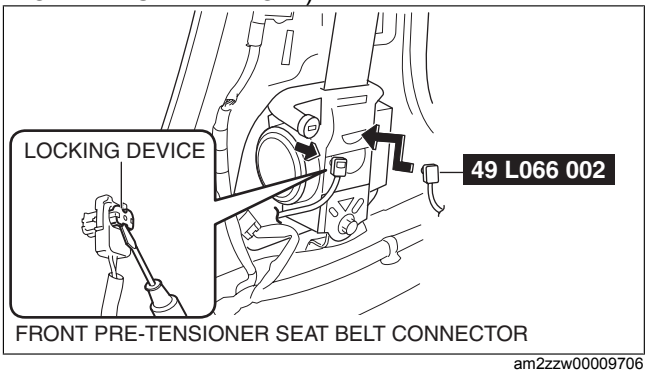

am2zzw00009706

5. Connect the **SST (Deployment tool)** to the **SST (Adapter harness)**.
6. Connect the **SST (Deployment tool)** to the battery. Connect the power supply red clip to the positive battery terminal, and the black clip to the negative battery terminal.
7. Verify that the red lamp on the **SST (Deployment tool)** is illuminated.
8. Verify that all persons are standing **at least 6 m {20 ft}** away from the vehicle.

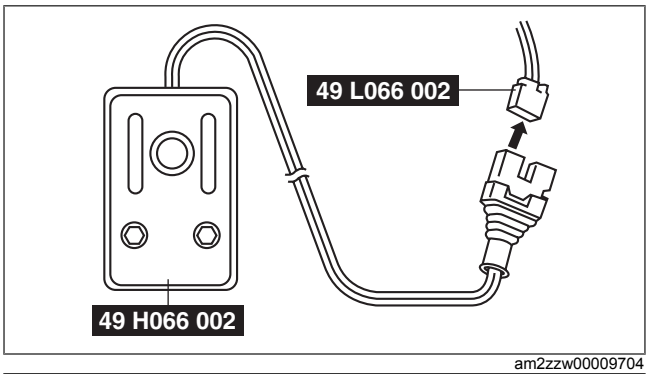


am2zzw00009704

9. Press the activation switch on the **SST (Deployment tool)** to operate (deploy) the front pre-tensioner seat belt.

Warning
- **The front pre-tensioner seat belt is very hot immediately after it is operated (deployed). You can be burned. Do not touch the front pre-tensioner seat belt for at least 15 min after deployment.**


10. Disconnect the **SST (Deployment tool)** from the **SST (Adapter harness)**.

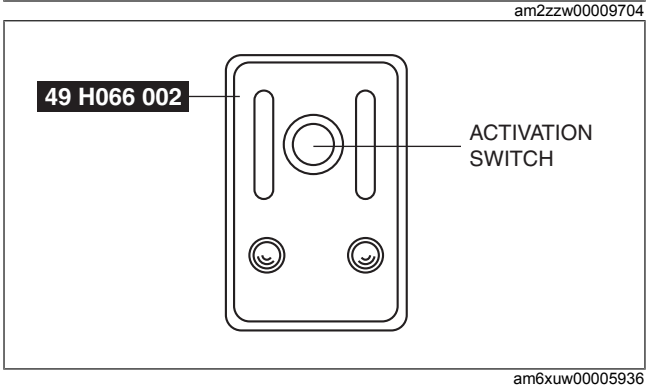

am6xuw00005936


Rear Pre-tensioner Seat Belt

1. Remove the following parts:
   (1) Rear package tray (See REAR PACKAGE TRAY REMOVAL/INSTALLATION.)
   (2) Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)
   (3) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
   (4) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
   (5) Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
   (6) Lower anchor installation bolt on the rear seat belt (See REAR SEAT BELT REMOVAL/INSTALLATION.)
   (7) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (8) Rear seat back (See REAR SEAT BACK REMOVAL/INSTALLATION.)
   (9) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
   (10) C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
2. Using a flathead screwdriver, lift the locking device carefully, however do not remove it.
3. Disconnect the rear pre-tensioner seat belt connector.
4. Connect the **SST (Adapter harness)** as shown in the figure.

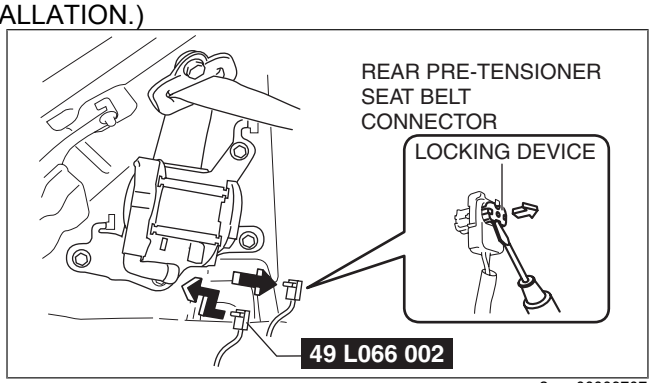


am2zzw00009707

5. Connect the **SST (Deployment tool)** to the **SST (Adapter harness)**.
6. Connect the **SST (Deployment tool)** to the battery. Connect the power supply red clip to the positive battery terminal, and the black clip to the negative battery terminal.
7. Verify that the red lamp on the **SST (Deployment tool)** is illuminated.
8. Verify that all persons are standing **at least 6 m {20 ft}** away from the vehicle.

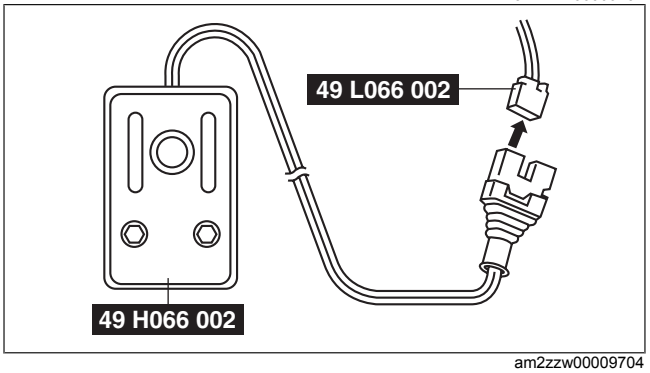

am2zzw00009704

9. Press the activation switch on the **SST (Deployment tool)** to operate (deploy) the rear pre-tensioner seat belt.

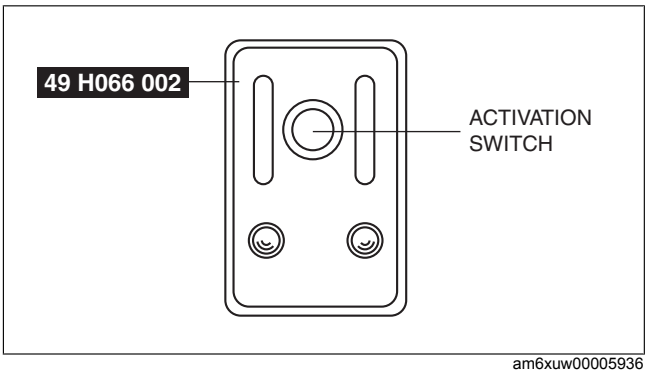

am6xuw00005936

Warning
- **The rear pre-tensioner seat belt is very hot immediately after it is operated (deployed). You can be burned. Do not touch the rear pre-tensioner seat belt for at least 15 min after deployment.**

10. Disconnect the **SST (Deployment tool)** from the **SST (Adapter harness)**.

Deployment Procedure for Outside of Vehicle
1. Inspect the **SST (Deployment tool)**. (See INSPECTION OF SST (DEPLOYMENT TOOL) [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
2. Switch the ignition off.
3. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
4. Follow the procedure below for operating (deploying) the applicable air bag module or pre-tensioner seat belt.


Note
- The connector part of the air bag module, pre-tensioner seat belt, and the **SST (Adapter harness)** burns out from the high heat when the inflator is operated (deployed).

Driver-side Air Bag Module

Warning
- **The driver-side air bag module is a dual inflator type. If one inflator is forced to operate (deploy), the other may operate (deploy) accidentally. To prevent injury while disposing of the air bag module, make sure to operate (deploy) both driver-side air bag module inflators simultaneously, following the procedure below.**


Note
- The SSTs, two types of adapter harnesses (for inflators No.1 and No.2) and two deployment tools are to be used to operate (deploy) the driver-side air bag module.

1. Remove the driver-side air bag module. (See DRIVER-SIDE AIR BAG MODULE REMOVAL [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
2. Wrap the wiring harness (cross section **1.25 mm^2 {0.002 in^2} or more**) at least four times around the position shown in the figure for the driver-side air bag module.

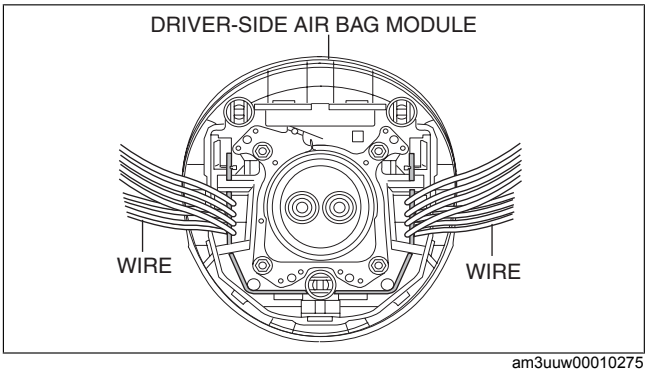

am3uuw00010275


3. Connect the **SST (Adapter harness)** to the driver-side air bag module.

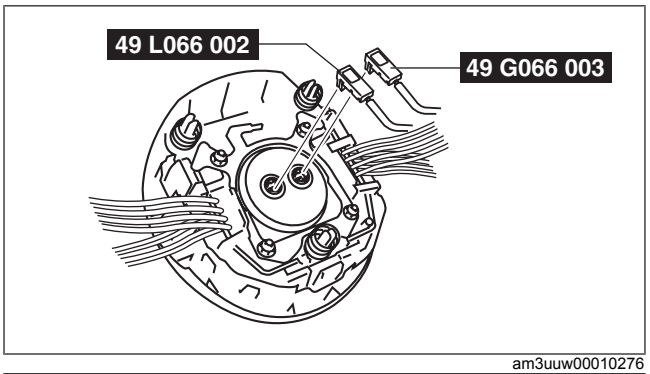

am3uuw00010276


4. Place the driver-side air bag module on the center of the tire wheel with the padded surface facing up. To secure the air bag module to the tire wheel, wrap a wire (cross section **1.25 mm^2 {0.002 in^2} or more**) through the wheel and the bolt installation holes of the air bag module **at least 4 times**.

   Warning
   - **If the air bag module is not properly installed to the tire wheel, serious injury may occur when the module is operated (deployed). When installing the air bag module to the tire wheel, make sure the padded surface is facing up.**

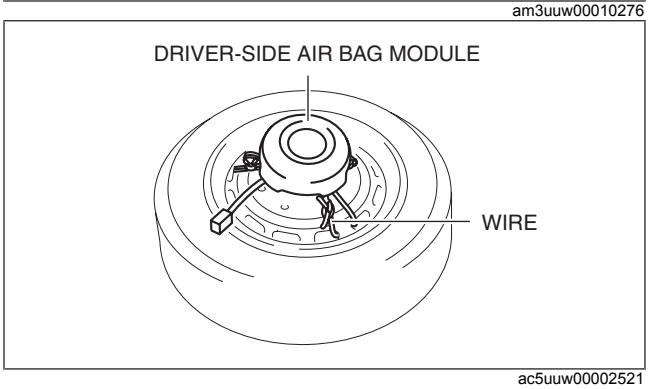


ac5uuw00002521

5. Stack three tires without wheels on top of the tire with the driver-side air bag module, and then stack another tire with a wheel on the very top.

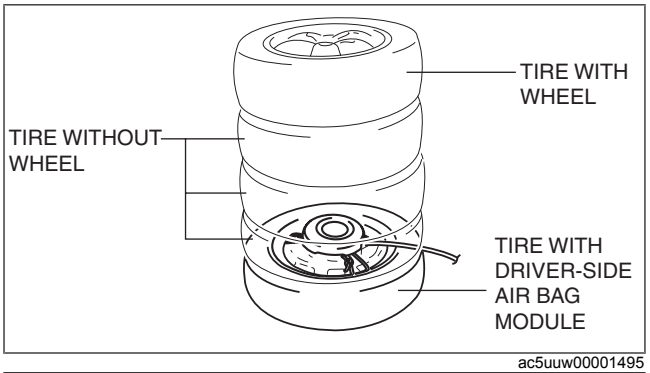


ac5uuw00001495

6. Secure the tires with wire.

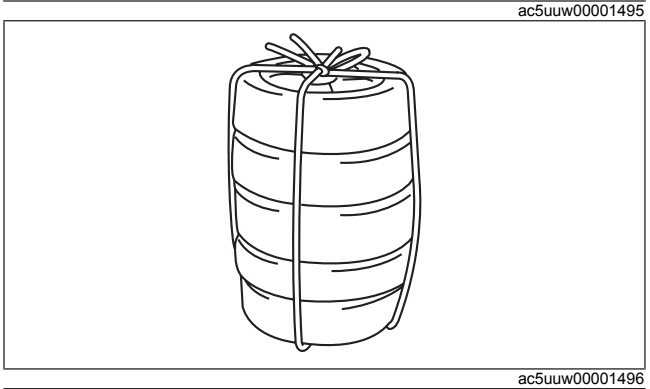

ac5uuw00001496

7. Connect the **SST (Deployment tool)** to the **SST (Adapter harness)**.
8. Connect the **SST (Deployment tool)** to the battery. Connect the power supply red clip to the positive battery terminal, and the black clip to the negative battery terminal.
9. Verify that the red lamp on the **SST (Deployment tool)** is illuminated.
10. Verify that all persons are standing **at least 6 m {20 ft}** away from the driver-side air bag module.

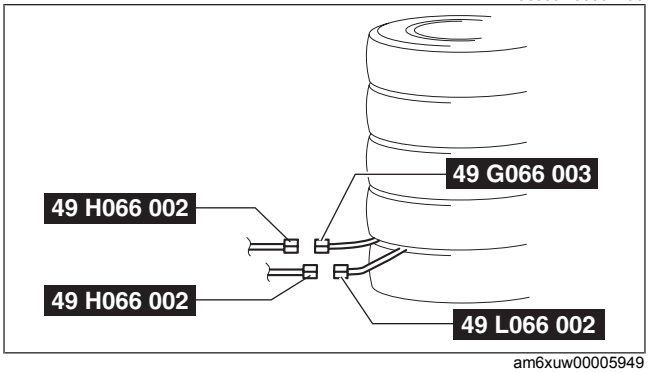

am6xuw00005949

11. Press the activation switch on the **SST (Deployment tool)** connected with **49 L066 002** (a yellow connector) of the **SST (Adapter harness)**, and **after 3 s**, press the activation switch on the other **SST (Deployment tool)** to operate (deploy) the air bag module (both inflators).

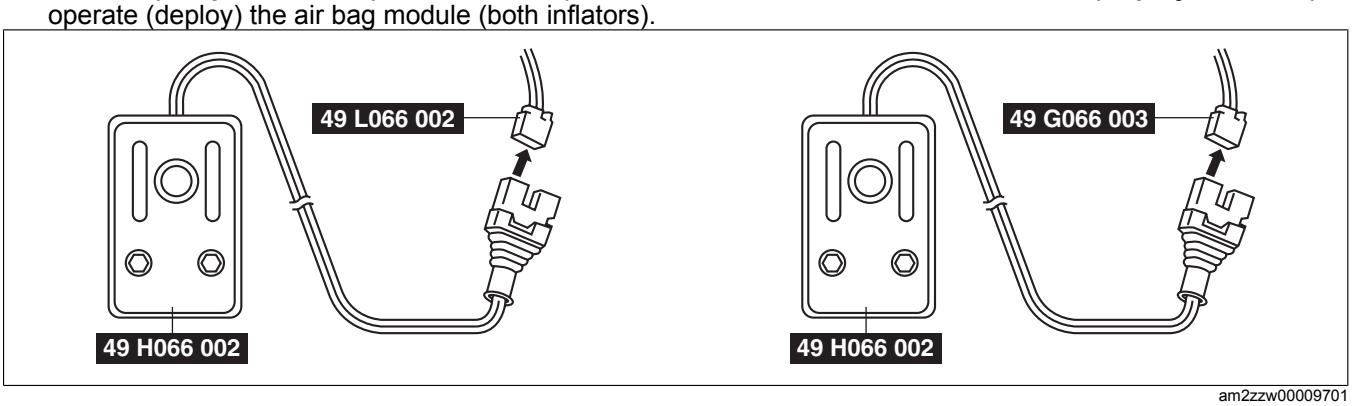


am2zzw00009701

Warning
- **Verify that air bag module operation (explosive) sound occurs twice. If no operation (explosive) sound was heard or a single operation (explosive) sound was heard, both inflators would not have operated (deployed) properly. This may cause serious injury if the air bag module operates (deploy) unexpectedly. If the two operation (explosive) sounds are not heard, perform Step 12 again. If a total of two operation (explosive) sounds cannot be verified even though Step 12 is performed again, leave the air bag module alone for 30 min or more before approaching it again.**
- **The air bag module is very hot immediately after it is operated (deployed). You can be burned. Do not touch the air bag module for at least 15 min after deployment.**


12. Disconnect the **SST (Deployment tool)** from the **SST (Adapter harness)**.

Passenger-side Air Bag Module
1. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
2. Remove the passenger-side air bag module. (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
3. Connect the **SST (Adapter harness)** to the passenger-side air bag module as shown in the figure.

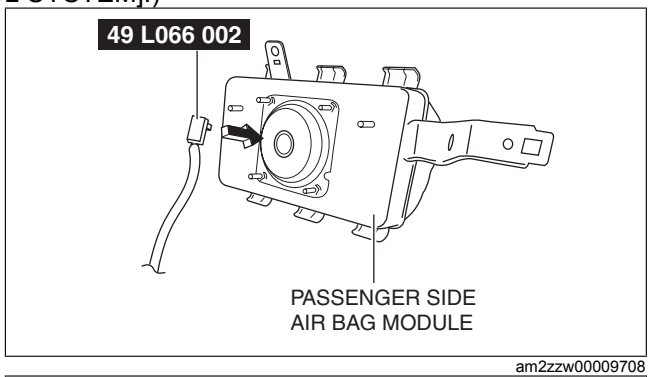

am2zzw00009708


4. Place the padded surface of the passenger-side air bag module facing the center of the tire as shown in the figure. To secure the air bag module to the tire wheel, wrap a wire (cross section **1.25 mm^2 {0.002 in^2} or more**) through the tire and the bolt installation holes **at least 4 times** as shown in the figure.

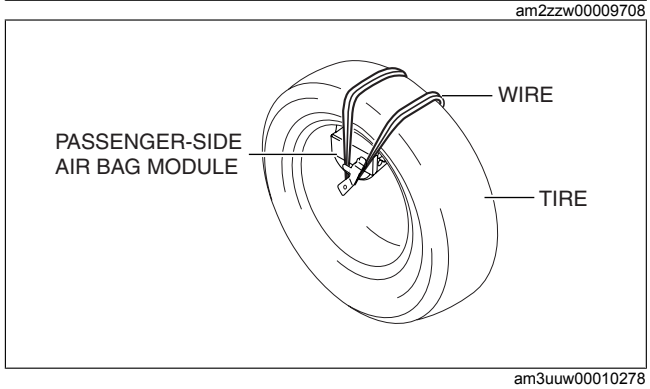

am3uuw00010278


Warning
- **If the air bag module is not properly secured to the tire, the tires may fall over by the impact of operation (deployment) and cause serious injury. To prevent this, secure the air bag module properly with the padded surface facing the center of the tire.**

5. Stack the tire with the passenger-side air bag module on top of two tires without wheels. Stack a tire without a wheel on top of the tire with the passenger-side air bag module, and then stack another tire with a wheel on the very top.

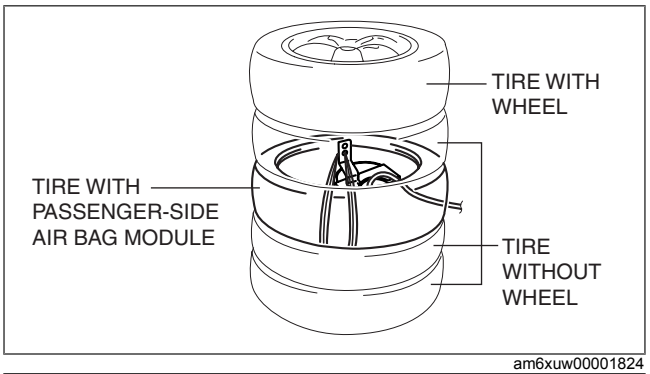


am6xuw00001824

6. Secure the tires with wire.

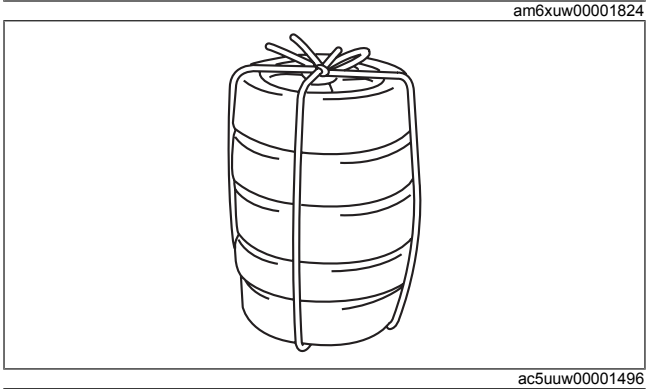
ac5uuw00001496

7. Connect the **SST (Deployment tool)** to the **SST (Adapter harness)**.
8. Connect the **SST (Deployment tool)** to the battery. Connect the power supply red clip to the positive battery terminal, and the black clip to the negative battery terminal.
9. Verify that the red lamp on the **SST (Deployment tool)** is illuminated.
10. Verify that all persons are standing **at least 6 m {20 ft}** away from the passenger-side air bag module.

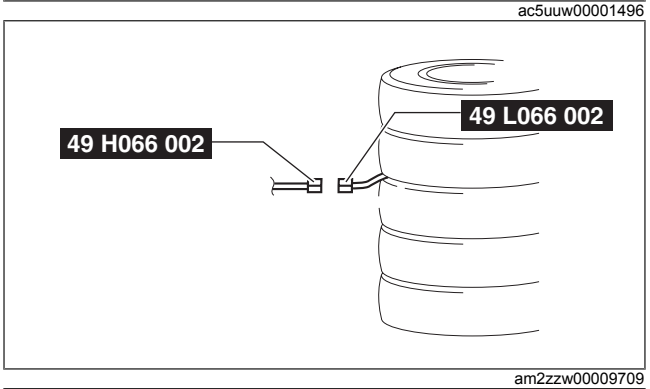


am2zzw00009709

11. Press the activation switch on the **SST (Deployment tool)** to operate (deploy) the air bag module.

    Warning
    - **The air bag module is very hot immediately after it is operated (deployed). You can be burned. Do not touch the air bag module for at least 15 min after deployment.**


12. Disconnect the **SST (Deployment tool)** from the **SST (Adapter harness)**.

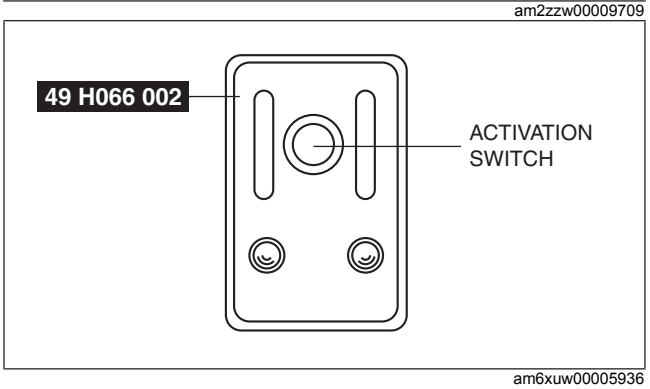

am6xuw00005936


Side Air Bag Module

1. Remove the following parts:
   (1) Front seat (See FRONT SEAT REMOVAL/INSTALLATION.)
   (2) Front seat back trim and pad (See FRONT SEAT BACK TRIM REMOVAL/INSTALLATION.)
2. Remove the side air bag module. (See SIDE AIR BAG MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
3. Install the nuts.

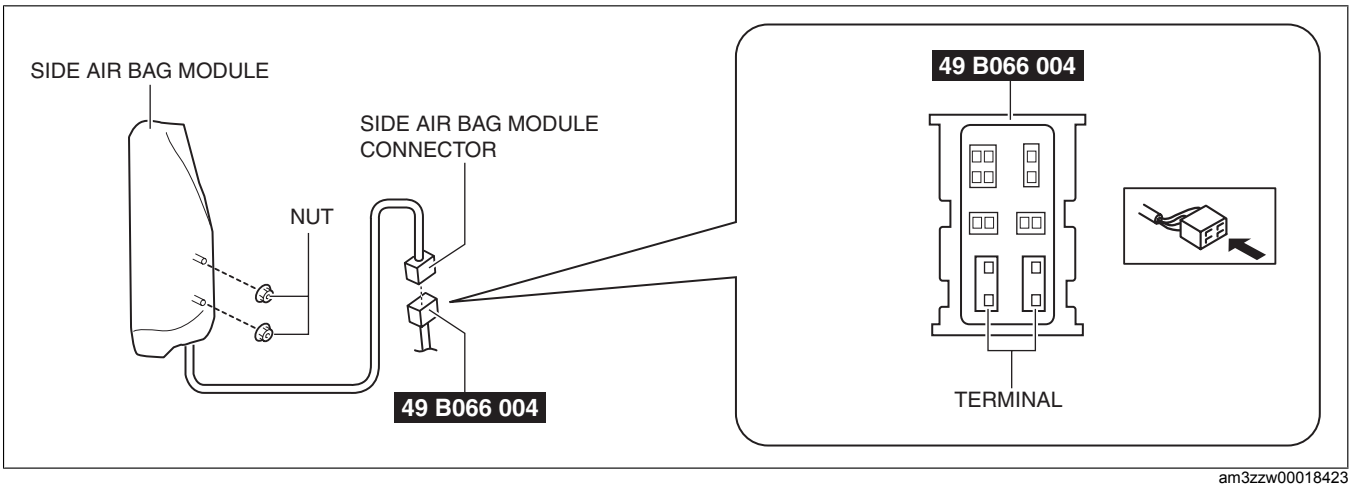

am3zzw00018423


4. Connect the side air bag module connector to either one of the **SST (Adapter harness)** terminals shown in the figure.
5. Put the side air bag module inside the tire and secure it to the tire by wrapping a wire (cross section of **1.25 mm^2 {0.002 in^2} or more**) through the tire and the bolt **at least 4 times**.

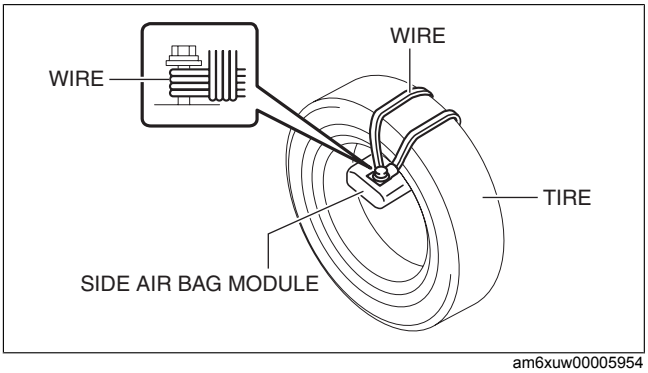

am6xuw00005954


Warning
- **If the air bag module is not properly secured to the tire, the tires may fall over by the impact of operation (deployment) and cause serious injury. To prevent this, secure the air bag module properly with the padded surface facing the center of the tire.**

6. Stack the tire with the side air bag module on top of two tires without wheels. Stack a tire without a wheel on top of the tire with the side air bag module, and then stack another tire with a wheel on the very top.

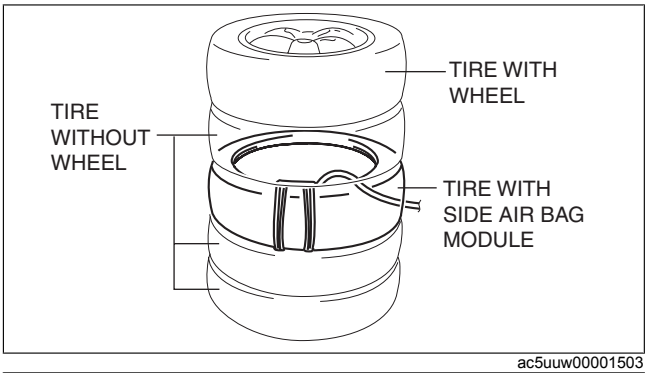


ac5uuw00001503

7. Secure the tires with wire.

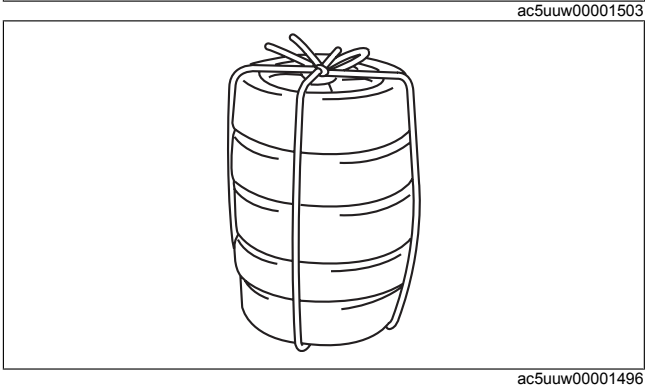
ac5uuw00001496

8. Connect the **SST (Deployment tool)** to the **SST (Adapter harness).**
9. Connect the **SST (Deployment tool)** to the battery. Connect the power supply red clip to the positive battery terminal, and the black clip to the negative battery terminal.
10. Verify that the red lamp on the **SST (Deployment tool)** is illuminated.
11. Verify that all persons are standing **at least 6 m {20 ft}** away from the side air bag module.

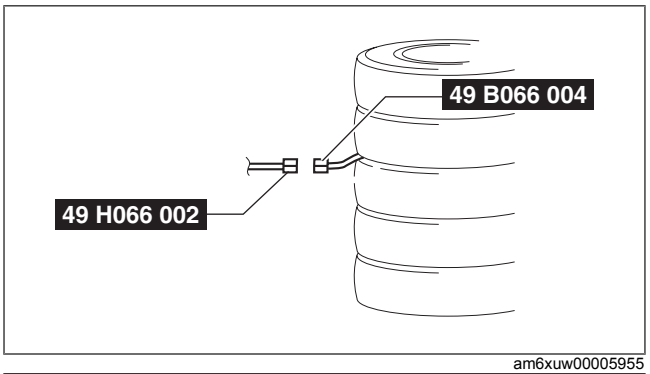


am6xuw00005955

12. Press the activation switch on the **SST (Deployment tool)** to operate (deploy) the side air bag module.

    Warning
    - **The air bag module is very hot immediately after it is operated (deployed). You can be burned. Do not touch the air bag module for at least 15 min after deployment.**

13. Disconnect the **SST (Deployment tool)** from the **SST (Adapter harness)**.

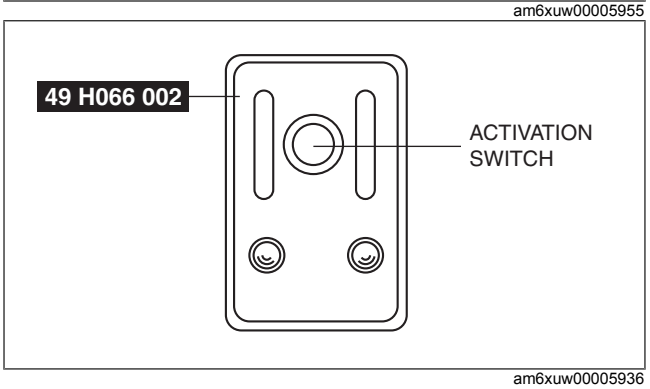


am6xuw00005936

Curtain Air Bag Module


1. Remove the following parts:
   (1) A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
   (2) Sunvisor (See SUNVISOR REMOVAL/INSTALLATION.)
   (3) Front map light (dual light type) (See FRONT MAP LIGHT REMOVAL/INSTALLATION.)
   (4) Assist handle (See ASSIST HANDLE REMOVAL/INSTALLATION.)
   (5) Coat hook (See HEADLINER REMOVAL/INSTALLATION.)
   (6) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (7) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (8) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
   (9) Adjust anchor cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (10) Upper anchor installation bolt on the front seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (11) B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
   (12) Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
   (13) Lower anchor installation bolt on the rear center seat belt (See REAR CENTER SEAT BELT REMOVAL/INSTALLATION.)
   (14) Rear seat back (See REAR SEAT BACK REMOVAL/INSTALLATION.)
   (15) Rear package tray (See REAR PACKAGE TRAY REMOVAL/INSTALLATION.)
   (16) Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)
   (17) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
   (18) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
   (19) C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
   (20) Headliner (See HEADLINER REMOVAL/INSTALLATION.)
2. Remove the curtain air bag module. (See CURTAIN AIR BAG MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
3. Cut off the air bag part of the curtain air bag module at the position shown in the figure.

   Warning
   - **Never crush the pipe on the side where it is cut. If it is crushed completely, the interior pressure of the pipe will build up and can cause it to explode during air bag module operation (deployment).**

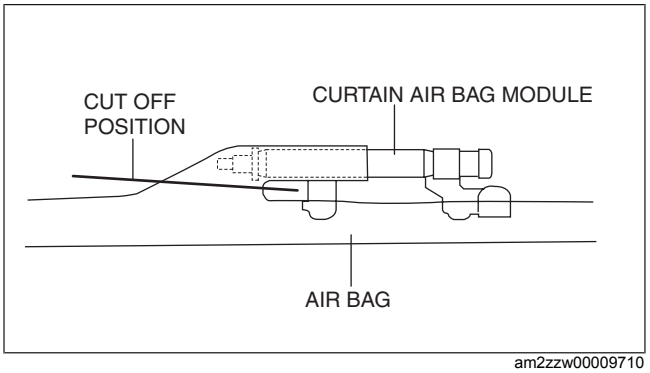

am2zzw00009710


4. Connect the **SST (Adapter harness)** to the curtain air bag module as shown in the figure.

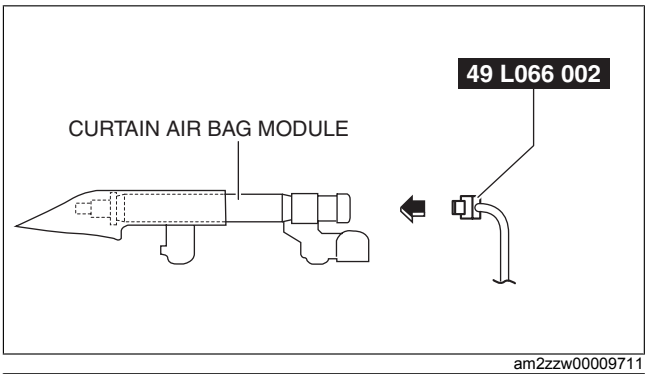

am2zzw00009711


5. Secure the curtain air bag module to the tire, by wrapping a wire (cross section **1.25 mm^2 {0.002 in^2} or more**) through the tire and the bolt installation holes **at least 4 times** as shown in the figure.

   Warning
   - **If the air bag module is not properly installed to the tire, serious injury may occur when the module is operated (deployed). Always install the air bag module securely.**

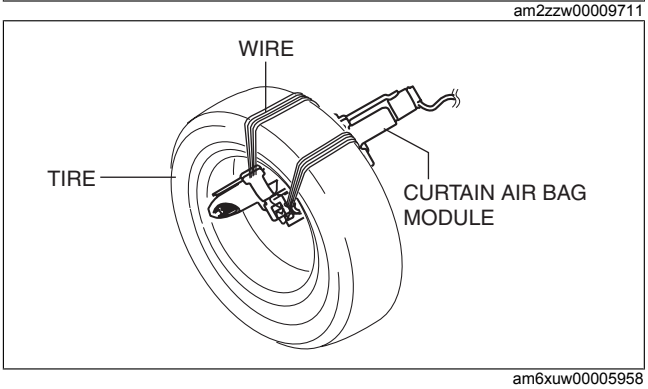


am6xuw00005958

6. Stack the tire with the curtain air bag module on top of two tires without wheels. Stack a tire without a wheel on top of the tire with the curtain air bag module, and then stack another tire with a wheel on the very top.

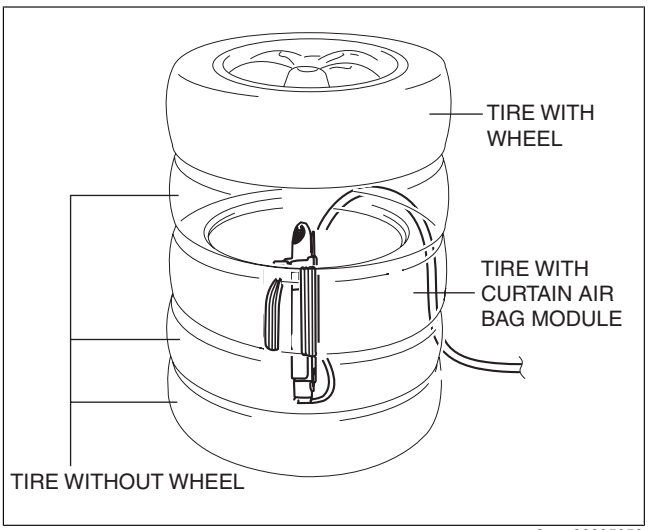


am6xuw00005959

7. Secure the tires with wire.

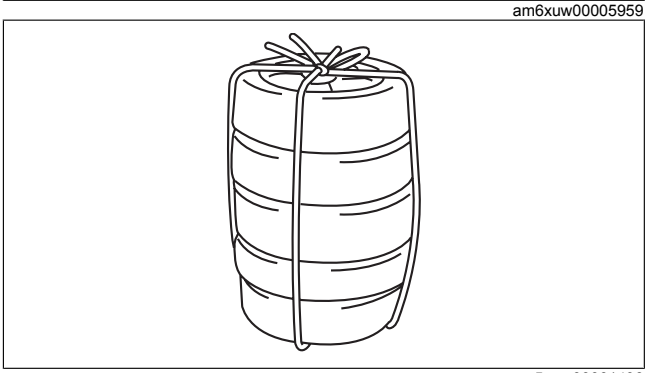
ac5uuw00001496

8. Connect the **SST (Deployment tool)** to the **SST (Adapter harness)**.
9. Connect the **SST (Deployment tool)** to the battery. Connect the power supply red clip to the positive battery terminal, and the black clip to the negative battery terminal.
10. Verify that the red lamp on the **SST (Deployment tool)** is illuminated.
11. Verify that all persons are standing **at least 6 m {20 ft}** away from the curtain air bag module.

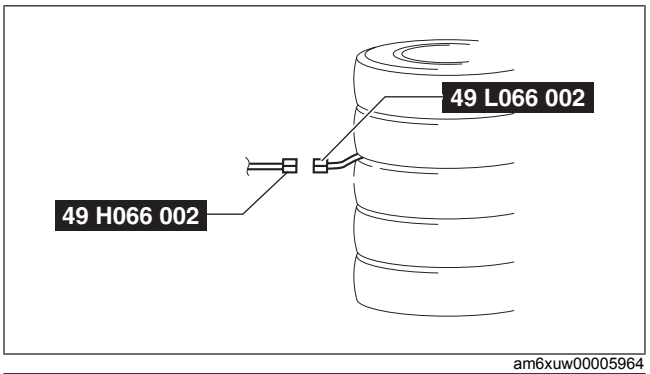


am6xuw00005964

12. Press the activation switch on the **SST (Deployment tool)** to operate (deploy) the curtain air bag module.

    Warning
    - **The air bag module is very hot immediately after it is operated (deployed). You can be burned. Do not touch the air bag module for at least 15 min after deployment.**


13. Disconnect the **SST (Deployment tool)** from the **SST (Adapter harness)**.

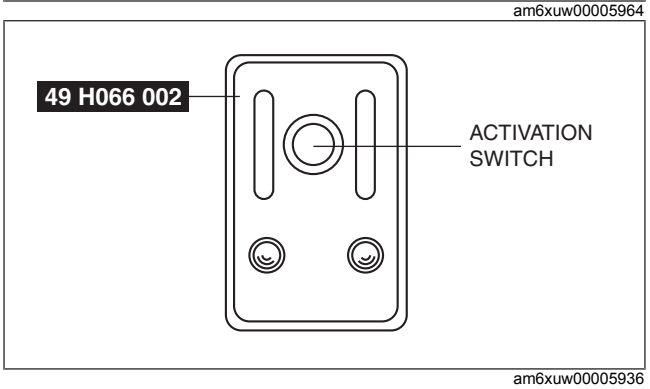

am6xuw00005936

Front Pre-tensioner Seat Belt


1. Remove the following parts:
   (1) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (3) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
   (4) Front seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
2. Connect the **SST (Adapter harness)** as shown in the figure.

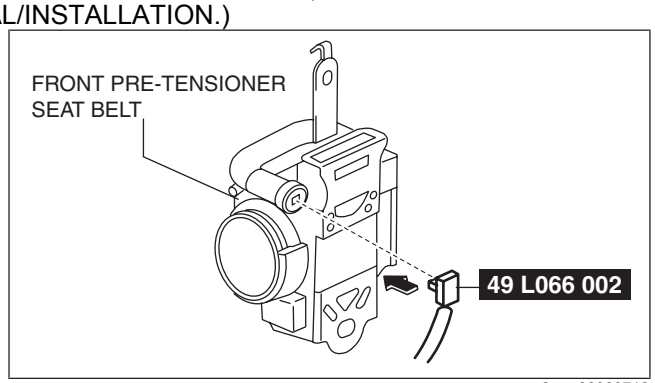

am2zzw00009712


3. Put the front pre-tensioner seat belt inside the tire and secure it to the tire by wrapping a wire (cross section of **1.25 mm^2 {0.002 in^2} or more**) through the tire and the bolt installation holes **at least 4 times**.

    Warning
    - **If the front pre-tensioner seat belt is not properly installed to the tire, serious injury may occur when the pre-tensioner part is operated (deployed). When installing the front pre-tensioner seat belt to the tire, verify that the pre-tensioner part is inside the tire.**

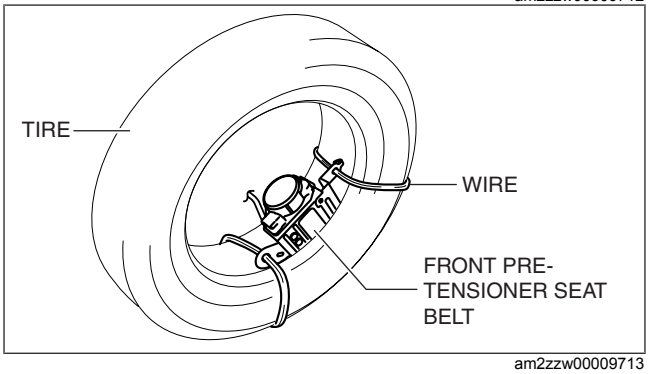


am2zzw00009713

4. Stack the tire with the front pre-tensioner seat belt on to of two tires without wheels. Stack a tire without a wheel on top of the tire with the front pre-tensioner seat belt, and then stack another tire with a wheel on the very top.

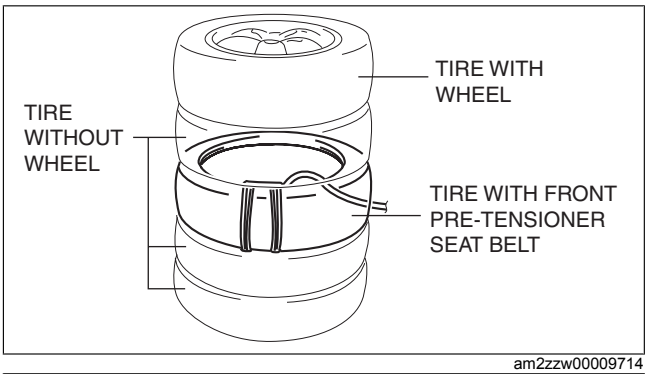


am2zzw00009714

5. Secure the tires with wire.

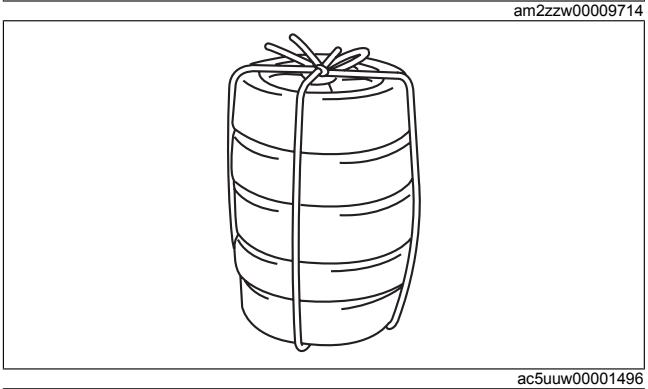
ac5uuw00001496

6. Connect the **SST (Deployment tool)** to the **SST (Adapter harness)**.
7. Connect the **SST (Deployment tool)** to the battery. Connect the power supply red clip to the positive battery terminal, and the black clip to the negative battery terminal.
8. Verify that the red lamp on the **SST (Deployment tool)** is illuminated.
9. Verify that all persons are standing **at least 6 m {20 ft}** away from the front pre-tensioner seat belt.

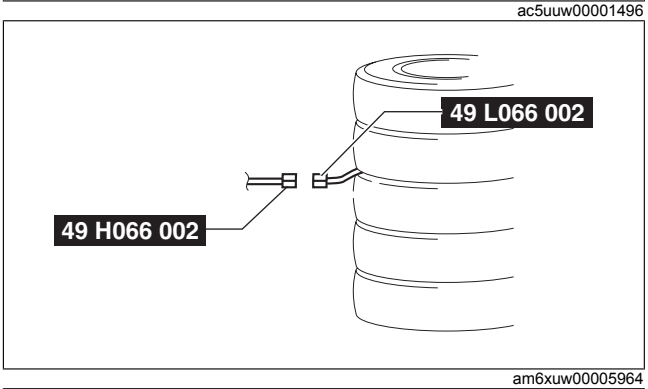


am6xuw00005964

10. Press the activation switch on the **SST (Deployment tool)** to operate (deploy) the front pre-tensioner seat belt.

    Warning
    - **The front pre-tensioner seat belt is very hot immediately after it is operated (deployed). You can be burned. Do not touch the front pre-tensioner seat belt for at least 15 min after deployment.**

11. Disconnect the **SST (Deployment tool)** from the **SST (Adapter harness)**.

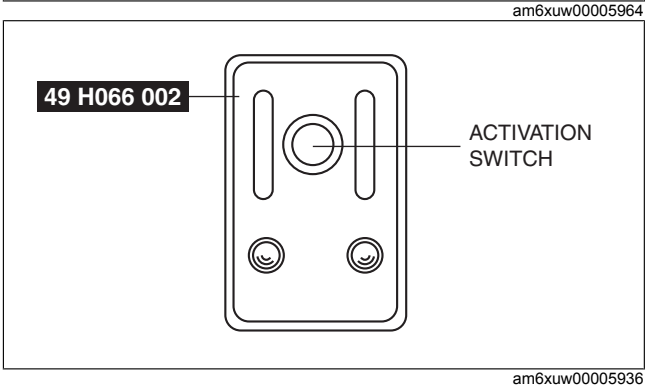


am6xuw00005936

Rear Pre-tensioner Seat Belt

1. Remove the following parts:
   (1) Rear package tray (See REAR PACKAGE TRAY REMOVAL/INSTALLATION.)
   (2) Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)
   (3) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
   (4) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
   (5) Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
   (6) Lower anchor installation bolt on the rear seat belt (See REAR SEAT BELT REMOVAL/INSTALLATION.)
   (7) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (8) Rear seat back (See REAR SEAT BACK REMOVAL/INSTALLATION.)
   (9) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
   (10) C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
   (11) Rear seat belt (See REAR SEAT BELT REMOVAL/INSTALLATION.)


2. Connect the **SST (Adapter harness)** as shown in the figure.

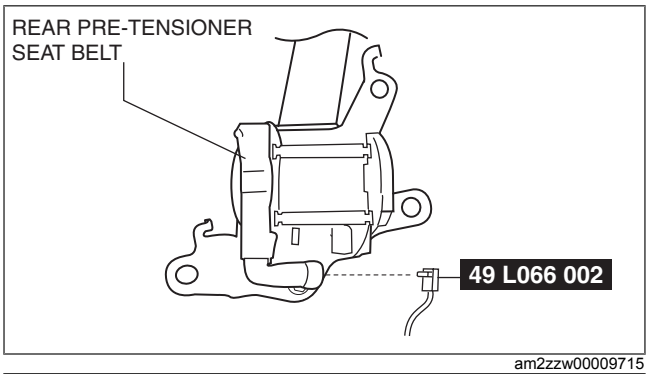

am2zzw00009715


3. Put the rear pre-tensioner seat belt inside the tire and secure it to the tire by wrapping a wire (cross section of **1.25 mm^2 {0.002 in^2} or more**) through the tire and the bolt installation holes **at least 4 times**.

   Warning
   - **If the rear pre-tensioner seat belt is not properly installed to the tire, serious injury may occur when the pre-tensioner part is operated (deployed). When installing the rear pre-tensioner seat belt to the tire, verify that the pre-tensioner part is inside the tire.**

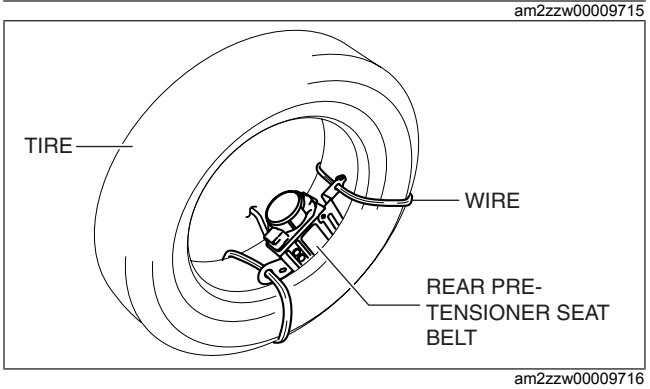


am2zzw00009716

4. Stack the tire with the rear pre-tensioner seat belt on to of two tires without wheels. Stack a tire without a wheel on top of the tire with the rear pre-tensioner seat belt, and then stack another tire with a wheel on the very top.

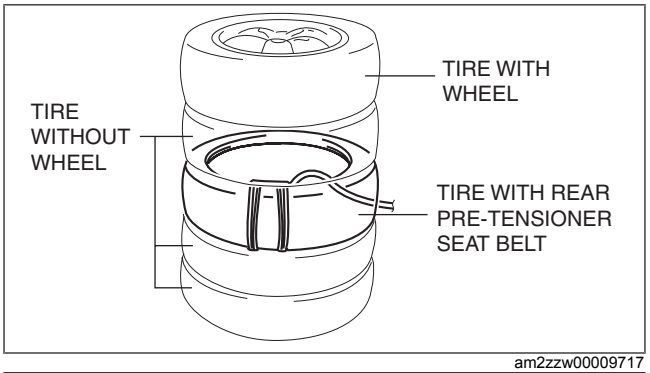


am2zzw00009717

5. Secure the tires with wire.

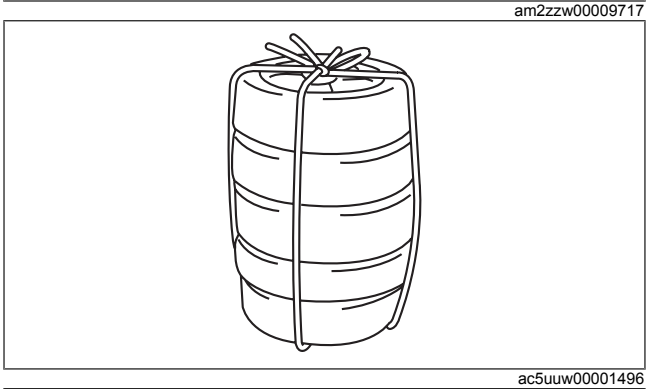
ac5uuw00001496

6. Connect the **SST (Deployment tool)** to the **SST (Adapter harness)**.
7. Connect the **SST (Deployment tool)** to the battery. Connect the power supply red clip to the positive battery terminal, and the black clip to the negative battery terminal.
8. Verify that the red lamp on the **SST (Deployment tool)** is illuminated.
9. Verify that all persons are standing **at least 6 m {20 ft}** away from the rear pre-tensioner seat belt.

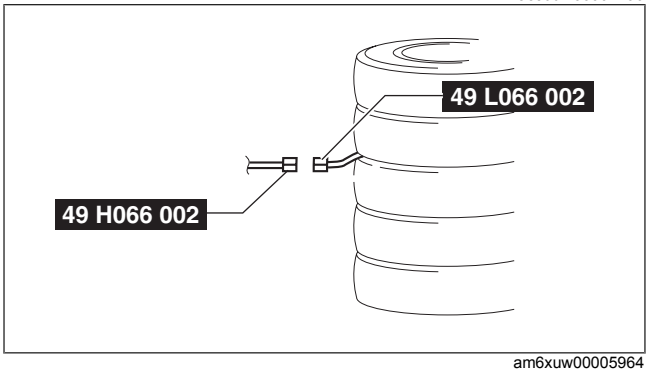


am6xuw00005964

10. Press the activation switch on the **SST (Deployment tool)** to operate (deploy) the rear pre-tensioner seat belt.

    Warning
    - **The rear pre-tensioner seat belt is very hot immediately after it is operated (deployed). You can be burned. Do not touch the rear pre-tensioner seat belt for at least 15 min after deployment.**

11. Disconnect the **SST (Deployment tool)** from the **SST (Adapter harness)**.

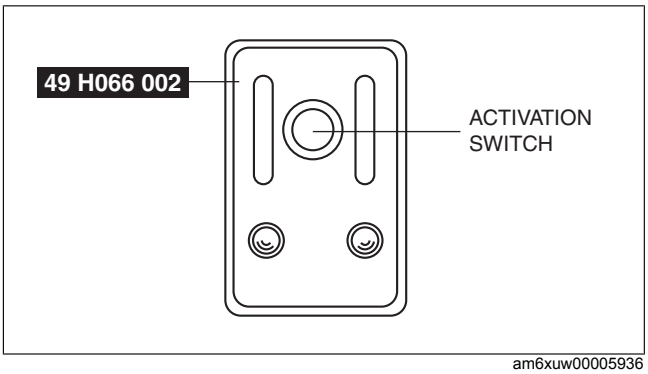

am6xuw00005936