
CLOCK SPRING INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM]

id0810b1802200


1. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the driver-side air bag module. (See DRIVER-SIDE AIR BAG MODULE REMOVAL [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)(See DRIVER-SIDE AIR BAG MODULE INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
3. Remove the steering wheel. (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
4. Remove the column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)
5. Remove the clock spring. (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
6. Verify that the continuity is as indicated in the table.
   - If not as indicated in the table, replace the clock spring. (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)


Note

- When the vehicle-side connector for the clock spring is disconnected, terminals 2A, 2B, 2C and 2D are shorted to prevent unexpected operation (deployment) of the air bag module.

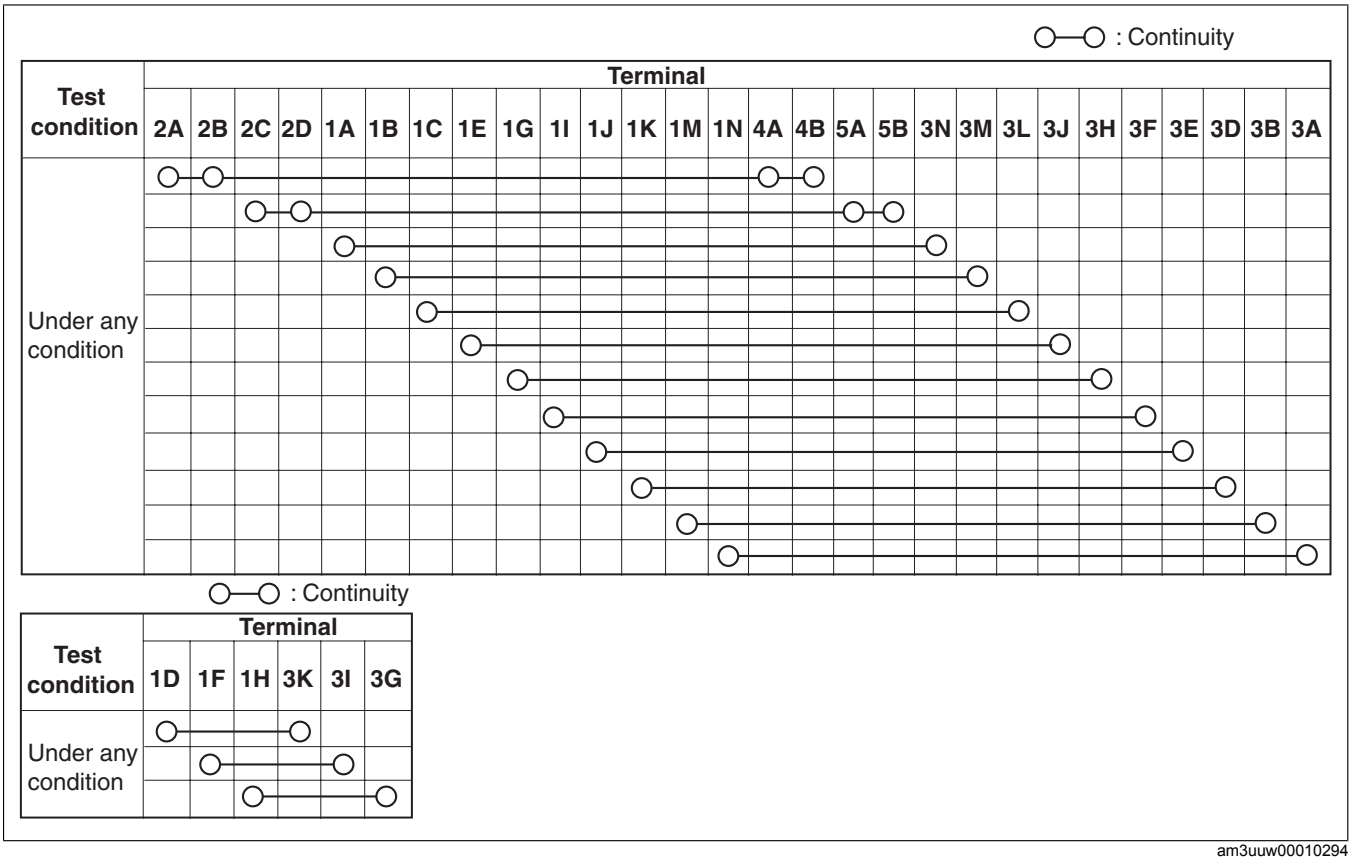


am3uuw00010294

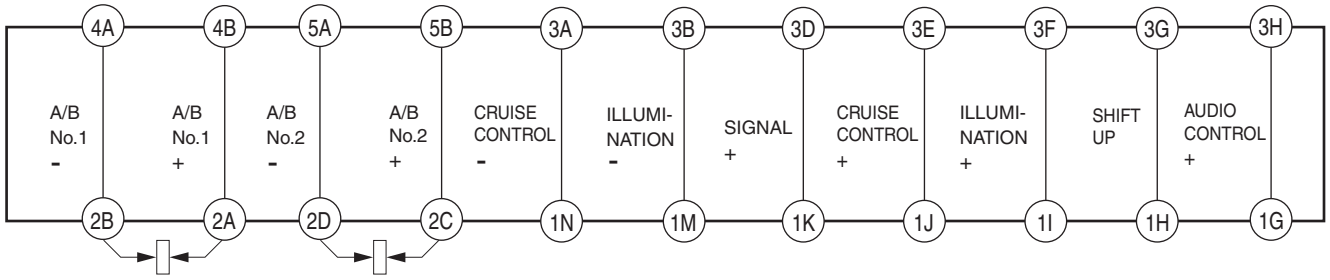


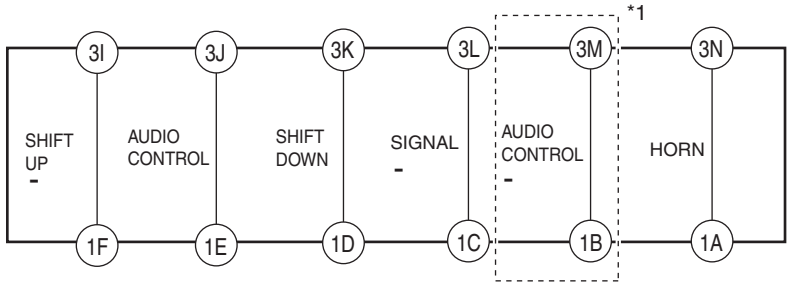


*1 : WITH Bluetooth® SYSTEM (HANDS-FREE TELEPHONE (HF/TEL) SYSTEM)

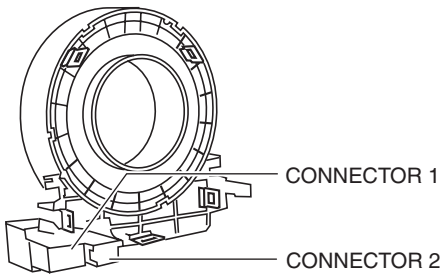


CONNECTOR 2

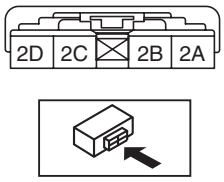


CONNECTOR 1

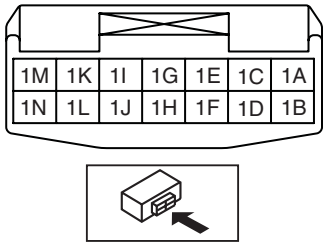


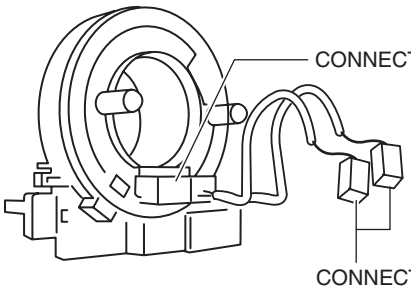

CONNECTOR 4

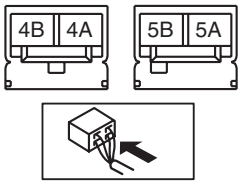

CONNECTOR 3

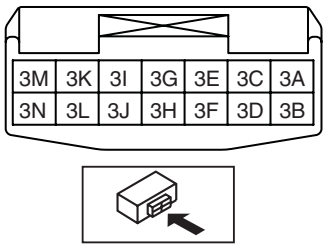

am3uuw00010295