AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM]

id0810b1802400

SAS Control Module

Handling

- **When connecting or disconnecting the SAS control module connector, a person charged with static electricity could accidentally operate (deploy) the air bag modules and pre-tensioner seat belts. Before connecting or disconnecting the SAS control module connector, discharge any charged static electricity from your body.**
- **Removing the SAS control module or disconnecting the SAS control module connector with the ignition ON can activate the sensor in the SAS control module and operate (deploy) the air bags and pre-tensioner seat belts which may cause serious injury. Before removing the SAS control module or disconnecting the SAS control module connector, always switch the ignition off, disconnect the negative battery cable, and then wait for 1 min or more to allow the backup power supply of the SAS control module to deplete its stored power.**
- **Connecting the SAS control module connector with the SAS control module not securely fixed to the vehicle is dangerous. The sensor in the SAS control module could send an electrical signal to the air bag modules and pre-tensioner seat belts. This will operate (deploy) the air bags and pre-tensioner seat belts which may result in serious injury. Therefore, before connecting the connector, securely fix the SAS control module to the vehicle.**

Collision from front of vehicle, frontal offset or side of vehicle

- **Because a sensor is built into the SAS control module, once the following items have operated (deployed) due to a collision or other causes, the SAS control module must be replaced with a new one even if the used one does not have any visible external damage or deformation. The used SAS control module may have been damaged internally, which may cause improper operation. If the SAS control module is reused, the air bags and pre-tensioner seat belts may not operate (deploy) normally, which could result in a serious accident. Always replace the SAS control module with a new one.**
  - **— Driver-side air bag module**
  - **— Passenger-side air bag module**
  - **— Side air bag module**
  - **— Curtain air bag module**
  - **— Front pre-tensioner seat belt**
  - **— Rear pre-tensioner seat belt**

Crash Zone Sensor

Handling

- **Removing the crash zone sensor or disconnecting the crash zone sensor connector with the ignition ON can activate the crash zone sensor and operate (deploy) the driver-side air bag, the passenger-side air bag and the pre-tensioner seat belts which may cause serious injury. Before removing the crash zone sensor or disconnecting the crash zone sensor connector, always switch the ignition off, disconnect the negative battery cable, and then wait for 1 min or more to allow the backup power supply of the SAS control module to deplete its stored power.**
- **If the crash zone sensor is subjected to shock or the sensor is disassembled, the driver-side air bag, the passenger-side air bag and the pre-tensioner seat belts may accidentally operate (deploy) and cause injury, or the system may fail to operate normally and cause a serious accident. Do not subject the crash zone sensor to shock or disassemble the sensor.**

Collision from front of vehicle or frontal offset

- **Because a sensor is built into the crash zone sensor, once the driver-side air bag, the passenger-side air bag and the pre-tensioner seat belts have operated (deployed) due to a collision or other causes, the crash zone sensor must be replaced with a new one even if the used one does not have any visible external damage or deformation. If the crash zone sensor is reused, the driver-side air bag, the passenger-side air bag and the pre-tensioner seat belts may not operate (deploy) normally, which could result in a serious accident. Always replace the crash zone sensor with a new one.**

Side Air Bag Sensor

Handling

- **Removing the side air bag sensor or disconnecting the side air bag sensor connector with the ignition ON can activate the side air bag sensor and operate (deploy) the side air bag, the curtain air bag and the pre-tensioner seat belts, which may cause serious injury. Before removing the side air bag sensor or disconnecting the side air bag sensor connector, always switch the ignition off, disconnect the negative battery cable, and then wait for 1 min or more to allow the backup power supply of the SAS control module to deplete its stored power.**
- **If the side air bag sensor is subjected to shock or the sensor is disassembled, the side air bag, the curtain air bag and the pre-tensioner seat belts may accidentally operate (deploy) and cause injury, or the system may fail to operate normally and cause a serious accident. Do not subject the side air bag sensor to shock or disassemble the sensor.**

Collision from side of vehicle

- **Because a sensor is built into the side air bag sensor, once the side air bag, the curtain air bag and the pre-tensioner seat belts have operated (deployed) due to a collision or other causes, the side air bag sensor must be replaced with a new one even if the used one does not have any visible external damage or deformation. If the side air bag sensor is reused, the side air bag, the curtain air bag and the pre-tensioner seat belts may not operate (deploy) normally, which could result in a serious accident. Always replace the side air bag sensor with a new one.**

Pressure Sensor

Handling

- **Removing the pressure sensor or disconnecting the pressure sensor connector with the ignition ON can activate the pressure sensor and operate (deploy) the side air bag, the curtain air bag and the pre-tensioner seat belts, which may cause serious injury. Before removing the pressure sensor or disconnecting the pressure sensor connector, always switch the ignition off, disconnect the negative battery cable, and then wait for 1 min or more to allow the backup power supply of the SAS control module to deplete its stored power.**
- **If the pressure sensor is subjected to shock or the sensor is disassembled, the side air bag, the curtain air bag and the pre-tensioner seat belts may accidentally operate (deploy) and cause injury, or the system may fail to operate normally and cause a serious accident. Do not subject the pressure sensor to shock or disassemble the sensor.**


Collision from side of vehicle

- **Because a sensor is built into the pressure sensor, once the side air bag, the curtain air bag and the pre-tensioner seat belts have operated (deployed) due to a collision or other causes, the pressure sensor must be replaced with a new one even if the used one does not have any visible external damage or deformation. If the pressure sensor is reused, the side air bag, the curtain air bag and the pre-tensioner seat belts may not operate (deploy) normally, which could result in a serious accident. Always replace the pressure sensor with a new one.**

Driver-side Air Bag Module/ Passenger-side Air Bag Module

Handling


- **Before removing the air bag module or disconnecting the air bag module connector, always switch the ignition off, disconnect the negative battery cable, and then wait for 1 min or more to allow the backup power supply of the SAS control module to deplete its stored power.**
- **A live (undeployed) air bag module placed with its deployment surface to the ground is dangerous. If the air bag module were to accidentally operate (deploy), it could cause serious injury. Always place a live (undeployed) air bag module with its deployment surface up.**

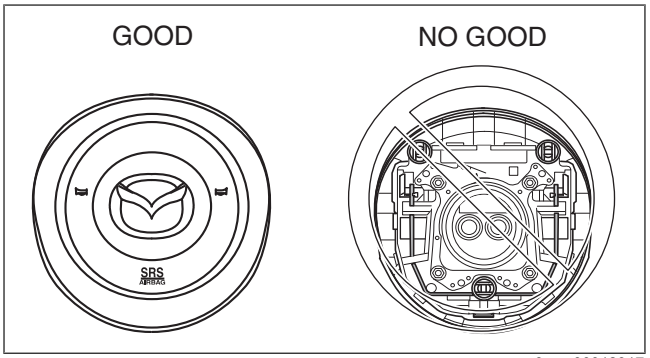

am3uuw00012317

Inspection

- **Inspecting an air bag module using a tester can operate (deploy) the air bag module, which may cause serious injury. Do not use a tester to inspect an air bag module. Always use the on-board diagnostic function to diagnose the air bag module for malfunctions.**

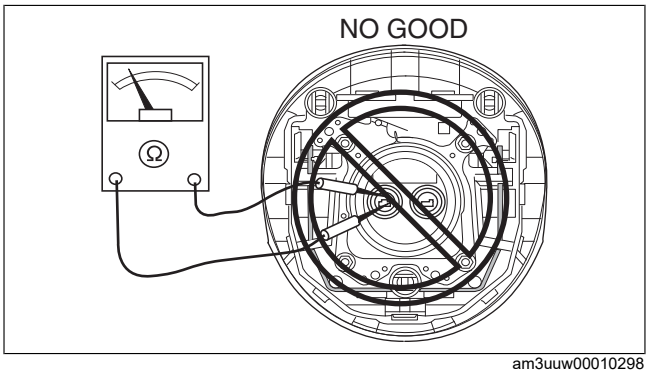

am3uuw00010298

Side Air Bag Module


Handling

- **Before removing the side air bag module or disconnecting the side air bag module connector, always switch the ignition off, disconnect the negative battery cable, and then wait for 1 min or more to allow the backup power supply of the SAS control module to deplete its stored power.**

- **When a side air bag module operates (deploys) due to a collision, the interior of the seat back (pad, frame, trim) may become damaged. If a side air bag does not operate (deploy) normally from a seat back that has been reused, a serious accident may result. After a side air bag has operated (deployed), always replace both the side air bag module and the seat back (pad, frame, trim) with new parts. After servicing, verify that the seat operates normally and that the wiring harness is not caught.**

Inspection

- **Inspecting an air bag module using a tester can operate (deploy) the air bag module, which may cause serious injury. Do not use a tester to inspect an air bag module. Always use the on-board diagnostic function to diagnose the air bag module for malfunctions.**

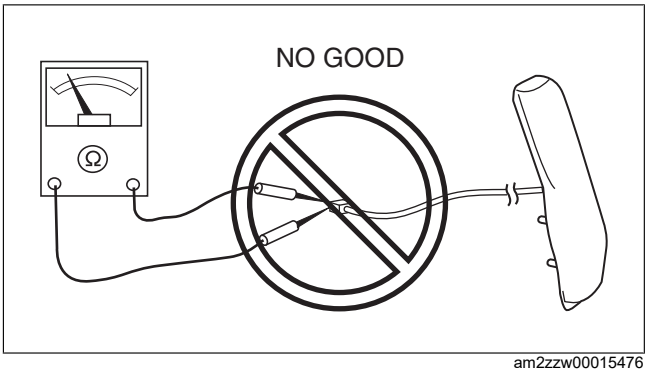

am2zzw00015476


Curtain Air Bag Module

Handling

- **Before removing the side air bag module or disconnecting the side air bag module connector, always switch the ignition off, disconnect the negative battery cable, and then wait for 1 min or more to allow the backup power supply of the SAS control module to deplete its stored power.**
- **When a side air bag module operates (deploys) due to a collision, the interior of the seat back (pad, frame, trim) may become damaged. If a curtain air bag does not operate (deploy) normally from a seat back that has been reused, a serious accident may result. After a curtain air bag has operated (deployed), always replace both the side air bag module and the seat back (pad, frame, trim) with new parts. After servicing, verify that the seat operates normally and that the wiring harness is not caught.**

Inspection

- **Inspecting an air bag module using a tester can operate (deploy) the air bag module, which may cause serious injury. Do not use a tester to inspect an air bag module. Always use the on-board diagnostic function to diagnose the air bag module for malfunctions.**

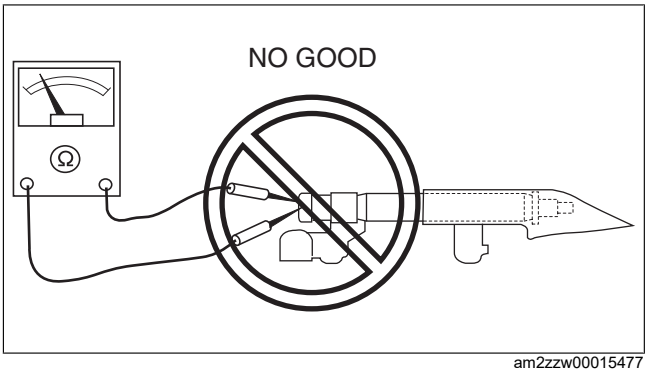


am2zzw00015477

Pre-tensioner Seat Belt

Front pre-tensioner seat belt inspection


- **Inspecting a front pre-tensioner seat belt using a tester can operate (deploy) the front pre-tensioner seat belt, which may cause serious injury. Do not use a tester to inspect a front pre-tensioner seat belt. Always use the on-board diagnostic function to diagnose the front pre-tensioner seat belt for malfunctions.**

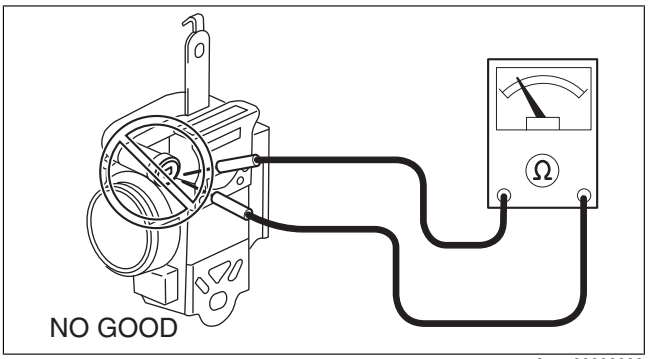

am6xuw00006060

Rear pre-tensioner seat belt inspection

- **Inspecting a rear pre-tensioner seat belt using a tester can operate (deploy) the rear pre-tensioner seat belt, which may cause serious injury. Do not use a tester to inspect a rear pre-tensioner seat belt. Always use the on-board diagnostic function to diagnose the rear pre-tensioner seat belt for malfunctions.**

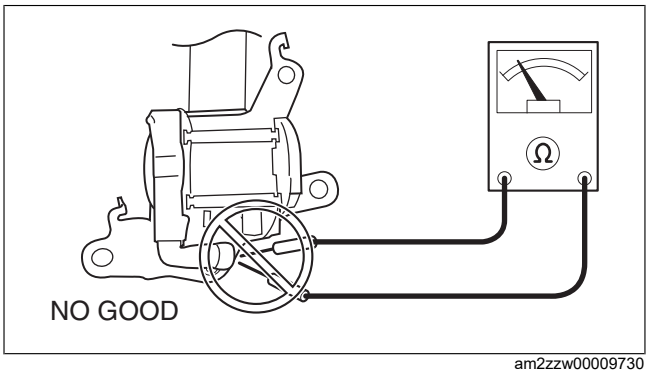

am2zzw00009730