
SEAT TRACK POSITION SENSOR REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM]

id0810b1803700

Warning


- **Improper handling of a front seat with a side air bag module could accidentally operate (deploy) the air bag and cause serious injury. Read the air bag system service warnings and cautions before handling a front seat with a side air bag module. (See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)**

1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait for **1min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the front driver's seat. (See FRONT SEAT REMOVAL/INSTALLATION.)
4. Disconnect the connector from the seat track position sensor by pressing the connector tab and pulling out the lock lever in the direction of the arrow.

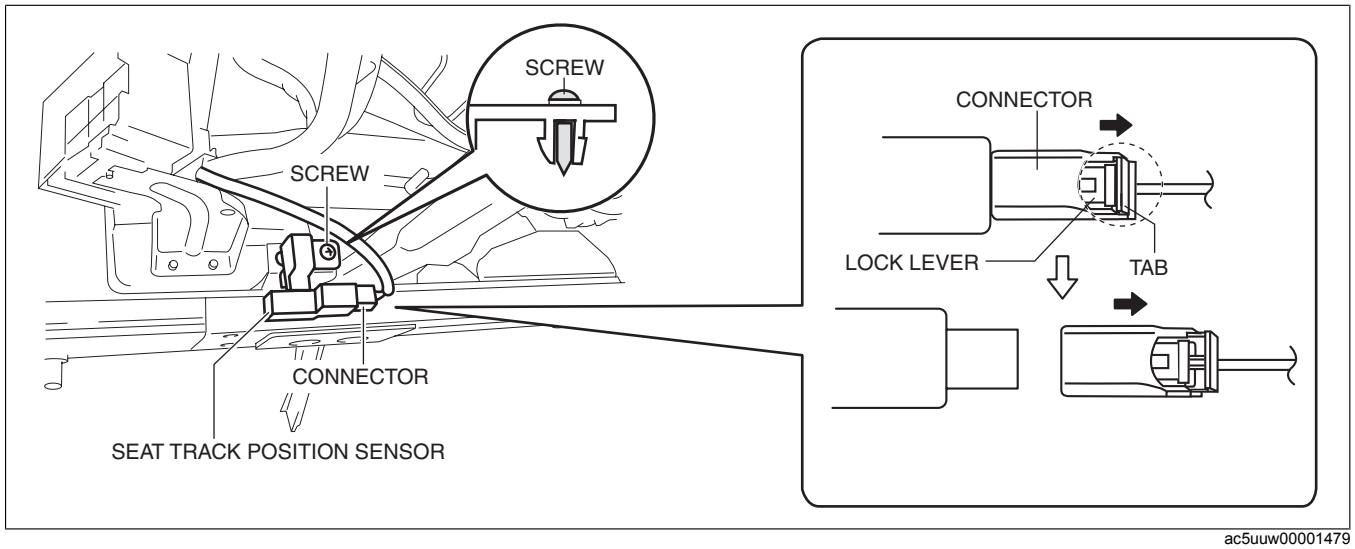

ac5uuw00001479

5. Remove the screw.
6. Detach the tab while lifting up the seat track position sensor in the direction of the arrow (1).

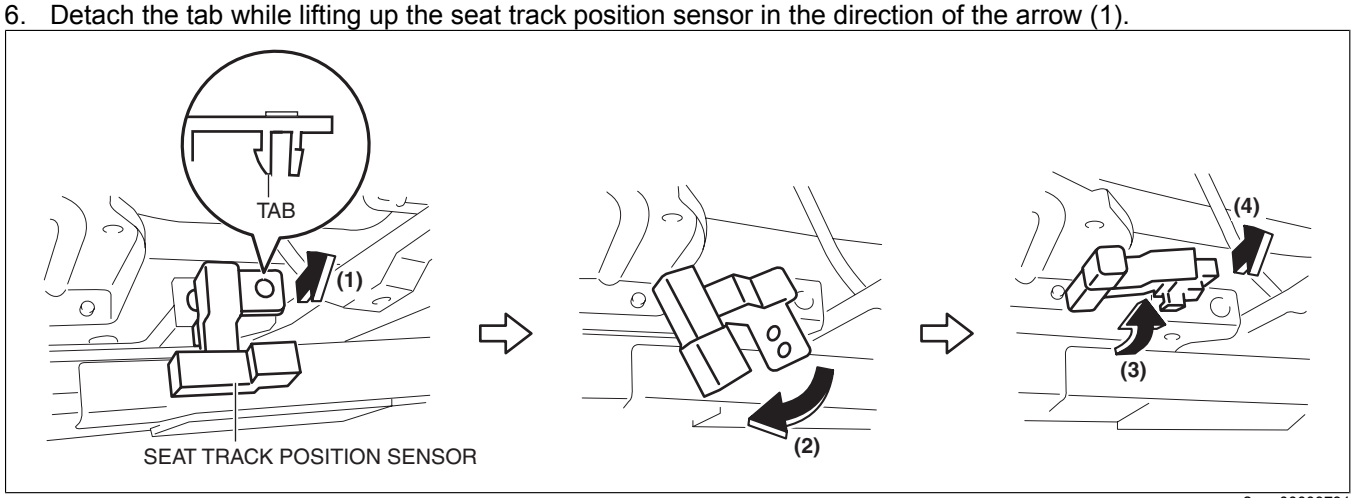

am2zzw00009731

7. Rotate the seat track position sensor in the direction of the arrow (2).
8. Rotate the seat track position sensor in the direction of the arrow (3).
9. Remove the seat track position sensor (4).
10. Install in the reverse order of removal.
11. Switch the ignition ON (engine off or on).
12. Verify that the air bag/seat belt pre-tensioner system warning light illuminates for **approx. 6 s** and goes out.
    - If the air bag/seat belt pre-tensioner system warning light does not operate normally, refer to the on-board diagnostic system (air bag system) and perform inspection of the system. (See FLOWCHART [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)