
PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM]


id0810b1804100

1. Switch the ignition off.
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
4. Disconnect the connector.

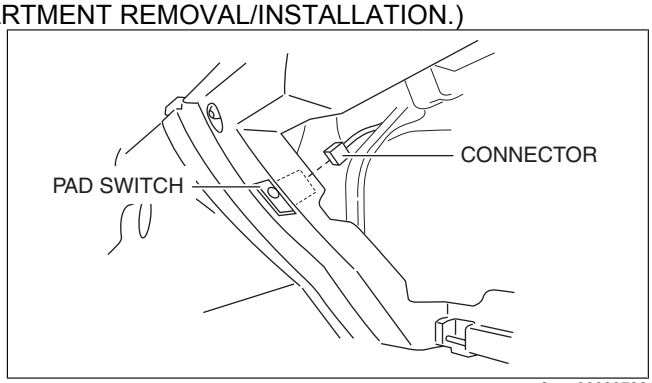

am2zzw00009732

5. Remove the PAD switch in the direction of the arrow (2) shown in the figure while pressing the tabs in the direction of the arrow (1).
6. Install in the reverse order of removal.
7. Switch the ignition ON (engine off or on).
8. Verify that the air bag/seat belt pre-tensioner system warning light illuminates for **approx. 6 s** and goes out.
   - If the air bag/seat belt pre-tensioner system warning light does not operate normally, refer to the on-board diagnostic system (air bag system) and perform inspection of the system. (See FLOWCHART [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)

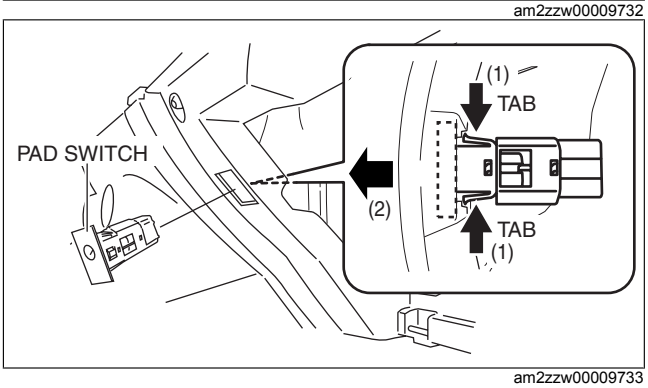

am2zzw00009733