

AIR BAG SYSTEM LOCATION INDEX [TWO-STEP DEPLOYMENT CONTROL SYSTEM]

id0810b1805300

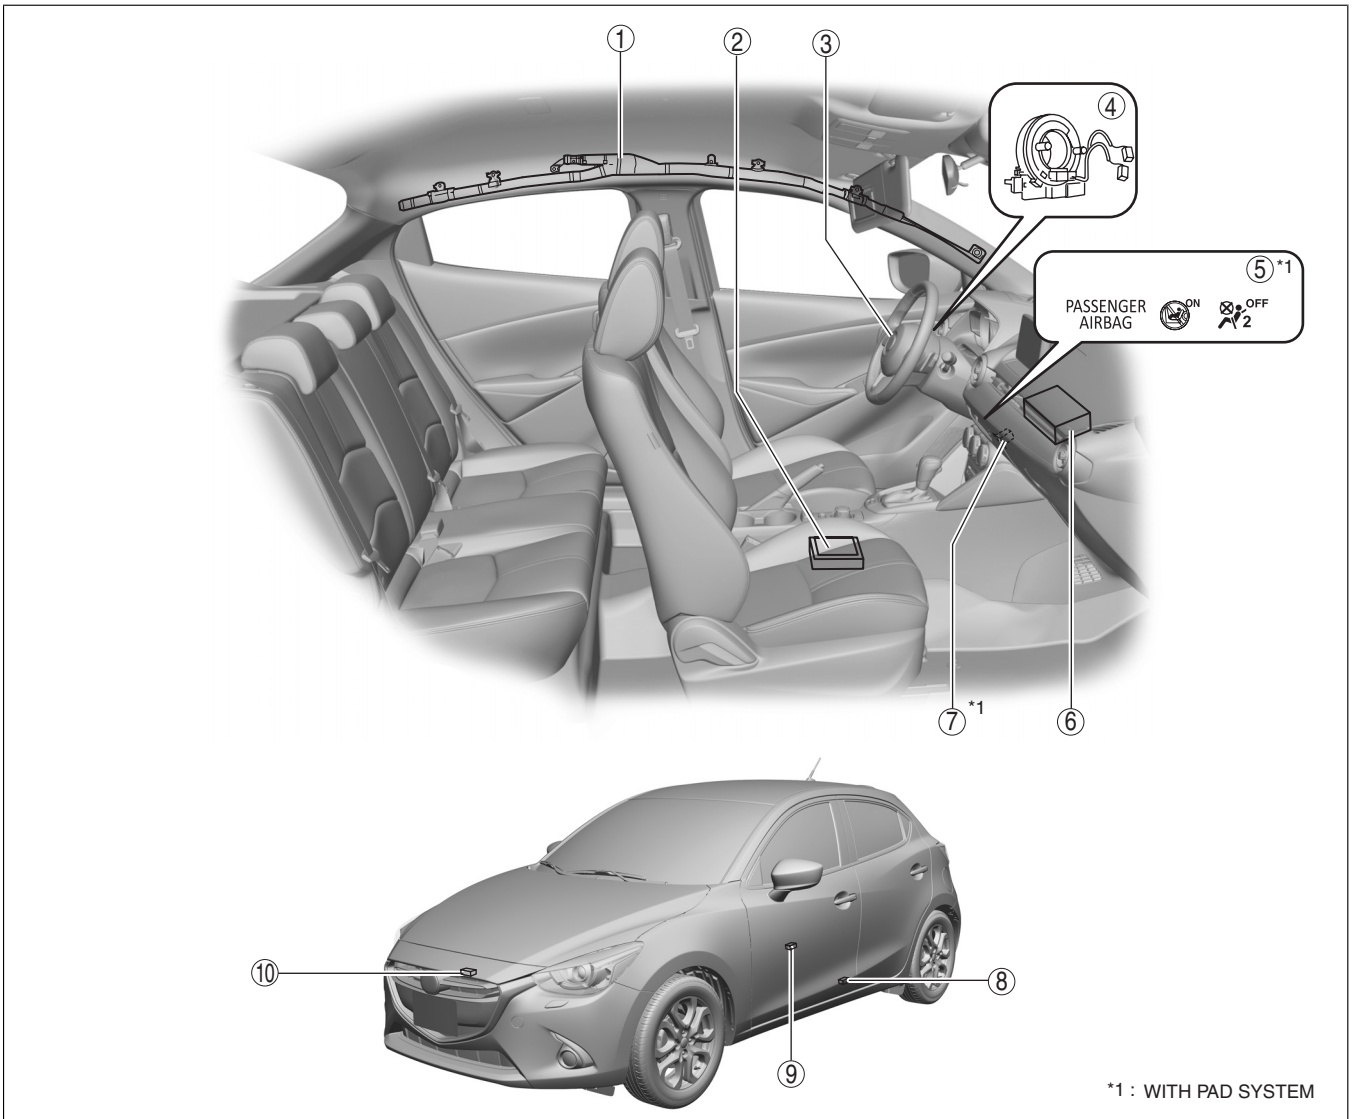


*1 : WITH PAD SYSTEM

L.H.D.

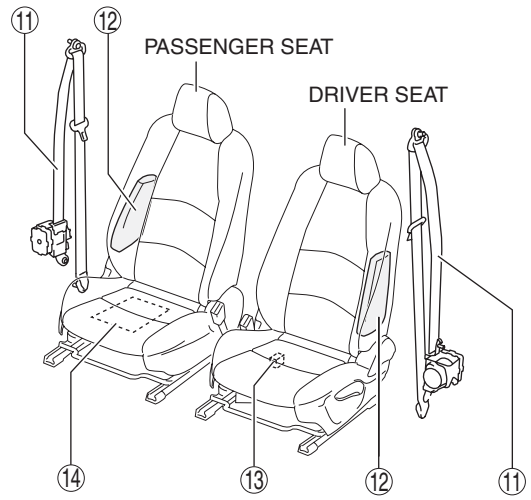


R.H.D.

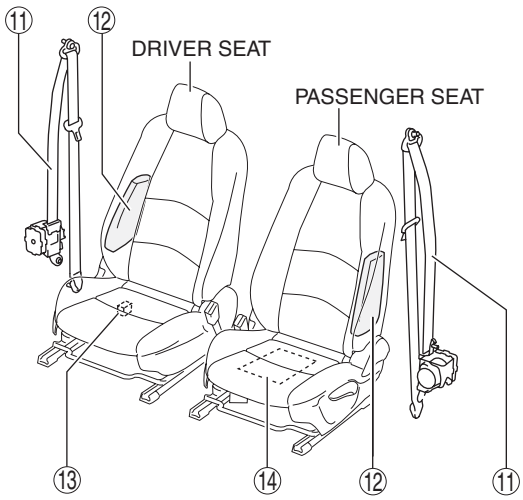

am2zzw00009736

1	Curtain air bag module (See CURTAIN AIR BAG MODULE REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
2	SAS control module (See SAS CONTROL MODULE REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See SAS CONTROL MODULE CONFIGURATION (USING READ/WRITE FUNCTION) [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See SAS CONTROL MODULE CONFIGURATION (USING AS-BUILT DATA) [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
3	Driver-side air bag module (See DRIVER-SIDE AIR BAG MODULE REMOVAL [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
4	Clock spring (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING ADJUSTMENT [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
5	Passenger air bag deactivation (PAD) indicator light (See INDICATOR UNIT REMOVAL/ INSTALLATION.) (See INDICATOR UNIT INSPECTION.)
6	Passenger-side air bag module (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
7	Passenger air bag deactivation (PAD) switch (See PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
8	Side air bag sensor (See SIDE AIR BAG SENSOR REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
9	Pressure sensor (See PRESSURE SENSOR REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
10	Crash zone sensor (See CRASH ZONE SENSOR REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
11	Front pre-tensioner seat belt (See FRONT SEAT BELT REMOVAL/ INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
12	Side air bag module (See SIDE AIR BAG MODULE REMOVAL/ INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
13	Seat track position sensor (See SEAT TRACK POSITION SENSOR REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)
14	Occupancy sensor (See OCCUPANCY SENSOR INSPECTION.)

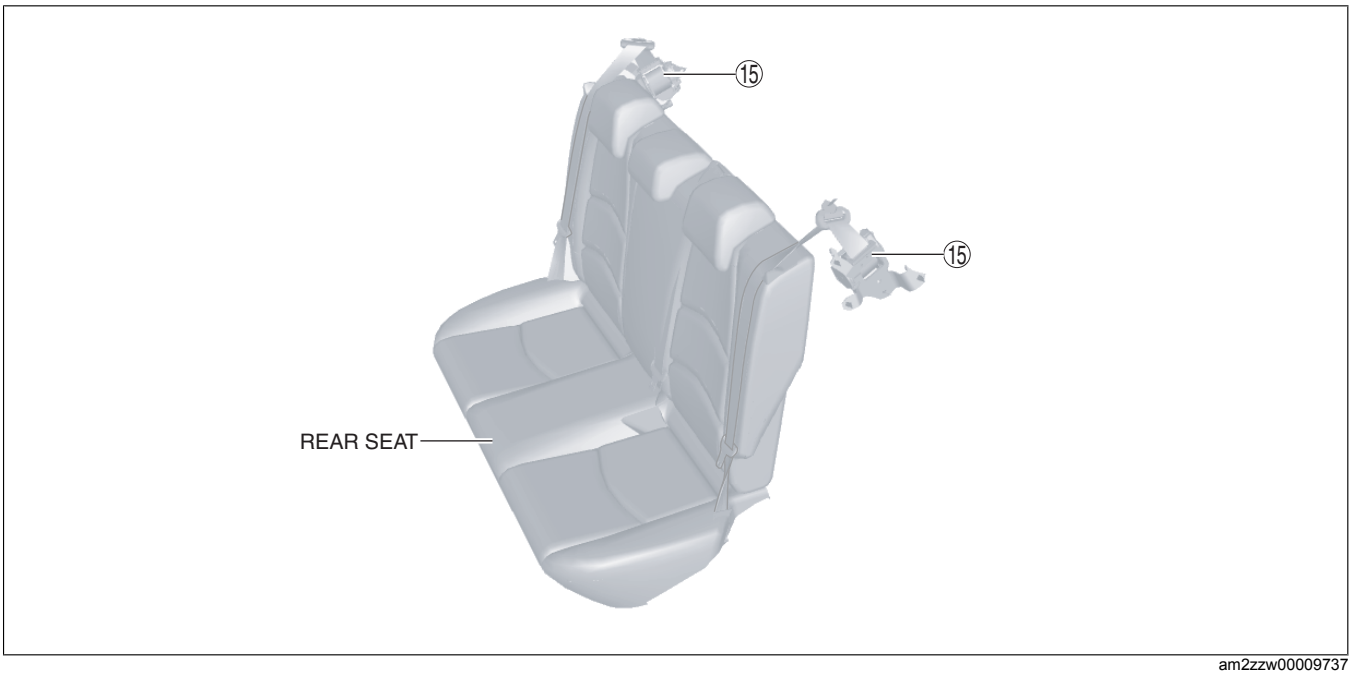

am2zzw00009737

15	Rear pre-tensioner seat belt (See REAR SEAT BELT REMOVAL/ INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES [TWO-STEP DEPLOYMENT CONTROL SYSTEM].)