CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM]

id0810b2802000


Warning

- **Handling the driver-side air bag module improperly can accidentally deploy the air bag module, which may seriously injure you. Read the air bag system service warnings and cautions before handling the air bag module. (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)**

Note


- When removing the driver-side air bag module, it is necessary to rotate the steering wheel. If the ignition has been switched OFF (LOCK) with the driver's door closed, the steering wheel will be locked. Perform the procedure from Steps 1-3 so that the steering wheel will not be locked.

1. Switch the ignition ON (engine off or on).
2. Open the driver's door.
3. Switch the ignition off.
4. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
5. Remove the following parts:
   (1) Driver-side air bag module (See DRIVER-SIDE AIR BAG MODULE REMOVAL [STANDARD DEPLOYMENT CONTROL SYSTEM].)(See DRIVER-SIDE AIR BAG MODULE INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
   (2) Steering wheel (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
   (3) Column cover (See COLUMN COVER REMOVAL/INSTALLATION.)
6. Disconnect the clock spring connector.
7. Disconnect the steering angle sensor connector. (with steering angle sensor)

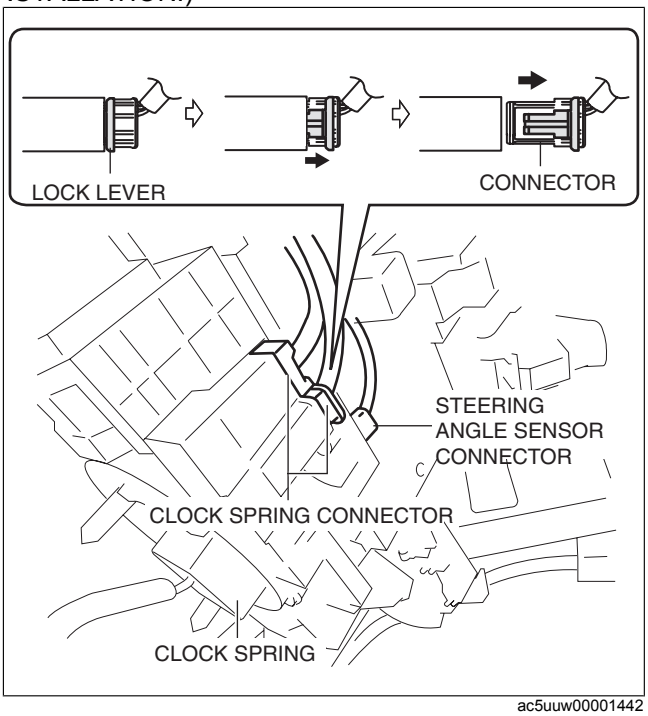

ac5uuw00001442

8. Remove the tab direction of the arrow shown in the figure and remove the clock spring.

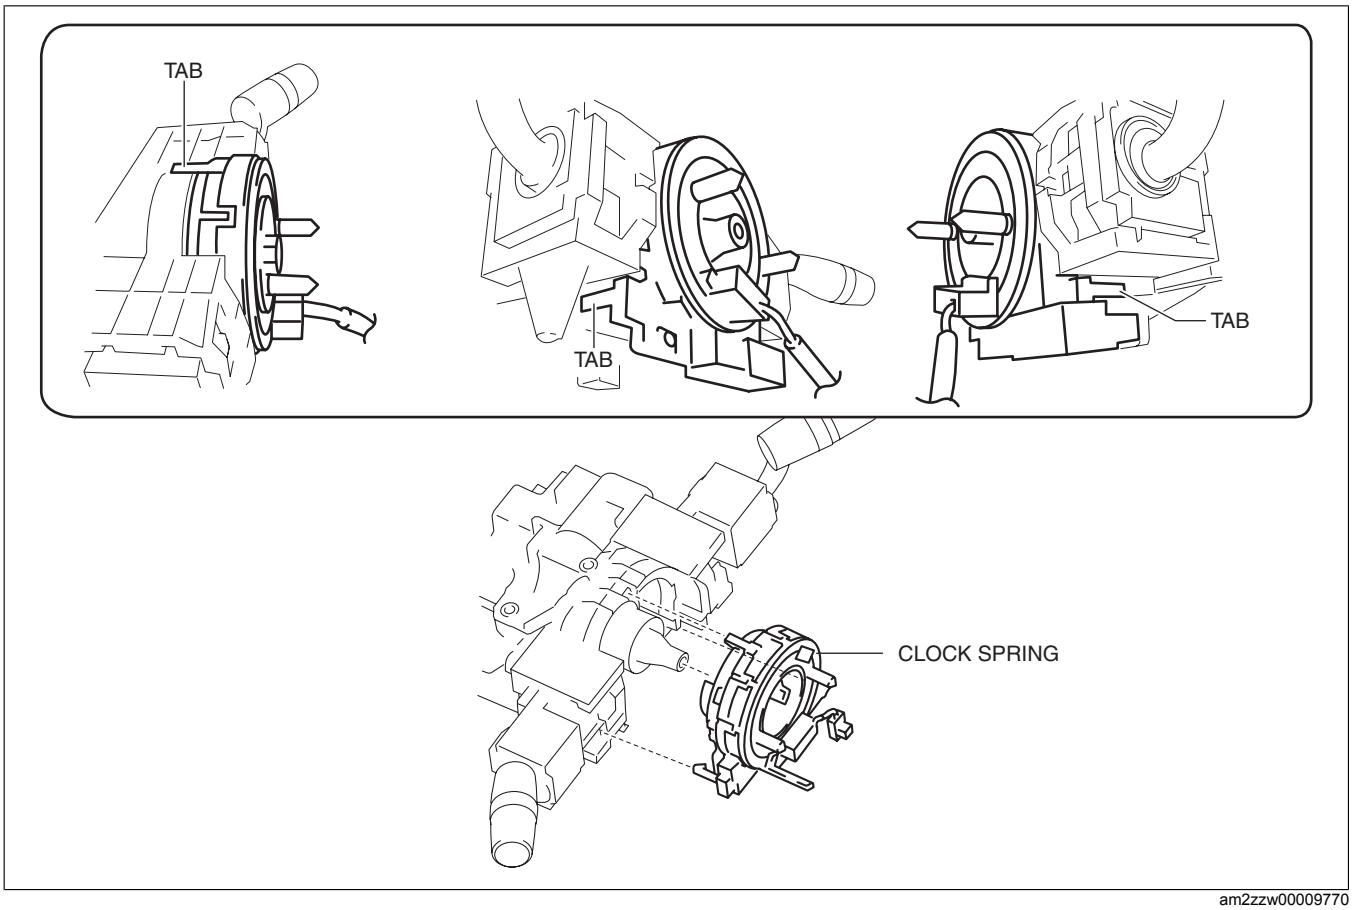

am2zzw00009770

9. Install in the reverse order of removal. (See Clock Spring Installation Note.)
10. Switch the ignition ON (engine off or on).
11. Verify that the air bag/seat belt pre-tensioner system warning light illuminates for **approx. 6 s** and turns off.
    - If the air bag/seat belt pre-tensioner system warning light does not operate in the manner described above, there are malfunctions in the system. Inspect the system using the on-board diagnostic. (See FLOWCHART [STANDARD DEPLOYMENT CONTROL SYSTEM].)

Clock Spring Installation Note

Caution

- **If the clock spring is not adjusted, the spring wire in the clock spring will break due to overtension when the steering wheel is turned. Always adjust the clock spring after installing it.**

- Adjust the clock spring after installing it. (See CLOCK SPRING ADJUSTMENT [STANDARD DEPLOYMENT CONTROL SYSTEM].)