
CLOCK SPRING ADJUSTMENT [STANDARD DEPLOYMENT CONTROL SYSTEM]

id0810b2802100

1. Set the front wheels straight ahead.


Caution
- **The clock spring will break if over-wound. Do not forcibly turn the clock spring.**

2. Turn the clock spring clockwise until it stops.

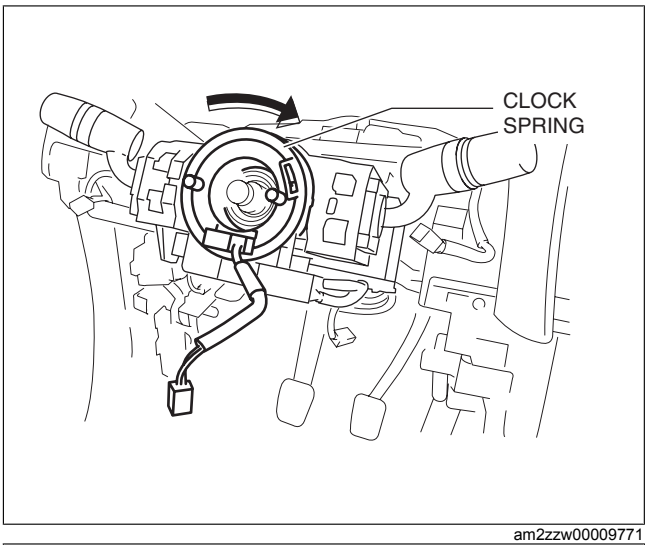


am2zzw00009771

3. From the stopped position, turn the clock spring counterclockwise **approx. 2 turns**.

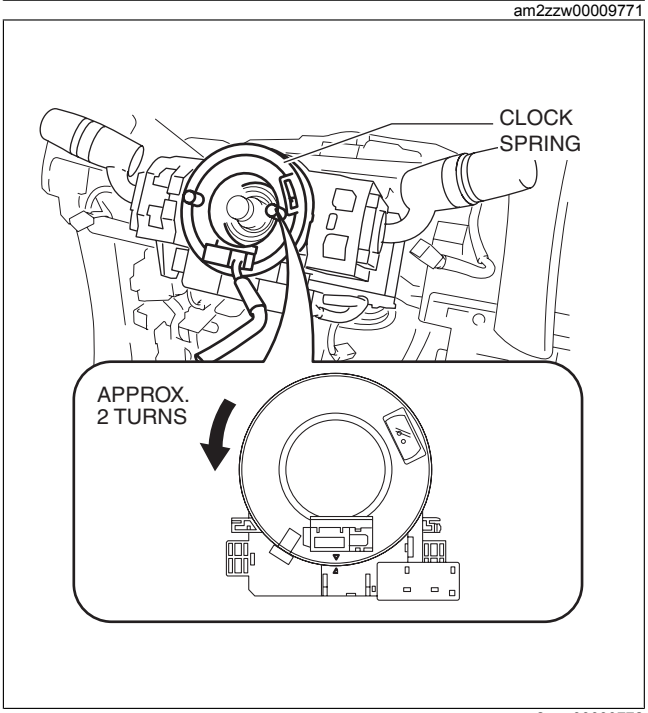

am2zzw00009772


4. Align the mark on the clock spring with the mark on the outer housing.

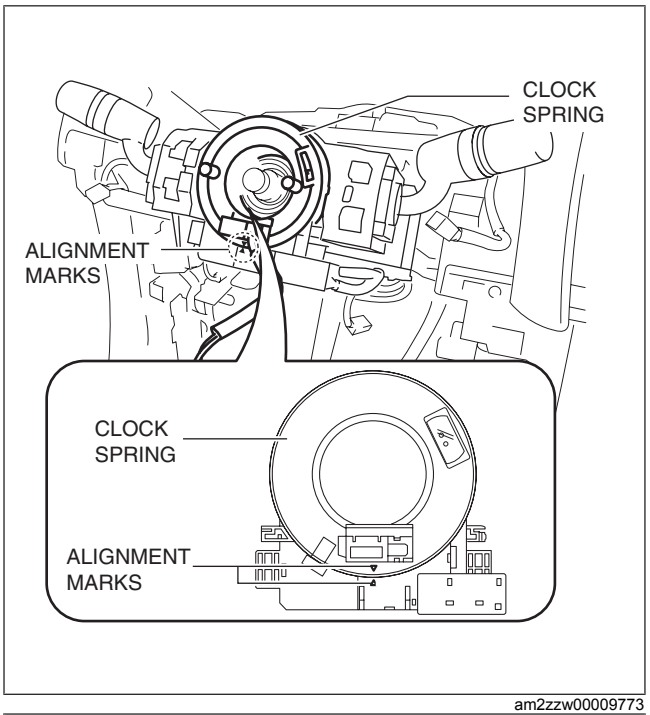

am2zzw00009773

Note

- After adjusting the alignment marks, the guides can be verified in the viewing slots shown in the figure.

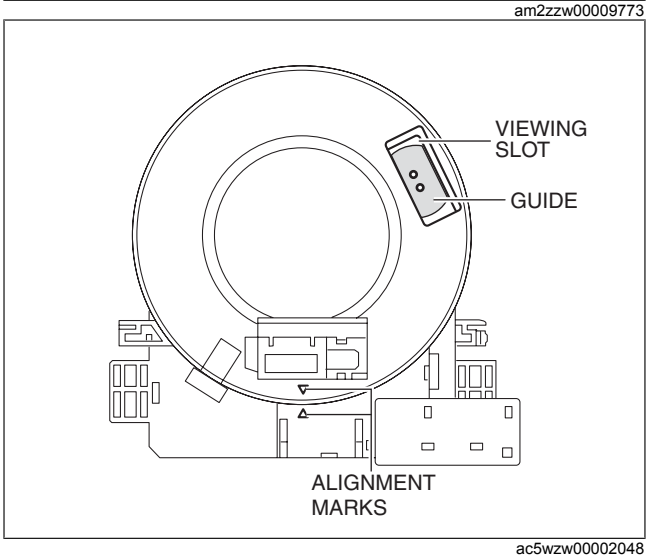

ac5wzw00002048