
CLOCK SPRING INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM]

id0810b2802200


1. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the driver-side air bag module. (See DRIVER-SIDE AIR BAG MODULE REMOVAL [STANDARD DEPLOYMENT CONTROL SYSTEM].)(See DRIVER-SIDE AIR BAG MODULE INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
3. Remove the steering wheel. (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
4. Remove the column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)
5. Remove the clock spring. (See CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
6. Verify that the continuity is as indicated in the table.
   - If not as indicated in the table, replace the clock spring. (See CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)

Note


- When the vehicle-side connector for the clock spring is disconnected, terminals 2A and 2B are shorted to prevent unexpected operation (deployment) of the air bag module.

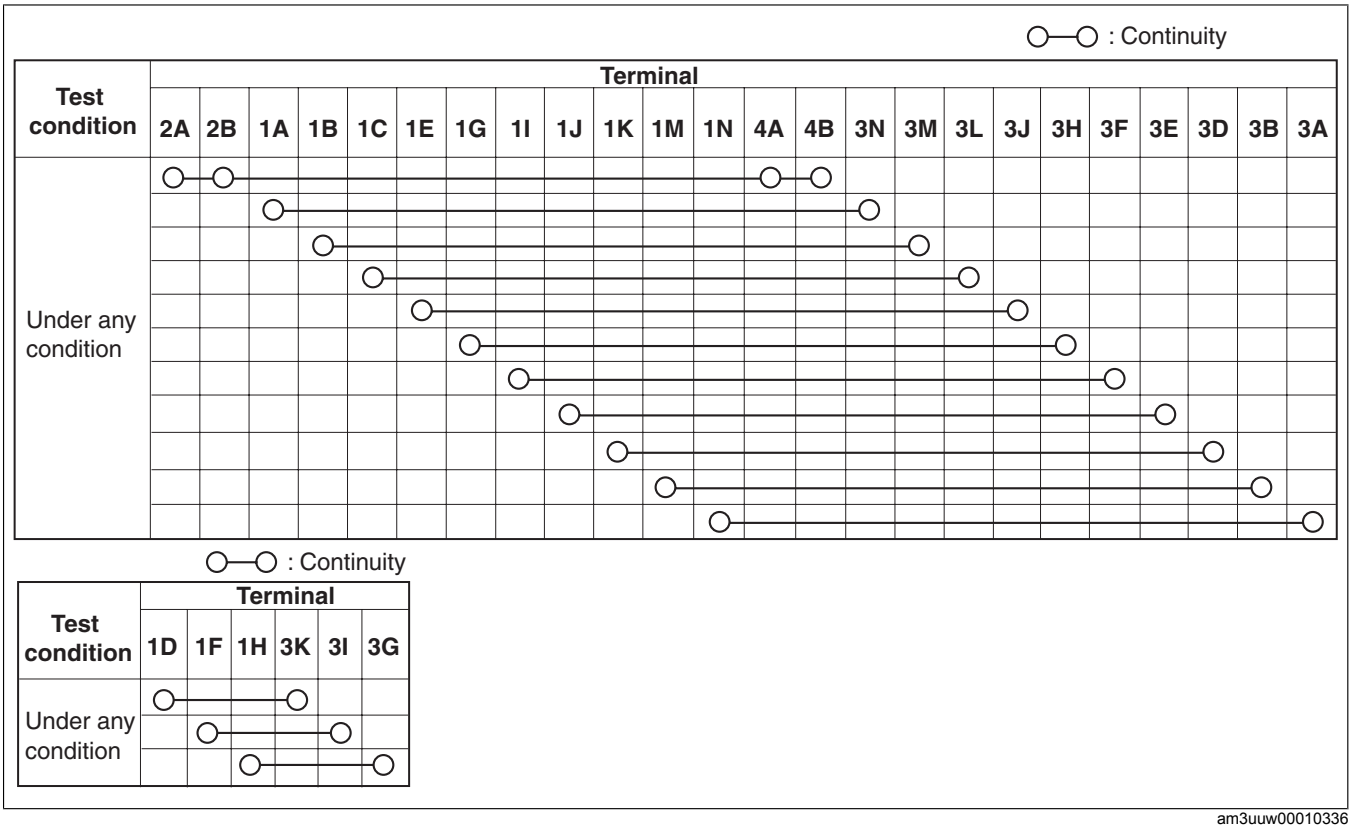

am3uuw00010336

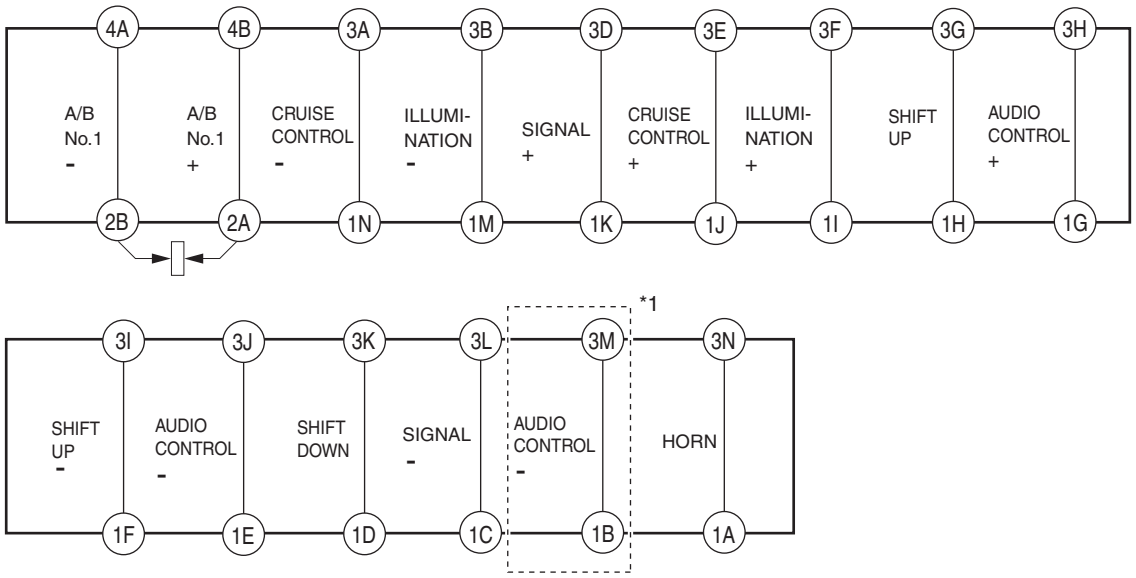

*1 : WITH Bluetooth® SYSTEM (HANDS-FREE TELEPHONE (HF/TEL) SYSTEM)

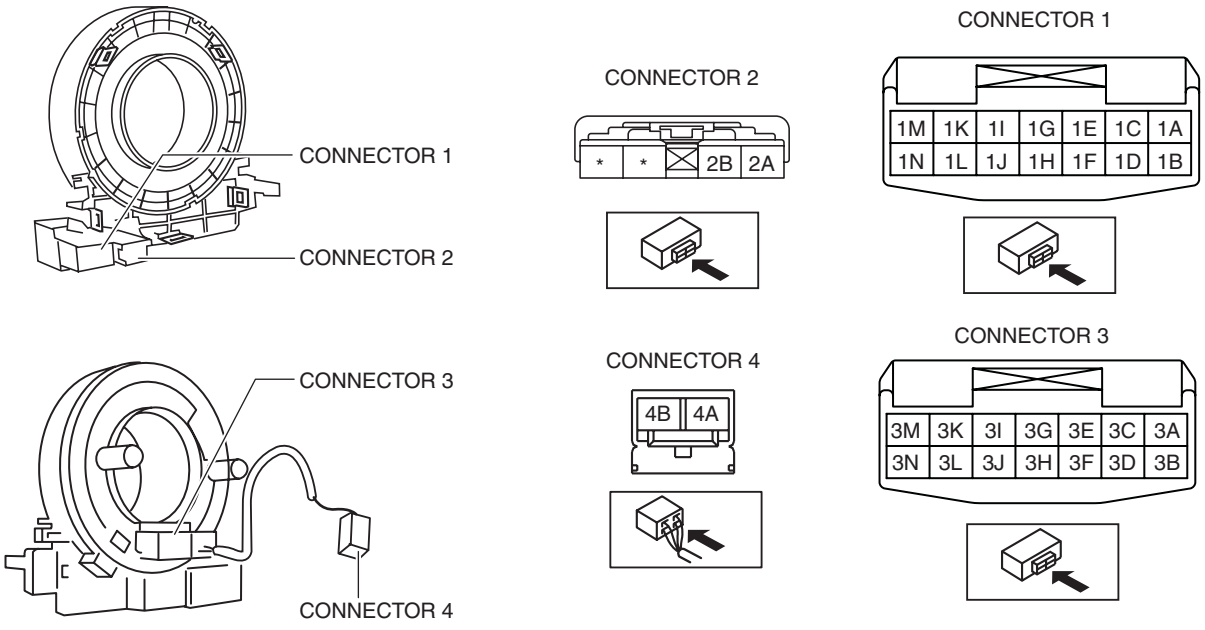

am2zzw00011954