
FRONT BUCKLE REMOVAL/INSTALLATION

id081100800400

Warning


- **Improper handling of a front seat with a side air bag module could accidentally operate (deploy) the air bag and cause serious injury. Read the air bag system service warnings and cautions before handling a front seat with a side air bag module. (See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)**

1. Switch the ignition off.
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the front seat. (See FRONT SEAT REMOVAL/INSTALLATION.)
4. Disconnect the front buckle connector.

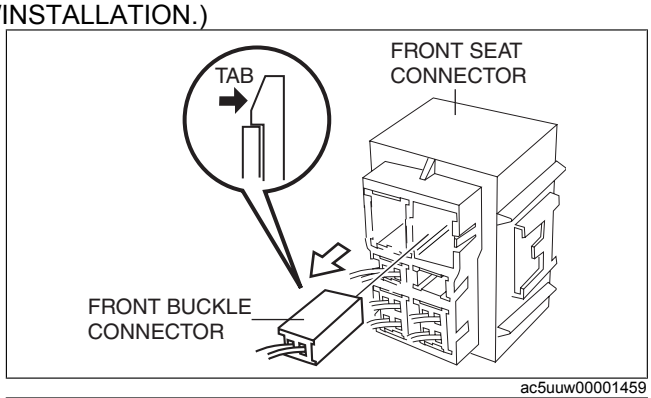

ac5uuw00001459

5. Remove the bolt.
6. Remove the front buckle.
7. Install in the reverse order of removal.

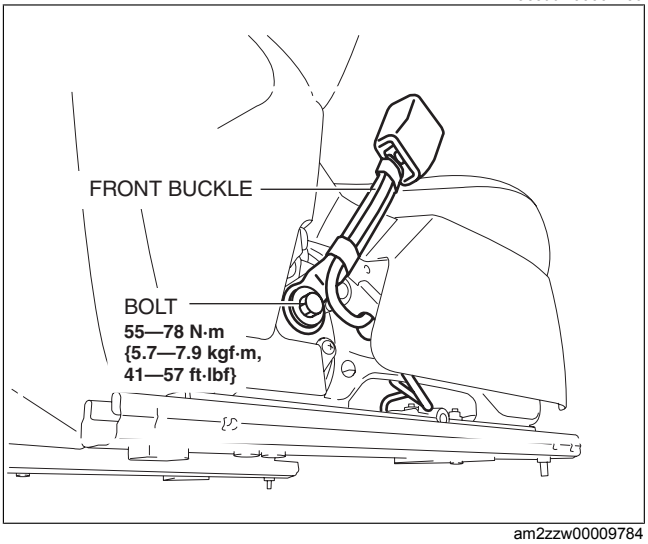

am2zzw00009784