
REAR BUCKLE REMOVAL/INSTALLATION


id081100800700

1. Switch the ignition off.
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
3. Remove the rear seat cushion. (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
4. Disconnect the rear buckle switch connector. (with rear buckle switch)

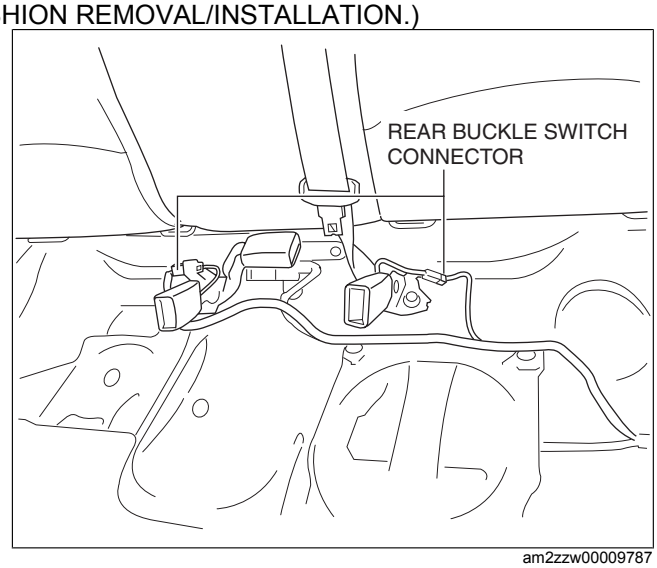

am2zzw00009787

5. Remove the bolts.

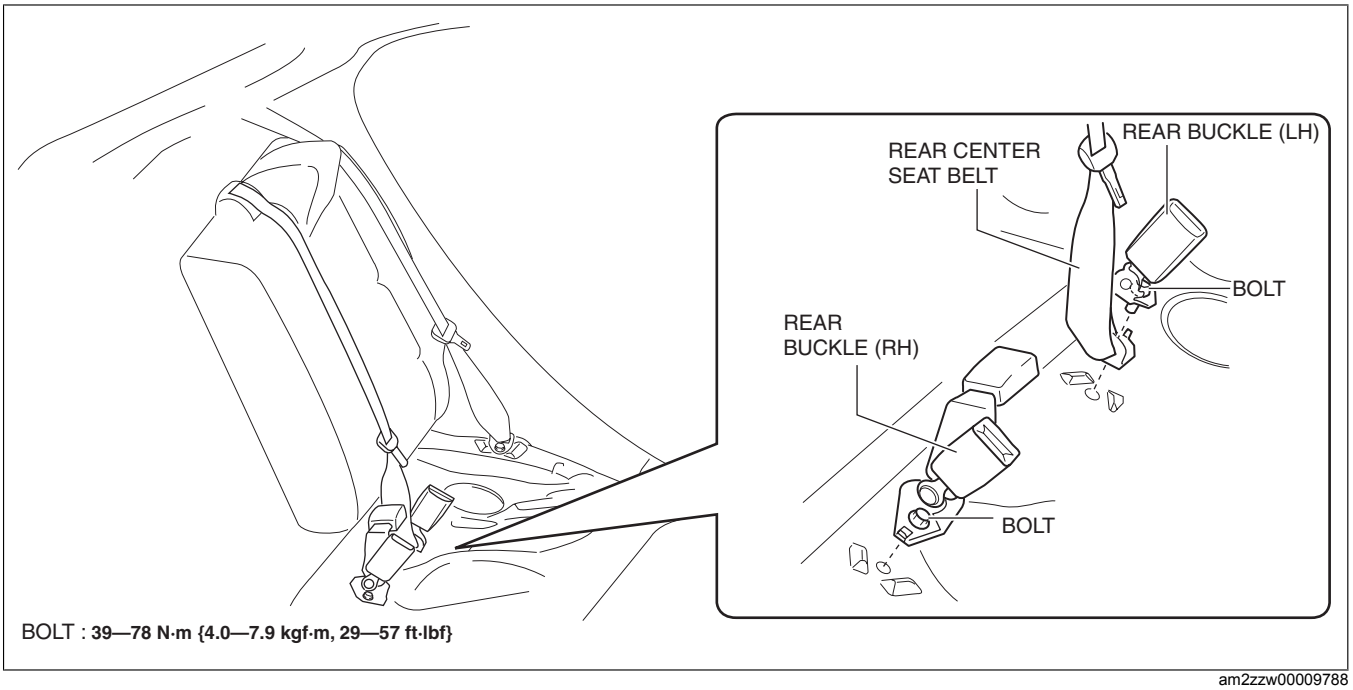


am2zzw00009788

6. Remove the rear buckle (RH) and rear buckle (LH).
7. Install in the reverse order of removal. (See Rear Buckle Installation Note.)

Rear Buckle Installation Note

1. After installing the rear buckle, place it as shown in the figure.

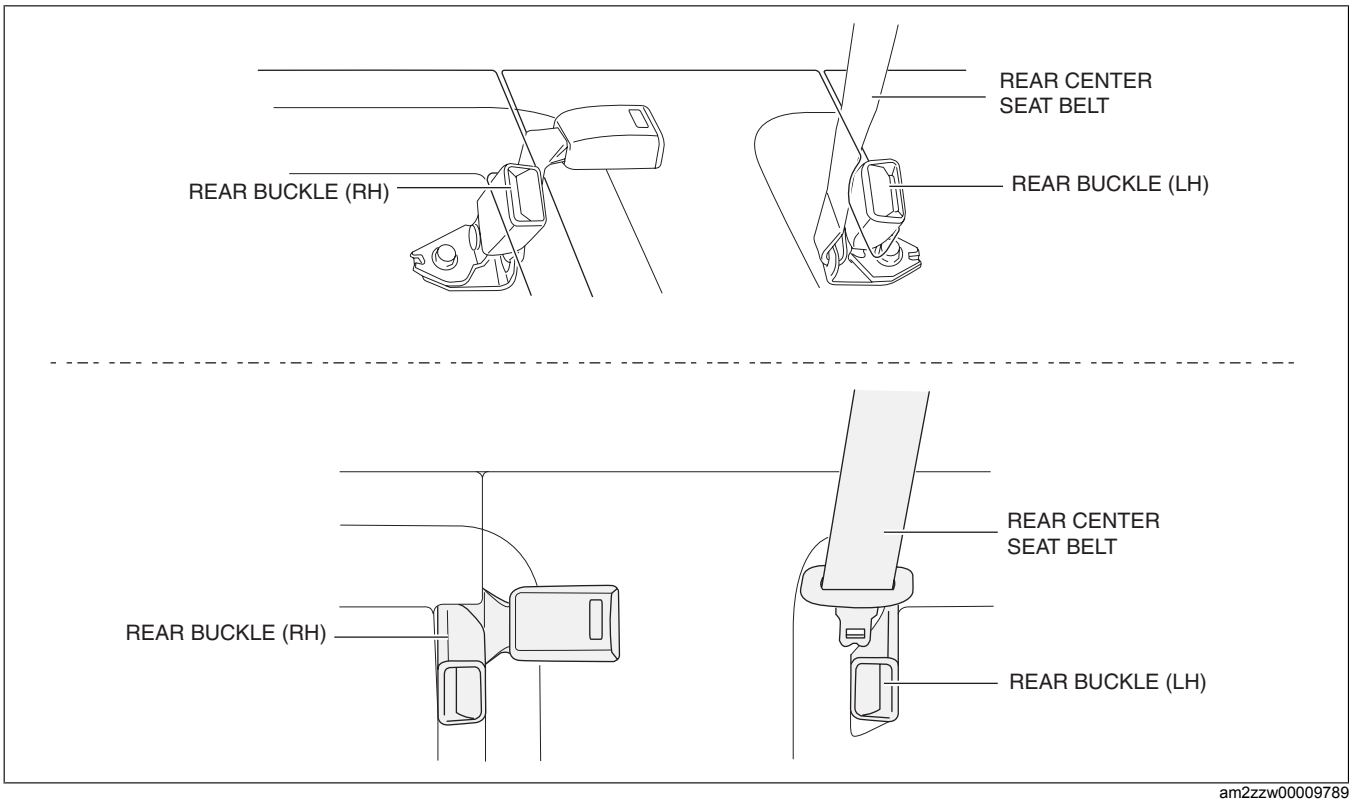

am2zzw00009789