
DTC B11CB:15 [BLIND SPOT MONITORING (BSM) SYSTEM]

id09021o064500

Caution

- **When replacing a blind spot monitoring (BSM) control module (RH) having any of the following part numbers, it is necessary to replace the blind spot monitoring (BSM) control module (LH) at the same time to perform the configuration normally.**
  - **— DA6A-67Y80 A**
  - **— DA6A-67Y80 B**

Description	Blind spot monitoring (BSM) warning light (RH) circuit malfunction
Detection condition	• Blind spot monitoring (BSM) control module (RH) detects an open circuit or short to power supply in the blind spot monitoring (BSM) warning light (RH) circuit with the ignition switched ON (engine off or on).
Fail-safe	• Blind spot monitoring (BSM) system is stopped.
Possible cause	• Power outer mirror (RH) connector or terminal malfunction • Open circuit in wiring harness between power outer mirror (RH) terminal G and body ground • Blind spot monitoring (BSM) warning light (RH) malfunction • Blind spot monitoring (BSM) control module (RH) connector or terminal malfunction • Short to power supply in wiring harness between blind spot monitoring (BSM) control module (RH) terminal D and power outer mirror (RH) terminal D • Open circuit in wiring harness between blind spot monitoring (BSM) control module (RH) terminal D and power outer mirror (RH) terminal D • Blind spot monitoring (BSM) control module (RH) malfunction

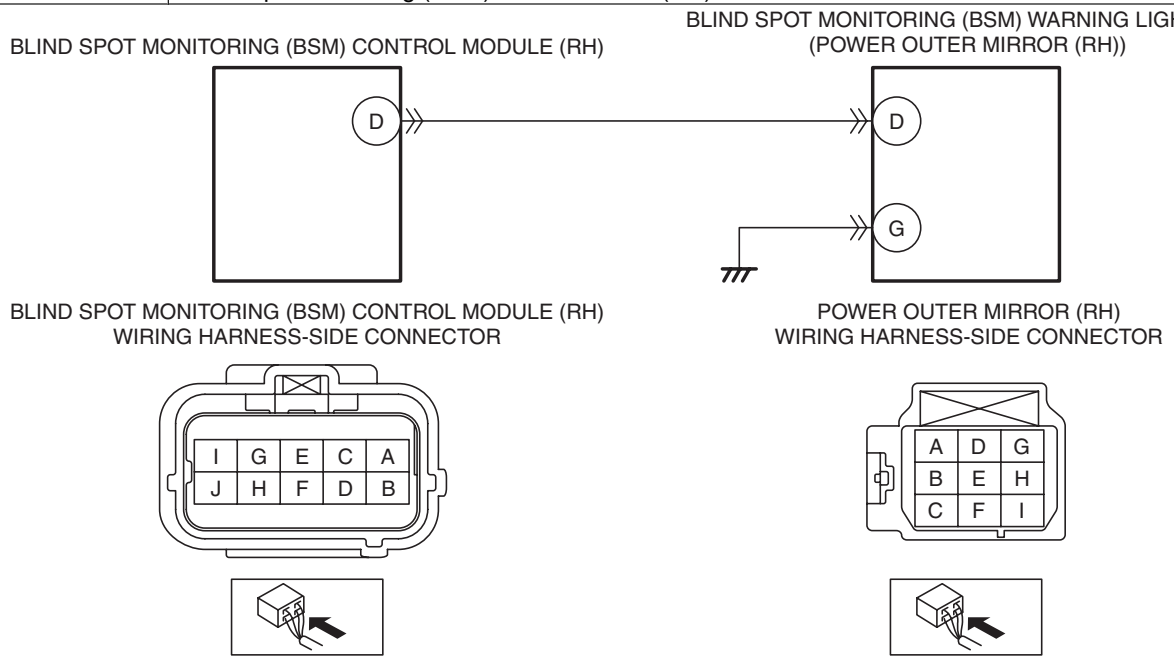

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT POWER OUTER MIRROR (RH) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the power outer mirror (RH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.

Step	Inspection		Action
2	**INSPECT BLIND SPOT MONITORING (BSM) WARNING LIGHT (RH) GROUND CIRCUIT FOR OPEN CIRCUIT** • Verify that the power outer mirror (RH) connector is disconnected. • Inspect for continuity between power outer mirror (RH) terminal G (wiring harness-side) and body ground. • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between power outer mirror (RH) terminal G and body ground. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 7.
3	**INSPECT BLIND SPOT MONITORING (BSM) WARNING LIGHT (RH)** • Inspect the blind spot monitoring (BSM) warning light (RH). (See POWER OUTER MIRROR INSPECTION.) (See OUTER MIRROR GLASS INSPECTION.) • Is the blind spot monitoring (BSM) warning light (RH) normal?	Yes	Go to the next step.
		No	Replace the power outer mirror (RH) or outer mirror glass (RH), then go to Step 7. (See POWER OUTER MIRROR REMOVAL/ INSTALLATION.) (See OUTER MIRROR GLASS REMOVAL.) (See OUTER MIRROR GLASS INSTALLATION.)
4	**INSPECT BLIND SPOT MONITORING (BSM) CONTROL MODULE (RH) CONNECTOR CONDITION** • Disconnect the blind spot monitoring (BSM) control module (RH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
5	**INSPECT BLIND SPOT MONITORING (BSM) WARNING LIGHT (RH) CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the blind spot monitoring (BSM) control module (RH) and power outer mirror (RH) connectors are disconnected. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at the power outer mirror (RH) terminal D (wiring harness-side). • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between blind spot monitoring (BSM) control module (RH) terminal D and power outer mirror (RH) terminal D. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to Step 7.
6	**INSPECT BLIND SPOT MONITORING (BSM) WARNING LIGHT (RH) CIRCUIT FOR OPEN CIRCUIT** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Verify that the blind spot monitoring (BSM) control module (RH) and power outer mirror (RH) connectors are disconnected. • Inspect for continuity between blind spot monitoring (BSM) control module (RH) terminal D (wiring harness-side) and power outer mirror (RH) terminal D (wiring harness-side). • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between blind spot monitoring (BSM) control module (RH) terminal D and power outer mirror (RH) terminal D. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to the next step.

Step	Inspection		Action
7	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the blind spot monitoring (BSM) control module using the M-MDS. (See CLEARING DTC [BLIND SPOT MONITORING (BSM) SYSTEM].) • Illuminate the blind spot monitoring (BSM) warning light (RH) using the simulation item WRN_IND_R. (See ACTIVE COMMAND MODES INSPECTION [BLIND SPOT MONITORING (BSM) SYSTEM].) • Retrieve the blind spot monitoring (BSM) control module DTCs using the M-MDS. (See DTC INSPECTION [BLIND SPOT MONITORING (BSM) SYSTEM].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the blind spot monitoring (BSM) control module. (See BLIND SPOT MONITORING (BSM) CONTROL MODULE REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
8	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [BLIND SPOT MONITORING (BSM) SYSTEM].)
		No	DTC troubleshooting completed.