
DTC B11F2:23 [BLIND SPOT MONITORING (BSM) SYSTEM]

id09021o064800

Description	Blind spot monitoring (BSM) switch circuit malfunction
Detection condition	• Blind spot monitoring (BSM) control module (LH) receives the blind spot monitoring (BSM) switch ON signal from the instrument cluster for **2 min or more** with the ignition switched ON (engine off or on).
Fail-safe	• Blind spot monitoring (BSM) system is stopped.
Possible cause	• DTCs are stored in the instrument cluster. • Cluster switch connector or terminal malfunction • Blind spot monitoring (BSM) switch malfunction • Instrument cluster connector or terminal malfunction • Short to ground in wiring harness between the following terminals: — Instrument cluster terminal 1V—Cluster switch terminal B — Instrument cluster terminal 1A—Cluster switch terminal C • Instrument cluster malfunction • Blind spot monitoring (BSM) control module (LH) malfunction

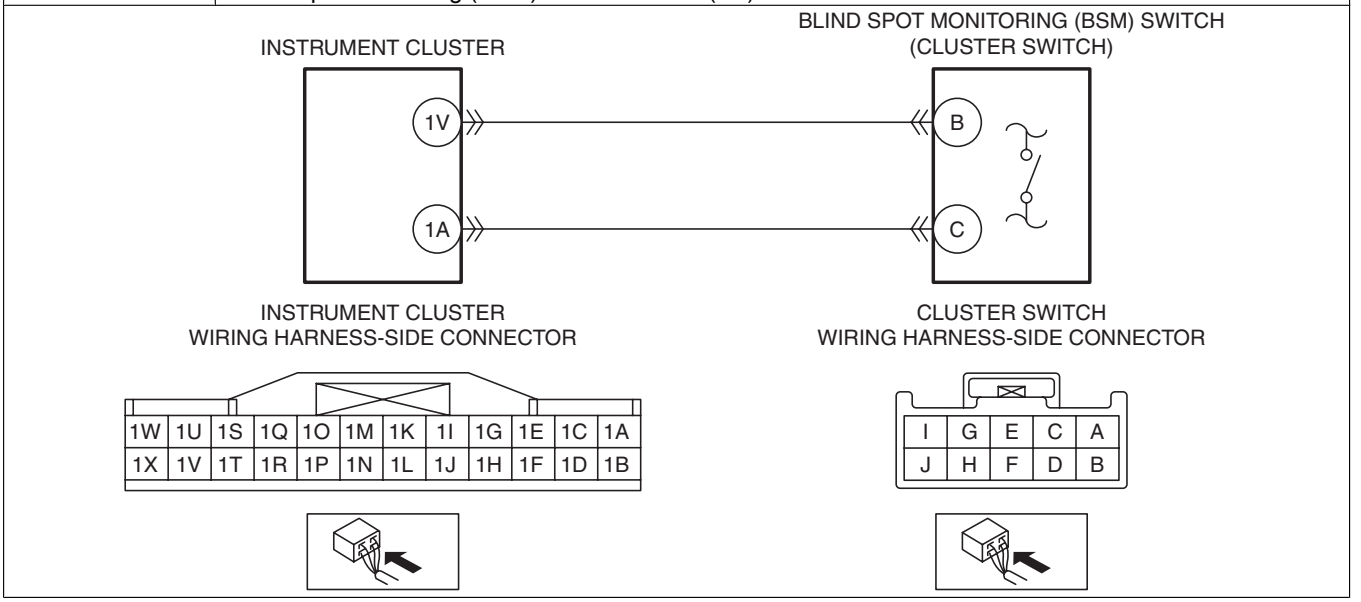

Diagnostic Procedure

Step	Inspection		Action
1	**VERIFY INSTRUMENT CLUSTER DTCs** • Retrieve the instrument cluster DTCs using the M-MDS. (See DTC INSPECTION [INSTRUMENT CLUSTER].) • Are any DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [INSTRUMENT CLUSTER].)
		No	Go to the next step.
2	**INSPECT CLUSTER SWITCH CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the cluster switch connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
3	**INSPECT BLIND SPOT MONITORING (BSM) SWITCH** • Inspect the blind spot monitoring (BSM) switch. (See BLIND SPOT MONITORING (BSM) SWITCH INSPECTION.) • Is the blind spot monitoring (BSM) switch normal?	Yes	Go to the next step.
		No	Replace the cluster switch, then go to Step 7. (See CLUSTER SWITCH REMOVAL/INSTALLATION.)

Step	Inspection		Action
4	**INSPECT INSTRUMENT CLUSTER CONNECTOR CONDITION** • Disconnect the instrument cluster connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
5	**INSPECT BLIND SPOT MONITORING (BSM) SWITCH CIRCUIT FOR SHORT TO GROUND** • Verify that the instrument cluster and cluster switch connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — Cluster switch terminal B — Cluster switch terminal C • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Instrument cluster terminal 1V—Cluster switch terminal B • Instrument cluster terminal 1A—Cluster switch terminal C **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step 7.
		No	Go to the next step.
6	**INSPECT INSTRUMENT CLUSTER** • Inspect the instrument cluster. (See INSTRUMENT CLUSTER INSPECTION.) • Is the instrument cluster normal?	Yes	Go to the next step.
		No	Replace the instrument cluster, then go to the next step. (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
7	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for blind spot monitoring (BSM) control module using the M-MDS. (See CLEARING DTC [BLIND SPOT MONITORING (BSM) SYSTEM].) • Switch the ignition ON (engine off or on) and wait for **2 min or more**. • Retrieve the blind spot monitoring (BSM) control module DTCs using the M-MDS. (See DTC INSPECTION [BLIND SPOT MONITORING (BSM) SYSTEM].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the blind spot monitoring (BSM) control module (LH). (See BLIND SPOT MONITORING (BSM) CONTROL MODULE REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
8	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [BLIND SPOT MONITORING (BSM) SYSTEM].)
		No	DTC troubleshooting completed.