
SECURITY INDICATOR LIGHT: 13, DTC: B13D3:94/P1260:00 [IMMOBILIZER SYSTEM]

id0902e4027800

Description	Communication error with remote transmitter
Detection condition	• Start stop unit could not detect the remote transmitter communication or communication error was detected.
Fail-safe	Not applicable
Possible cause	• When the ignition is switched ON (engine off or on), it is detected that the remote transmitter is outside of the vehicle. • Keyless receiver malfunction • Push button start connector or terminal malfunction • Keyless receiver connector or terminal malfunction • Start stop unit connector or terminal malfunction • Open circuit in wiring harness between the following terminals: — Start stop unit terminal 2Q—Keyless receiver terminal A — Start stop unit terminal 2R—Keyless receiver terminal B • Remote transmitter battery power low • Remote transmitter malfunction • Start stop unit malfunction **Note** • If any of the following items are touching or near the remote transmitter, signal communication between the remote transmitter and the vehicle is negatively affected, resulting in the engine not starting. — Spare keys — Keys for other vehicles equipped with an immobilizer system — Any metallic object — Any electronic device, or any credit or other card with magnetic strips — Radio wave outputting device nearby

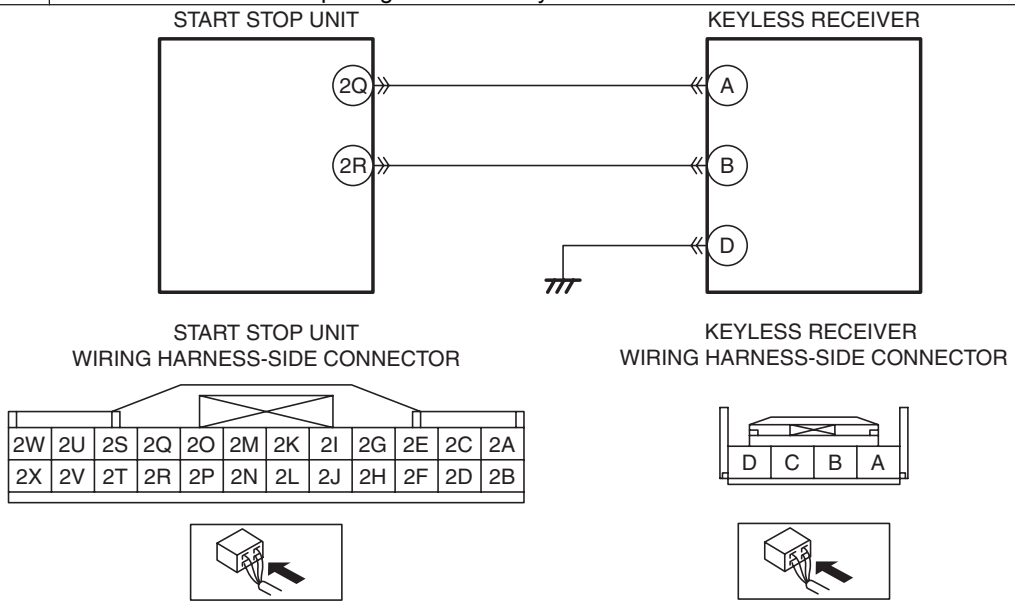

Diagnostic Procedure

Step	Inspection		Action
1	**VERIFY DTCs WITH REMOTE TRANSMITTER IN DIFFERENT LOCATIONS** • Perform the following procedure **3 times** with the remote transmitter inside the cabin with certainty. 1. Switch the ignition off. 2. Switch the ignition ON (engine off or on). 3. Retrieve the immobilizer system DTCs using the M-MDS. (See DTC INSPECTION [IMMOBILIZER SYSTEM].) 4. Move the remote transmitter to a different location. • Is the security indicator light: 13, DTC B13D3:94/P1260:00 displayed?	Yes	Go to the next step.
		No	Go to Step 10.
2	**PERFORM DTC INSPECTION AND VERIFY KEYLESS RECEIVER MALFUNCTION** • Clear the DTC for the start stop unit using the M-MDS. (See CLEARING DTC [START STOP UNIT].) • Retrieve the start stop unit DTCs using the M-MDS. (See DTC INSPECTION [START STOP UNIT].) • Is DTC U201F:11/U201F:12 displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [START STOP UNIT].)
		No	Go to the next step.
3	**INSPECT PUSH BUTTON START CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the push button start connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 9.
4	**INSPECT KEYLESS RECEIVER CONNECTOR CONDITION** • Disconnect the keyless receiver connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 9.
5	**INSPECT START STOP UNIT CONNECTOR CONDITION** • Disconnect the start stop unit connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 9.

Step	Inspection		Action
6	**INSPECT KEYLESS RECEIVER CIRCUIT FOR OPEN CIRCUIT** • Verify that the start stop unit and keyless receiver connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — Start stop unit terminal 2Q—Keyless receiver terminal A — Start stop unit terminal 2R—Keyless receiver terminal B • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Start stop unit terminal 2Q—Keyless receiver terminal A • Start stop unit terminal 2R—Keyless receiver terminal B **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 9.
7	**INSPECT REMOTE TRANSMITTER BATTERY POWER** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Inspect the battery power of the remote transmitter. (See REMOTE TRANSMITTER BATTERY VOLTAGE INSPECTION.) • Does the KEY indicator light (green) flash for **approx. 30 s**?	Yes	**Note** • If the KEY indicator light (green) flashes for **approx. 30 s**, the battery power of the remote transmitter is low. Replace the remote transmitter battery and go to Step 5. (See REMOTE TRANSMITTER DISASSEMBLY/ASSEMBLY.)
		No	Go to Step 9.
8	**VERIFY IF MALFUNCTION CAUSE IS REMOTE TRANSMITTER** • Clear the DTC for the immobilizer system using the M-MDS. (See CLEARING DTC [IMMOBILIZER SYSTEM].) • Re-program key ID number of the remote transmitter. (See IMMOBILIZER SYSTEM-RELATED PARTS PROGRAMMING.) • Retrieve the immobilizer system DTCs using the M-MDS. (See DTC INSPECTION [IMMOBILIZER SYSTEM].) • Is the security indicator light: 13, DTC B13D3:94/P1260:00 displayed?	Yes	Replace the remote transmitter, then go to the next step. (See IMMOBILIZER SYSTEM-RELATED PARTS PROGRAMMING.)
		No	Go to Step 10.
9	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the immobilizer system using the M-MDS. (See CLEARING DTC [IMMOBILIZER SYSTEM].) • Retrieve the immobilizer system DTCs using the M-MDS. (See DTC INSPECTION [IMMOBILIZER SYSTEM].) • Is the security indicator light: 13, DTC B13D3:94/P1260:00 displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the start stop unit. (See START STOP UNIT REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
10	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [IMMOBILIZER SYSTEM].)
		No	DTC troubleshooting completed.