FOREWORD [IMMOBILIZER SYSTEM]

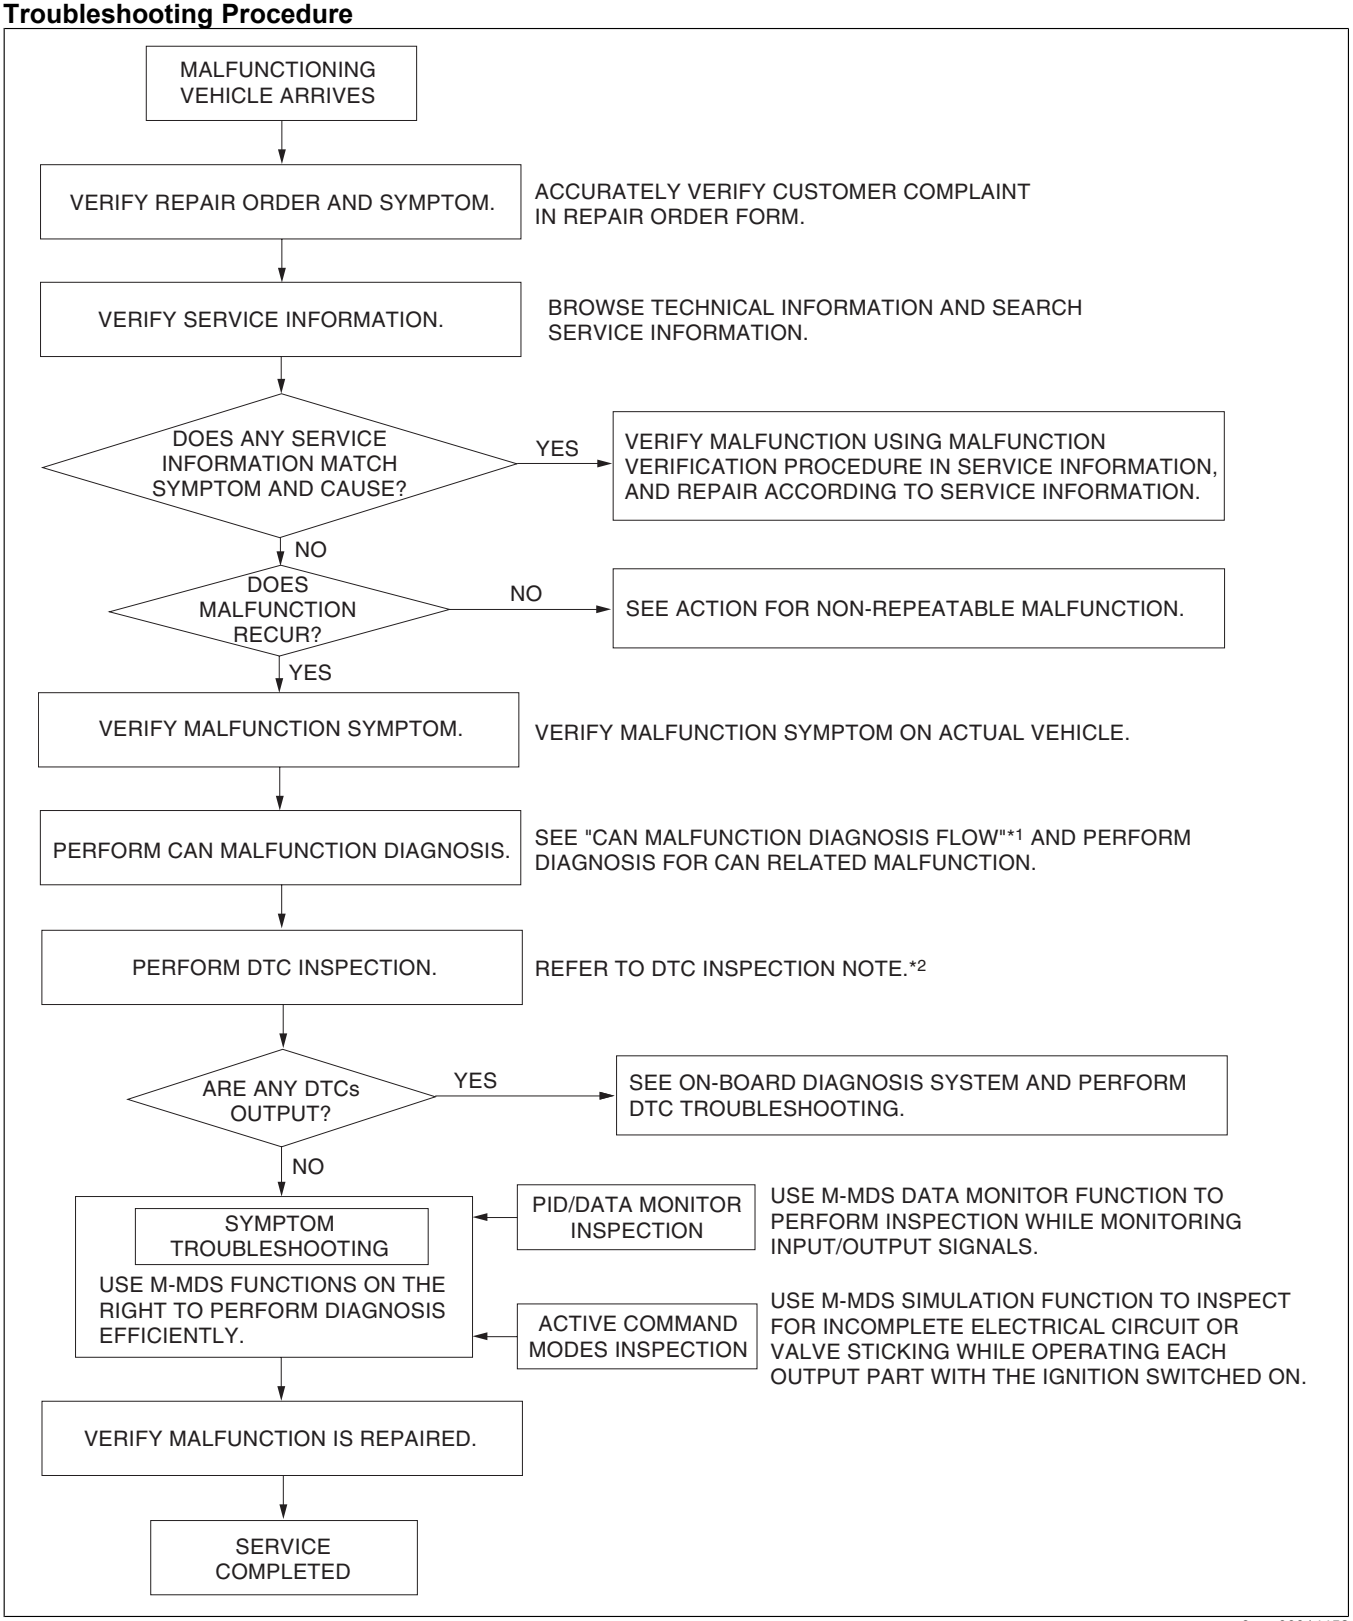
id0902e4028400

- If there is any vehicle malfunction complaint lodged by a customer, perform malfunction diagnosis according to the troubleshooting procedure.

Note

- If any of the following items are touching or near the remote transmitter, signal communication between the remote transmitter and the vehicle is negatively affected, resulting in the engine not starting.
  - Spare keys
  - Keys for other vehicles equipped with an immobilizer system
  - Any metallic object
  - Any electronic device, or any credit or other card with magnetic strips
  - Radio wave outputting device nearby

Troubleshooting Procedure



am3zzw00014452

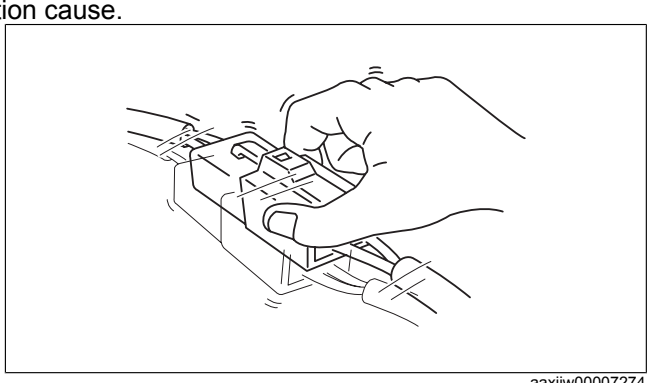
*1 : (See CONTROLLER AREA NETWORK (CAN) MALFUNCTION DIAGNOSIS FLOW [SKYACTIV-G 1.3, SKYACTIV-G 1.5 (R.H.D.)].) (See CONTROLLER AREA NETWORK (CAN) MALFUNCTION DIAGNOSIS FLOW [SKYACTIV-G 1.5 (L.H.D.)].) (See CONTROLLER AREA NETWORK (CAN) MALFUNCTION DIAGNOSIS FLOW [SKYACTIV-D 1.5].)

*2 : (See DTC Inspection Note.)

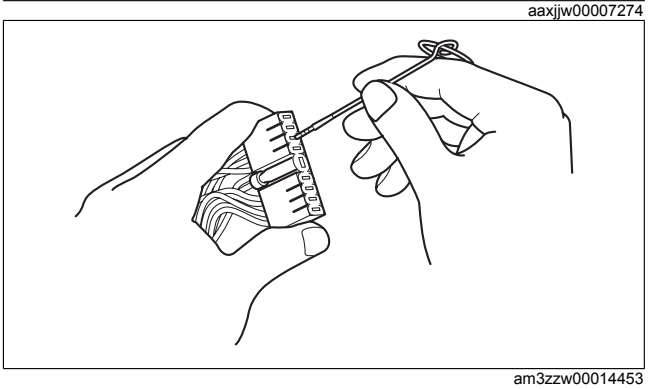
Action for Non-repeatable Malfunction

- If the malfunction does not recur, verify the malfunction cause by performing the following actions:

— Based on the repair order form, attempt to drive the vehicle or perform tests to replicate the malfunction, record the data at that time, and detect the malfunction cause.
— Shake the wiring harness or connector of the electrical component which is suspected to be the cause of the malfunction, and inspect for malfunction or occurrence of any DTCs.


aaxjjw00007274

— Inspect the female terminals on the connector of the electric component which is suspected to be the cause of the malfunction for poor connection.


am3zzw00014453

DTC Inspection Note

- When there is a malfunction in the immobilizer system, DTCs are recorded in the start stop unit and PCM.
- The DTCs stored in the start stop unit can be verified using the flashing pattern of the security indicator light and M-MDS.
- If immobilizer system DTCs are not recorded even if the engine cannot be started, perform symptom troubleshooting. (See NO.3 WILL NOT CRANK [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See NO.9 WILL NOT CRANK [SKYACTIV-D 1.5].)