
SECURITY INDICATOR LIGHT: 11, DTC: B10D9:87/P1260:00 [IMMOBILIZER SYSTEM]

id0902e4908000

Description	Coil antenna (built into push button start) error
Detection condition	• Start stop unit detected a malfunction in the coil antenna, and remote transmitter communication is not possible.
Fail-safe	Not applicable
Possible cause	• Push button start connector or terminal malfunction • Start stop unit connector or terminal malfunction • Short to ground in wiring harness between the following terminals: — Start stop unit terminal 1AC—Push button start terminal A — Start stop unit terminal 1AE—Push button start terminal B • Open circuit in wiring harness between the following terminals: — Start stop unit terminal 1AC—Push button start terminal A — Start stop unit terminal 1AE—Push button start terminal B • Coil antenna malfunction • Start stop unit malfunction

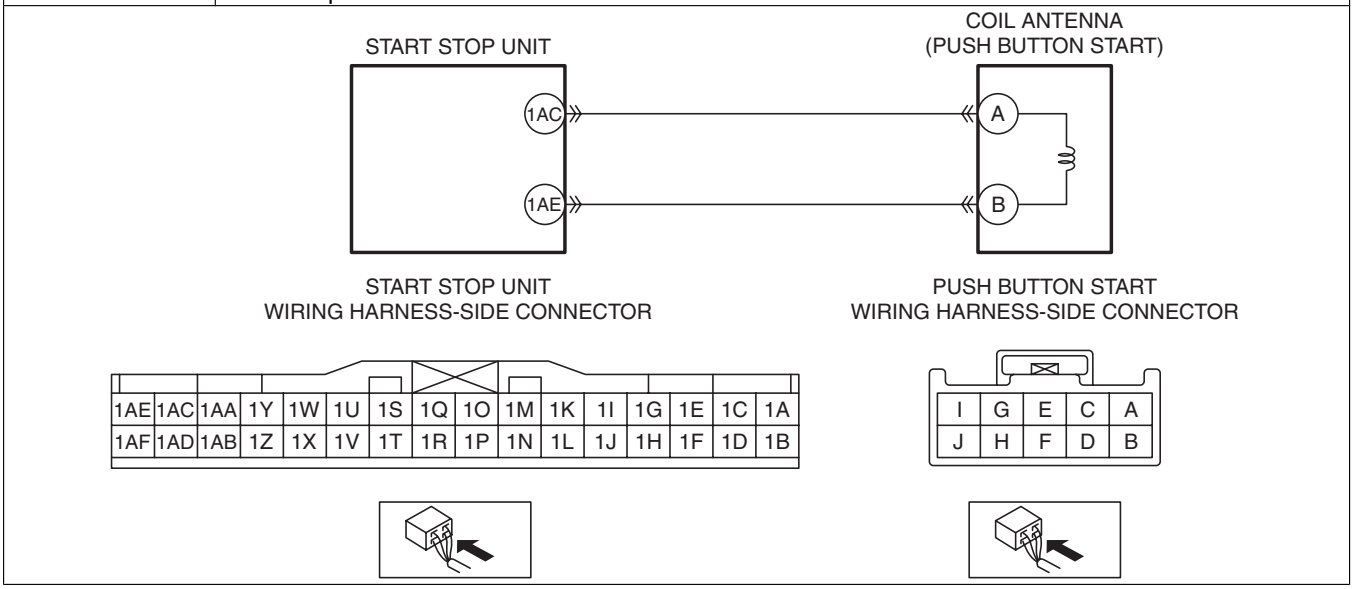

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT PUSH BUTTON START CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the push button start connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.
2	**INSPECT START STOP UNIT CONNECTOR CONDITION** • Disconnect the start stop unit connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.

Step	Inspection		Action
3	**INSPECT COIL ANTENNA CIRCUIT FOR SHORT TO GROUND** • Verify that the push button start and start stop unit connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — Push button start terminal A — Push button start terminal B • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Start stop unit terminal 1AC—Push button start terminal A • Start stop unit terminal 1AE—Push button start terminal B **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step 6.
		No	Go to the next step.
4	**INSPECT COIL ANTENNA CIRCUIT FOR OPEN CIRCUIT** • Verify that the push button start and start stop unit connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — Start stop unit terminal 1AC—Push button start terminal A — Start stop unit terminal 1AE—Push button start terminal B • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Start stop unit terminal 1AC—Push button start terminal A • Start stop unit terminal 1AE—Push button start terminal B **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 6.
5	**VERIFY IF MALFUNCTIONING LOCATION IS COIL ANTENNNA DEPENDING ON REPEATABILITY** • Always reconnect all disconnected connectors. • Remove the ROOM 25 A fuse. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the immobilizer system using the M-MDS. (See CLEARING DTC [IMMOBILIZER SYSTEM].) • Retrieve the immobilizer system DTCs using the M-MDS. (See DTC INSPECTION [IMMOBILIZER SYSTEM].) • Is the security indicator light: 11, DTC B10D9:87/P1260:00 displayed?	Yes	Replace the push button start, then go to the next step. (See PUSH BUTTON START REMOVAL/ INSTALLATION.)
		No	Go to Step 7.

Step	Inspection		Action
6	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Remove the ROOM 25 A fuse. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the immobilizer system using the M-MDS. (See CLEARING DTC [IMMOBILIZER SYSTEM].) • Retrieve the immobilizer system DTCs using the M-MDS. (See DTC INSPECTION [IMMOBILIZER SYSTEM].) • Is the security indicator light: 11, DTC B10D9:87/P1260:00 displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the start stop unit. (See START STOP UNIT REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
7	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [IMMOBILIZER SYSTEM].)
		No	DTC troubleshooting completed.