
DTC U2105:02 [INSTRUMENT CLUSTER]

id0902e8650400

Description	Drive selection switch circuit malfunction
Detection condition	• Instrument cluster detects an open circuit in the drive selection switch circuit for **5 s or more** with the ignition switched ON (engine off or on).
Fail-safe function	Not applicable
Possible cause	• Drive selection switch connector or terminal malfunction • Open circuit in wiring harness between drive selection switch terminal C and body ground • Instrument cluster connector or terminal malfunction • Open circuit in wiring harness between Instrument cluster terminal 1T and drive selection switch terminal B • Drive selection switch malfunction • Instrument cluster malfunction

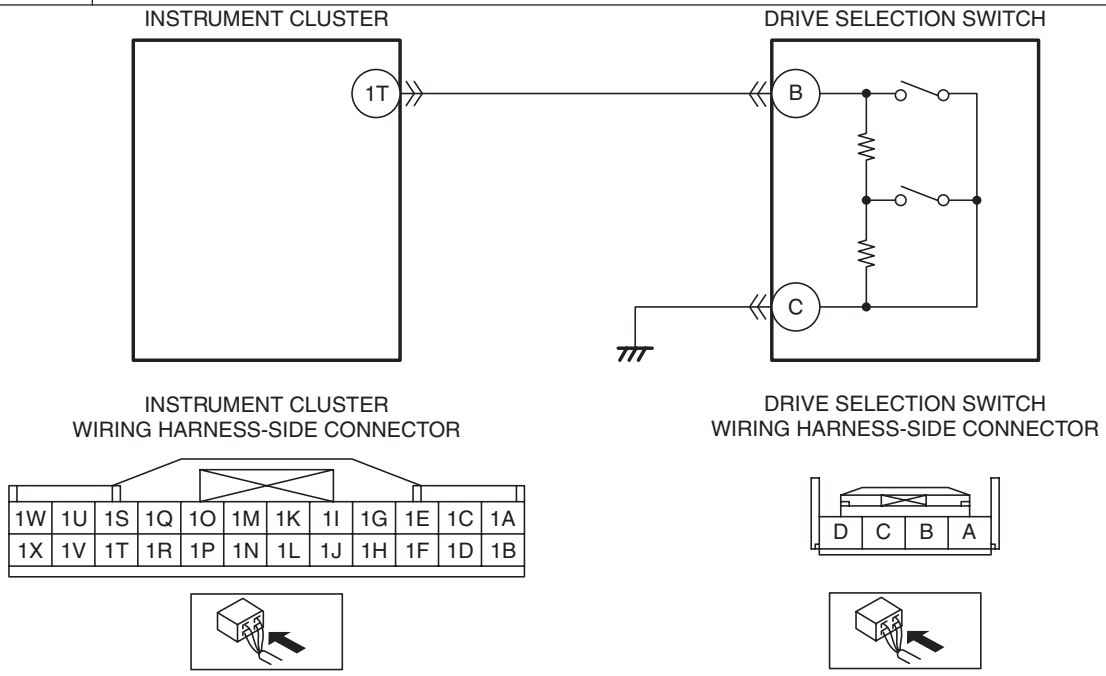

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT DRIVE SELECTION SWITCH CONNECTOR** • Switch the ignition to off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the drive selection switch connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.

Step	Inspection		Action
2	**INSPECT FOR OPEN CIRCUIT IN DRIVE SELECTION SWITCH GROUND CIRCUIT** • Verify that the drive selection switch connector is disconnected. • Inspect for continuity between drive selection switch terminal C (wiring harness-side) and body ground. • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between drive selection switch terminal C and body ground. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 6.
3	**INSPECT INSTRUMENT CLUSTER CONNECTOR** • Disconnect the instrument cluster connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.
4	**INSPECT FOR OPEN CIRCUIT IN DRIVE SELECTION SWITCH CIRCUIT** • Verify that the drive selection switch and instrument cluster connectors are disconnected. • Inspect for continuity between Instrument cluster terminal 1T (wiring harness-side) and drive selection switch terminal B (wiring harness-side). • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between Instrument cluster terminal 1T and drive selection switch terminal B. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 6.
5	**INSPECT DRIVE SELECTION SWITCH** • Inspect the drive selection switch. (See DRIVE SELECTION SWITCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is the drive selection switch normal?	Yes	Go to the next step.
		No	Replace the drive selection switch, then go to the next step. (See DRIVE SELECTION SWITCH REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the instrument cluster using the M-MDS. (See CLEARING DTC [INSTRUMENT CLUSTER].) • Switch the ignition ON (engine off or on) and wait for **5 s or more**. • Retrieve the instrument cluster DTCs using the M-MDS. (See DTC INSPECTION [INSTRUMENT CLUSTER].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the instrument cluster. (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
7	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [INSTRUMENT CLUSTER].)
		No	DTC troubleshooting completed.