
DTC B1B71:14 [INSTRUMENT CLUSTER]

id0902e8998900

Description	Evaporator temperature sensor circuit malfunction
Detection condition	• The instrument cluster detected an open circuit or a short to ground in the evaporator temperature sensor circuit for **0.1 s or more** with the ignition switched ON (engine off or on).
Fail-safe	Not applicable
Possible cause	• Evaporator temperature sensor connector or terminal malfunction • Instrument cluster connector or terminal malfunction • Short to ground in wiring harness between the following terminals: — Instrument cluster terminal 2O—Evaporator temperature sensor terminal B — Instrument cluster terminal 2P—Evaporator temperature sensor terminal A • Open circuit in wiring harness between the following terminals: — Instrument cluster terminal 2O—Evaporator temperature sensor terminal B — Instrument cluster terminal 2P—Evaporator temperature sensor terminal A • Evaporator temperature sensor malfunction • Instrument cluster malfunction

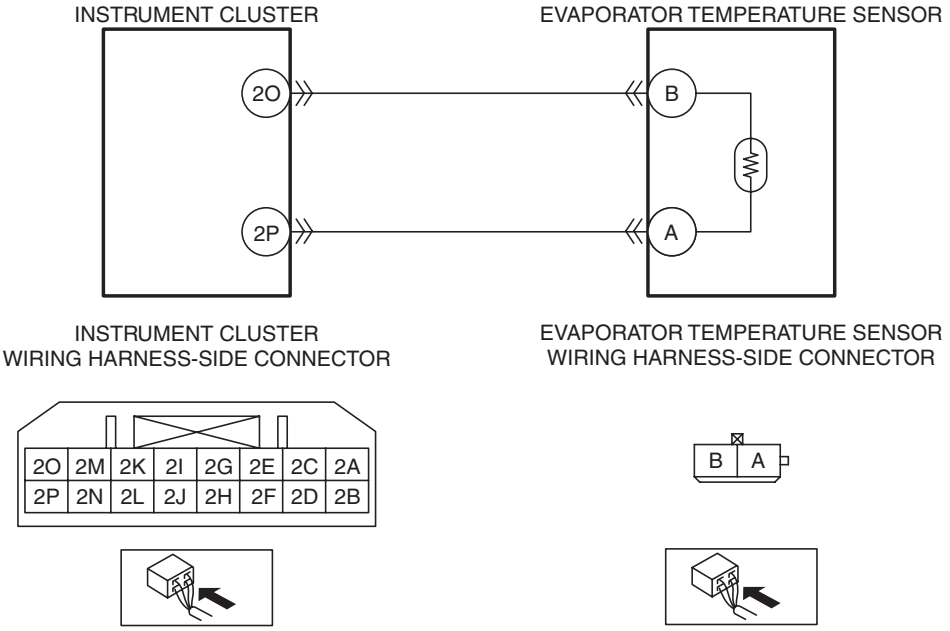

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT EVAPORATOR TEMPERATURE SENSOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the evaporator temperature sensor connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.
2	**INSPECT INSTRUMENT CLUSTER CONNECTOR CONDITION** • Disconnect the instrument cluster connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.

Step	Inspection		Action
3	**INSPECT EVAPORATOR TEMPERATURE SENSOR CIRCUIT FOR SHORT TO GROUND** • Verify that the evaporator temperature sensor and instrument cluster connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — Evaporator temperature sensor terminal B — Evaporator temperature sensor terminal A • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Instrument cluster terminal 2O—Evaporator temperature sensor terminal B • Instrument cluster terminal 2P—Evaporator temperature sensor terminal A **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step 6.
		No	Go to the next step.
4	**INSPECT EVAPORATOR TEMPERATURE SENSOR CIRCUIT FOR OPEN CIRCUIT** • Verify that the evaporator temperature sensor and instrument cluster connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — Instrument cluster terminal 2O—Evaporator temperature sensor terminal B — Instrument cluster terminal 2P—Evaporator temperature sensor terminal A • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Instrument cluster terminal 2O—Evaporator temperature sensor terminal B • Instrument cluster terminal 2P—Evaporator temperature sensor terminal A **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 6.
5	**INSPECT EVAPORATOR TEMPERATURE SENSOR** • Inspect the evaporator temperature sensor. (See EVAPORATOR TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].) • Is the evaporator temperature sensor normal?	Yes	Go to the next step.
		No	Replace the evaporator temperature sensor, then go to the next step. (See EVAPORATOR TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)
6	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the instrument cluster using the M-MDS. (See CLEARING DTC [INSTRUMENT CLUSTER].) • Switch the ignition ON (engine off or on) and wait for **1 s or more**. • Retrieve the instrument cluster DTCs using the M-MDS. (See DTC INSPECTION [INSTRUMENT CLUSTER].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the instrument cluster. (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
7	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [INSTRUMENT CLUSTER].)
		No	DTC troubleshooting completed.