
## DTC B1048:7B [BCM]

id0902f5067600

| Description | Brake fluid level sensor circuit malfunction |
|---|---|
| Detection condition | • BCM detected that the brake fluid level is less than MIN with the ignition switched ON (engine off or on). |
| Fail-safe | Not applicable |
| Possible cause | • Insufficient brake fluid level<br>• Brake fluid level sensor connector or terminal malfunction<br>• BCM connector or terminal malfunction<br>• Short to ground in wiring harness between brake fluid level sensor terminal B and BCM terminal 3R<br>• Brake fluid level sensor malfunction<br>• BCM malfunction |

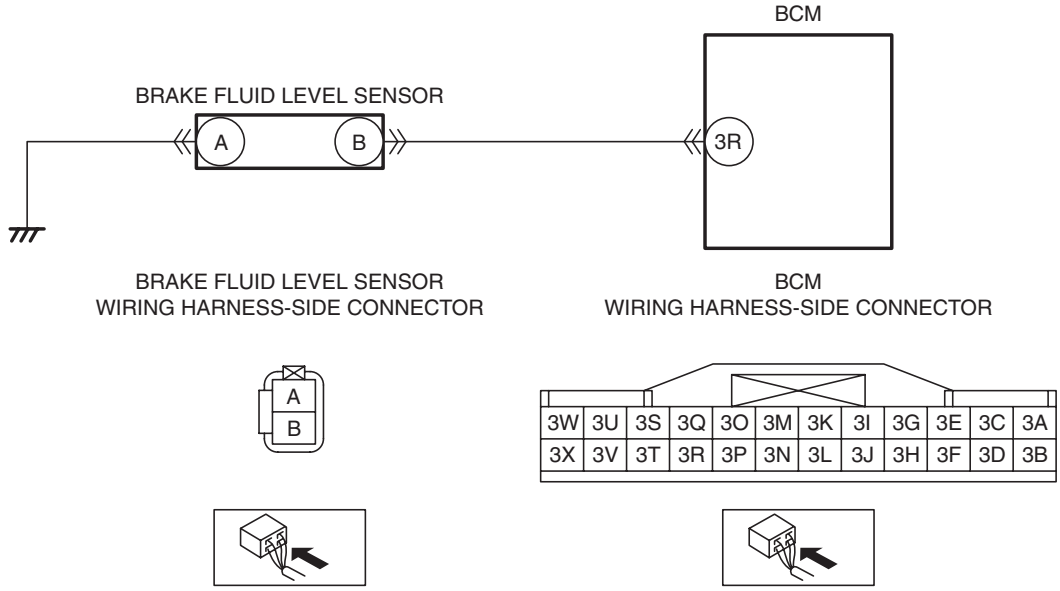


### Diagnostic Procedure

| Step | Inspection | | Action |
|---|---|---|---|
| 1 | **VERIFY BCM DTCs AGAIN**<br>• Clear the DTC for the BCM using the M-MDS. (See CLEARING DTC [BCM].)<br>• Retrieve the BCM DTCs using the M-MDS. (See DTC INSPECTION [BCM].)<br>• Is the same DTC displayed? | Yes | Go to the next step. |
| | | No | Go to Step 8. |
| 2 | **INSPECT BRAKE FLUID LEVEL**<br>• Inspect the brake fluid level. (See BRAKE FLUID INSPECTION.)<br>• Is the brake fluid level normal? | Yes | Go to the next step. |
| | | No | Add genuine brake fluid, then go to Step 7. |
| 3 | **INSPECT BRAKE FLUID LEVEL SENSOR CONNECTOR CONDITION**<br>• Switch the ignition off.<br>• Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)<br>• Disconnect the brake fluid level sensor connector.<br>• Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection.<br>• Is the connector normal? | Yes | Go to the next step. |
| | | No | Repair or replace the connector, then go to Step 7. |

| Step | Inspection | | Action |
|---|---|---|---|
| 4 | **INSPECT BCM CONNECTOR CONDITION**<br>• Disconnect the BCM connector.<br>• Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection.<br>• Is the connector normal? | Yes | Go to the next step. |
| | | No | Repair or replace the connector, then go to Step 7. |
| 5 | **INSPECT BRAKE FLUID LEVEL SENSOR SIGNAL CIRCUIT FOR SHORT TO GROUND**<br>• Verify that the brake fluid level sensor and BCM connectors are disconnected.<br>• Inspect for continuity between BCM terminal 3R (wiring harness-side) and body ground.<br>• Is there continuity? | Yes | Refer to the wiring diagram and verify whether or not there is a common connector between brake fluid level sensor terminal B and BCM terminal 3R.<br>**If there is a common connector:**<br>• Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground.<br>• Repair or replace the malfunctioning part.<br>**If there is no common connector:**<br>• Repair or replace the wiring harness which has a short to ground.<br>Go to Step 7. |
| | | No | Go to the next step. |
| 6 | **INSPECT BRAKE FLUID LEVEL SENSOR**<br>• Inspect the brake fluid level sensor. (See BRAKE FLUID LEVEL SENSOR INSPECTION.)<br>• Is the brake fluid level sensor normal? | Yes | Go to the next step. |
| | | No | Replace the brake fluid level sensor, then go to the next step.<br>(See MASTER CYLINDER REMOVAL/INSTALLATION [L.H.D.].)<br>(See MASTER CYLINDER REMOVAL/INSTALLATION [R.H.D.].) |
| 7 | **VERIFY THAT REPAIRS HAVE BEEN COMPLETED**<br>• Always reconnect all disconnected connectors.<br>• Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)<br>• Clear the DTC for the BCM using the M-MDS. (See CLEARING DTC [BCM].)<br>• Retrieve the BCM DTCs using the M-MDS. (See DTC INSPECTION [BCM].)<br>• Is the same DTC displayed? | Yes | Repeat the inspection from Step 1.<br>• If the malfunction recurs, replace the BCM. (See BODY CONTROL MODULE (BCM) REMOVAL/INSTALLATION.)<br>Go to the next step. |
| | | No | Go to the next step. |
| 8 | **VERIFY IF OTHER DTCs DISPLAYED**<br>• Are any other DTCs displayed? | Yes | Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [BCM].) |
| | | No | DTC troubleshooting completed. |