
DTC B1172:11 [BCM]


id0902f5068600

Description	Front door lock-link switch (driver's side) unlock circuit malfunction
Detection condition	• BCM detects a short to ground in the front door lock-link switch (driver's side) unlock circuit with the front door lock-link switch (driver's side) locked.
Fail-safe	Not applicable
Possible cause	• Front door latch and lock actuator (driver's side) connector or terminal malfunction • Front door lock-link switch (driver's side) malfunction • BCM connector or terminal malfunction • Short to ground in wiring harness between the following terminals: — Front door latch and lock actuator (LH) terminal B—BCM terminal 2B (L.H.D.) — Front door latch and lock actuator (RH) terminal L—BCM terminal 2B (R.H.D.) • BCM malfunction


L.H.D.

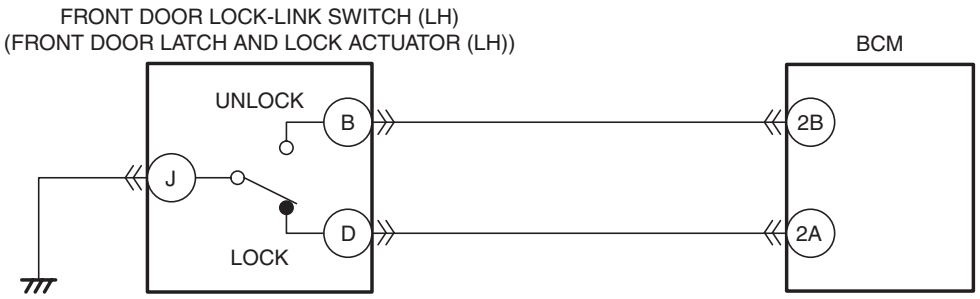


R.H.D.

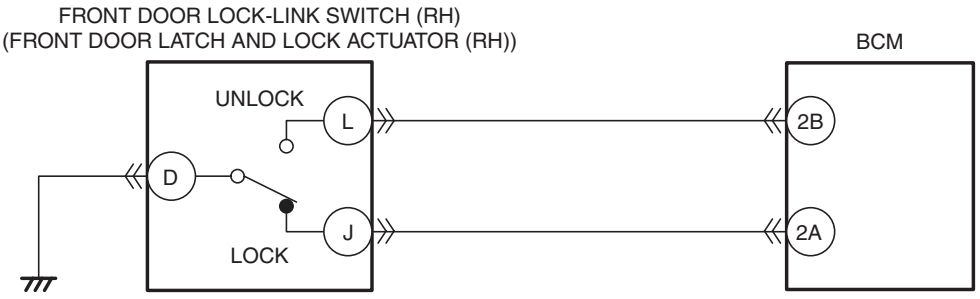

FRONT DOOR LATCH AND LOCK ACTUATOR (DRIVER'S SIDE) WIRING HARNESS-SIDE CONNECTOR

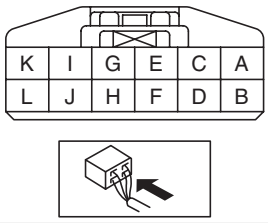

BCM WIRING HARNESS-SIDE CONNECTOR



Diagnostic Procedure

Step	Inspection		Action
1	**VERIFY BCM DTCs AGAIN** • Clear the DTC for the BCM using the M-MDS. (See CLEARING DTC [BCM].) • Lock/unlock all the doors by operating the driver's door lock knob. • Retrieve the BCM DTCs using the M-MDS with the front door lock-link switch (driver's side) locked. (See DTC INSPECTION [BCM].) • Is the same DTC displayed?	Yes	Go to the next step.
		No	Go to Step 8.

Step	Inspection		Action
2	**VERIFY OTHER BCM DTCs AGAIN** • Clear the DTC for the BCM using the M-MDS. (See CLEARING DTC [BCM].) • Retrieve the BCM DTCs using the M-MDS with the front door lock-link switch (driver's side) locked. (See DTC INSPECTION [BCM].) • Is DTC B126A:11 or B126A:13 displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [BCM].)
		No	Go to the next step.
3	**INSPECT FRONT DOOR LATCH AND LOCK ACTUATOR (DRIVER'S SIDE) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the front door latch and lock actuator (driver's side) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
4	**INSPECT FRONT DOOR LOCK-LINK SWITCH (DRIVER'S SIDE)** • Inspect the front door lock-link switch (driver's side). (See FRONT DOOR LOCK-LINK SWITCH INSPECTION.) • Is the front door lock-link switch (driver's side) normal?	Yes	Go to the next step.
		No	Replace the front door latch and lock actuator (driver's side), then go to Step 7. (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
5	**INSPECT BCM CONNECTOR CONDITION** • Disconnect the BCM connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 7.
6	**INSPECT FRONT DOOR LOCK-LINK SWITCH (DRIVER'S SIDE) UNLOCK CIRCUIT FOR SHORT TO GROUND** • Verify that the BCM and front door latch and lock actuator (driver's side) connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — Front door latch and lock actuator (LH) terminal B (L.H.D.) — Front door latch and lock actuator (RH) terminal L (R.H.D.) • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Front door latch and lock actuator (LH) terminal B—BCM terminal 2B (L.H.D.) • Front door latch and lock actuator (RH) terminal L—BCM terminal 2B (R.H.D.) **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to the next step.
		No	Go to the next step.

Step	Inspection		Action
7	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Conenct the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the BCM using the M-MDS. (See CLEARING DTC [BCM].) • Lock/unlock all the doors by operating the driver's door lock knob. • Retrieve the BCM DTCs using the M-MDS with the front door lock-link switch (driver's side) locked. (See DTC INSPECTION [BCM].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the BCM. (See BODY CONTROL MODULE (BCM) REMOVAL/ INSTALLATION.) Go to the next step.
		No	Go to the next step.
8	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [BCM].)
		No	DTC troubleshooting completed.