
DTC B11EA:11 [BCM]

id0902f5069500

Description	Rear door latch switch (RH) circuit malfunction
Detection condition	• BCM detects a short to ground in the rear door latch switch (RH) circuit with the rear door (RH) closed (rear door latch switch (RH) off).
Fail-safe	Not applicable
Possible cause	• Rear door latch and lock actuator (RH) connector or terminal malfunction • Rear door latch switch (RH) malfunction • BCM connector or terminal malfunction • Short to ground in wiring harness between rear door latch and lock actuator (RH) terminal B and BCM terminal 2F • BCM malfunction

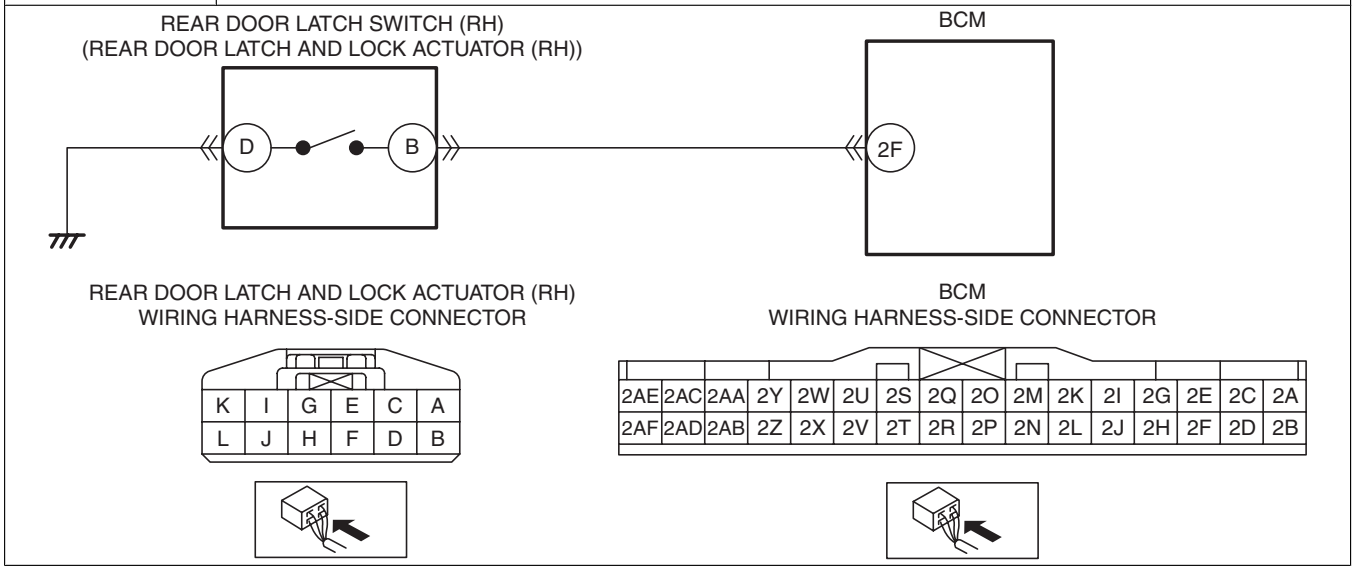

Diagnostic Procedure

Step	Inspection		Action
1	**VERIFY BCM DTCs AGAIN** • Clear the DTC for the BCM using the M-MDS. (See CLEARING DTC [BCM].) • Open/close the rear door (RH). • Retrieve the BCM DTCs using the M-MDS. (See DTC INSPECTION [BCM].) • Is the same DTC displayed?	Yes	Go to the next step.
		No	Go to Step 7.
2	**INSPECT REAR DOOR LATCH AND LOCK ACTUATOR (RH) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the rear door latch and lock actuator (RH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.
3	**INSPECT REAR DOOR LATCH SWITCH (RH)** • Inspect the rear door latch switch (RH). (See REAR DOOR LATCH SWITCH INSPECTION.) • Is the rear door latch switch (RH) normal?	Yes	Go to the next step.
		No	Replace the rear door latch and lock actuator (RH), then go to Step 6. (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

Step	Inspection		Action
4	**INSPECT BCM CONNECTOR CONDITION** • Disconnect the BCM connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.
5	**INSPECT REAR DOOR LATCH SWITCH (RH) CIRCUIT FOR SHORT TO GROUND** • Verify that the rear door latch and lock actuator (RH) and BCM connectors are disconnected. • Inspect for continuity between rear door latch and lock actuator (RH) terminal B (wiring harness-side) and body ground. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between rear door latch and lock actuator (RH) terminal B and BCM terminal 2F. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to the next step.
		No	Go to the next step.
6	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the BCM using the M-MDS. (See CLEARING DTC [BCM].) • Open/close the rear door (RH). • Retrieve the BCM DTCs using the M-MDS. (See DTC INSPECTION [BCM].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the BCM. (See BODY CONTROL MODULE (BCM) REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
7	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [BCM].)
		No	DTC troubleshooting completed.