
DTC B1219:11 [BCM]

id0902f5069600

Description	Trunk lid opener switch (interior) circuit malfunction
Detection condition	• BCM detects a short to ground in trunk lid opener switch (interior) circuit.
Fail-safe	Not applicable
Possible cause	• Trunk lid opener switch (interior) connector or terminal malfunction • Trunk lid opener switch (interior) malfunction • BCM connector or terminal malfunction • Short to ground in wiring harness between trunk lid opener switch (interior) terminal A and BCM terminal 3U • BCM malfunction

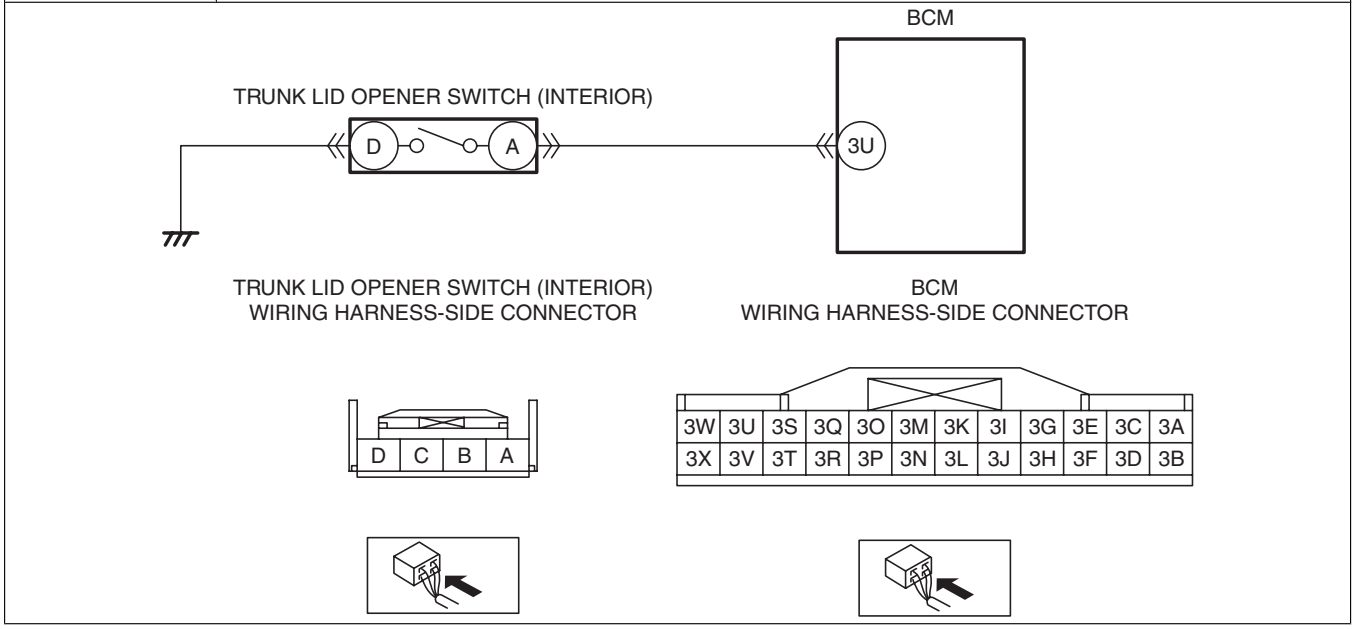

Diagnostic Procedure

Step	Inspection		Action
1	**VERIFY BCM DTCs AGAIN** • Clear the DTC for the BCM using the M-MDS. (See CLEARING DTC [BCM].) • Retrieve the BCM DTCs using the M-MDS. (See DTC INSPECTION [BCM].) • Is the same DTC displayed?	Yes	Go to the next step.
		No	Go to Step 7.
2	**INSPECT TRUNK LID OPENER SWITCH (INTERIOR) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the trunk lid opener switch (interior) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.
3	**INSPECT TRUNK LID OPENER SWITCH (INTERIOR)** • Inspect the trunk lid opener switch (interior). (See TRUNK LID OPENER SWITCH INSPECTION.) • Is the trunk lid opener switch (interior) normal?	Yes	Go to the next step.
		No	Replace the trunk lid opener switch (interior), then go to Step 6. (See TRUNK LID OPENER SWITCH REMOVAL/ INSTALLATION.)

Step	Inspection		Action
4	**INSPECT BCM CONNECTOR CONDITION** • Disconnect the BCM connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 6.
5	**INSPECT TRUNK LID OPENER SWITCH (INTERIOR) CIRCUIT FOR SHORT TO GROUND** • Verify that the trunk lid opener switch (interior) and BCM connectors are disconnected. • Inspect for continuity between trunk lid opener switch (interior) terminal A (wiring harness-side) and body ground. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between trunk lid opener switch (interior) terminal A and BCM terminal 3U. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to the next step.
		No	Go to the next step.
6	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the BCM using the M-MDS. (See CLEARING DTC [BCM].) • Retrieve the BCM DTCs using the M-MDS. (See DTC INSPECTION [BCM].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the BCM. (See BODY CONTROL MODULE (BCM) REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
7	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [BCM].)
		No	DTC troubleshooting completed.