
DTC: 26:Er82 [AUDIO]

id0902f6037000

Description	Microphone circuit malfunction
Detection condition	Short to power supply detected in microphone input circuit.
Fail-safe	Not applicable
Possible cause	• Microphone connector or terminal malfunction • Bluetooth® unit connector or terminal malfunction • Short to power supply in wiring harness between Bluetooth® unit terminal A and microphone terminal A • Microphone malfunction • Bluetooth® unit malfunction

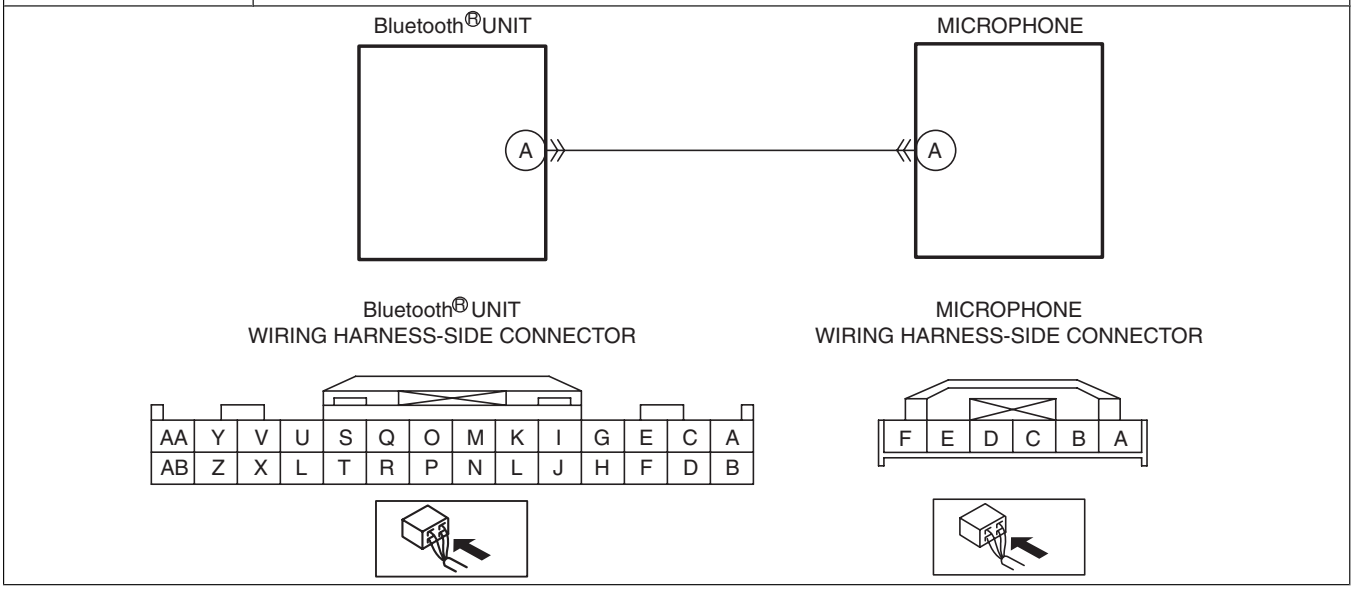

Diagnostic Procedure

Step	Inspection		Action
1	**INSPECT MICROPHONE CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Disconnect the microphone connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 5.
2	**INSPECT Bluetooth® UNIT CONNECTOR CONDITION** • Disconnect the Bluetooth® unit connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal?	Yes	Go to the next step.
		No	Repair or replace the connector, then go to Step 5.

Step	Inspection		Action
3	**INSPECT MICROPHONE INPUT CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the microphone and Bluetooth® unit connectors are disconnected. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Switch the ignition ON (engine off or on). • Measure the voltage at the microphone terminal A (wiring harness-side). • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between Bluetooth® unit terminal A and microphone terminal A. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to Step 5.
4	**VERIFY IF MALFUNCTIONING LOCATION IS MICROPHONE DEPENDING ON REPEATABILITY** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the Bluetooth® unit. (See CLEARING DTC [AUDIO].) • Perform the Bluetooth® unit DTC inspection. (See DTC INSPECTION [AUDIO].) • Is the same DTC present?	Yes	Replace the microphone, then go to the next step. (See MICROPHONE REMOVAL/INSTALLATION.)
		No	Go to Step 6.
5	**VERIFY THAT REPAIRS HAVE BEEN COMPLETED** • Always reconnect all disconnected connectors. • Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.) • Clear the DTC for the Bluetooth® unit. (See CLEARING DTC [AUDIO].) • Perform the DTC inspection for the Bluetooth® unit. (See DTC INSPECTION [AUDIO].) • Is the same DTC displayed?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the Bluetooth® unit. (See Bluetooth® UNIT REMOVAL/INSTALLATION.) Go to the next step.
		No	Go to the next step.
6	**VERIFY IF OTHER DTCs DISPLAYED** • Are any other DTCs displayed?	Yes	Repair or replace the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [AUDIO].)
		No	DTC troubleshooting completed.